

Digital Rear-View Mirror Users Guide

Initial adjustment



Push lever forward and adjust mirror so that vision out the rear window is normal.

Activate display



Pull lever rearward and vision from the camera will be active.

Settings



Push to activate setting options. Repeat push to select desired function.

Display brightness



Increase or decrease display brightness as desired.

Image position



Move image up or down as desired.

A version with Homelink exists for some markets, it has buttons on the left side of the mirror. See owners manual for Homelink operation.