

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

|                       |                |                  |
|-----------------------|----------------|------------------|
| <b>Instruction No</b> | <b>Version</b> | <b>Part. No.</b> |
| 30756763              | 1.1            | 30756761         |

## End pipes, double


### Equipment



A0000162



IMG-256903

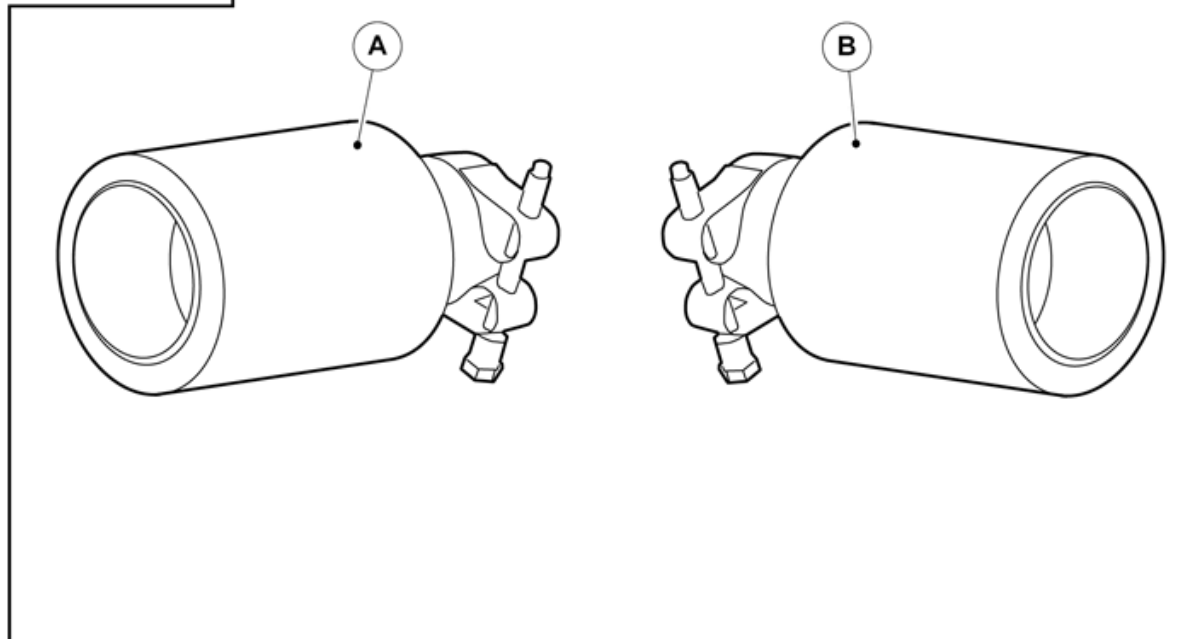

IMG-332029

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## INTRODUCTION

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

1A

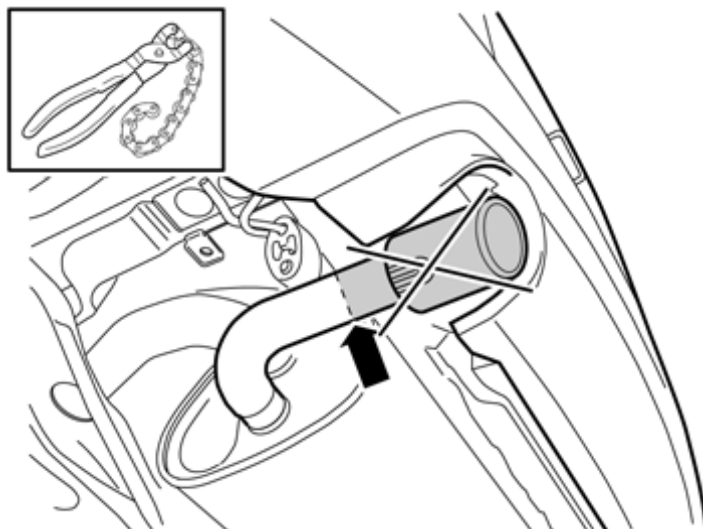


IMG-332034

Cut off the pipe just in front of the joint using a pipe cutter.

Discard the cut off section.

1B

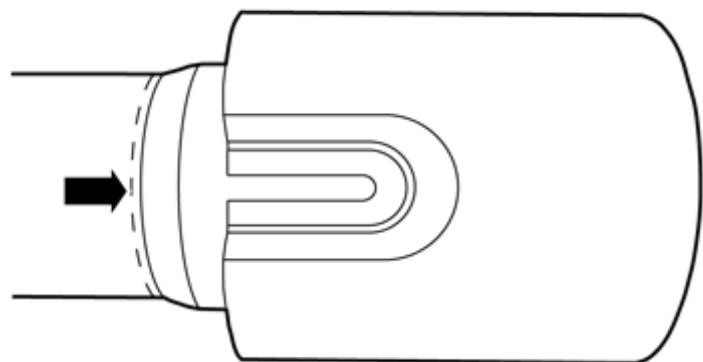


IMG-332035

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


2

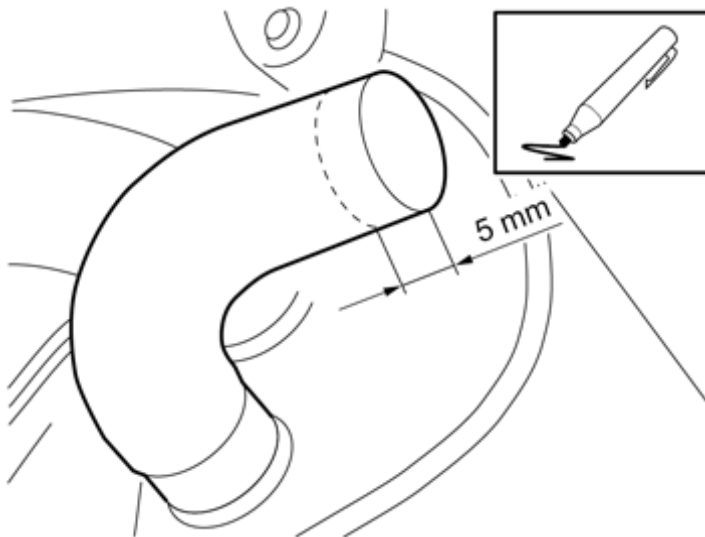

IMG-332036

Mark 5 mm in on the cut pipe using a pen.

3

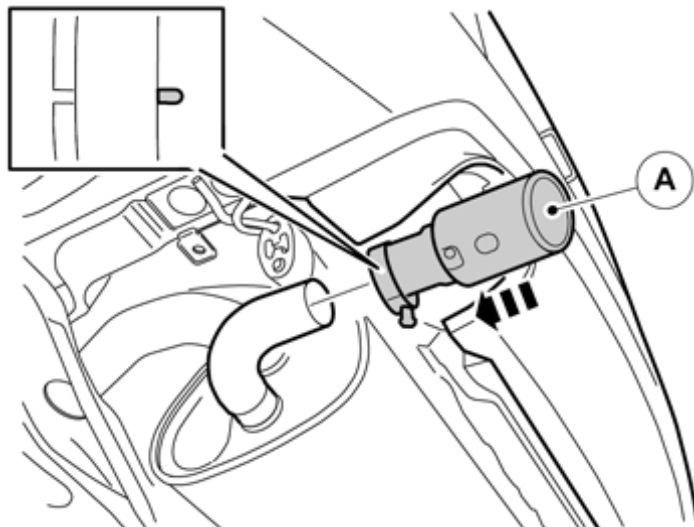


IMG-332037

Install the end pipe. Slide it on so that the end of the slit covers the marking.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4A

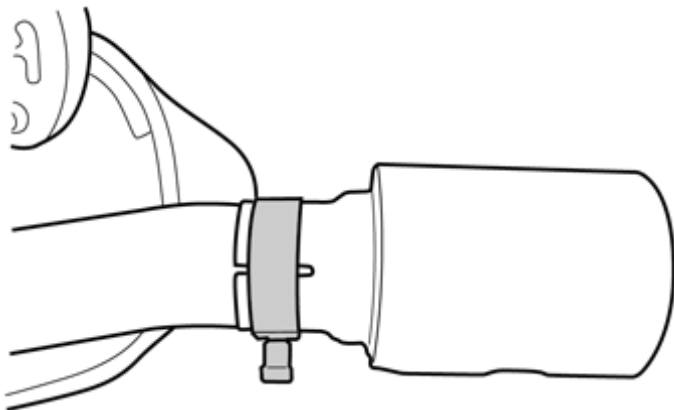

## Illustrations A and B


Position the clamp as illustrated.

Tighten the clamp slightly. The end pipe must be able to be turned.

Repeat steps 1-4 on the other side.

IMG-332043

4B

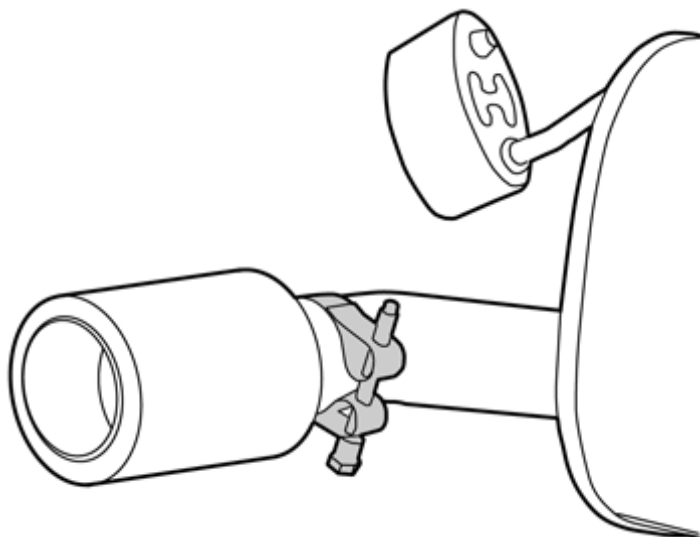


IMG-332044

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

5A

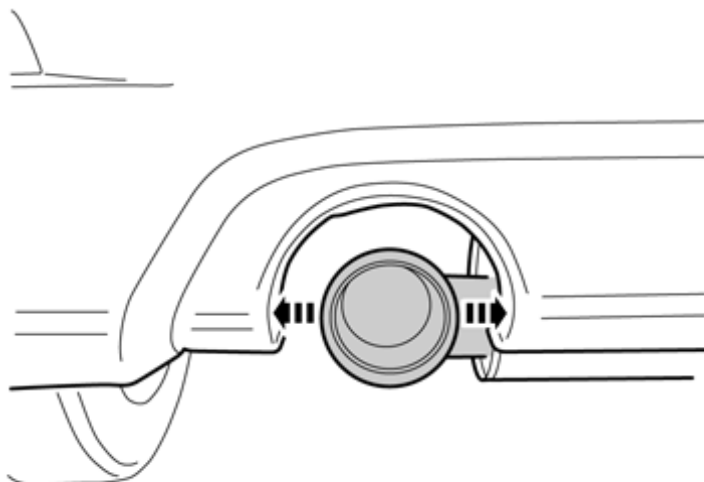

## Illustrations A and B

Check that the lateral distance is as large.

If necessary, the distance can be adjusted by slackening off the screws for the rear exhaust mountings and moving them (image B).


The tail pipes can also be turned to obtain the best position.

Tighten the end pipe clamps.

Torque tighten the screws in the exhaust mountings if slackened off. Tighten to 25 Nm (18.5 lbf.ft.).

IMG-256948

5B

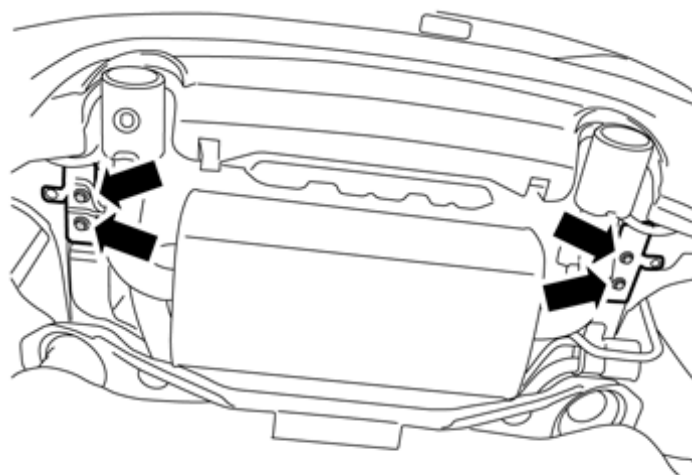

IMG-259723