Volvo Car Corporation Gothenburg, Sweden


Instruction No 31339317

Version 1.0


Part. No. 31339337

# End pipes, double



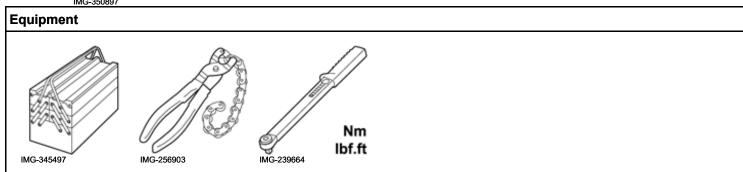

Volvo Car Corporation Gothenburg, Sweden

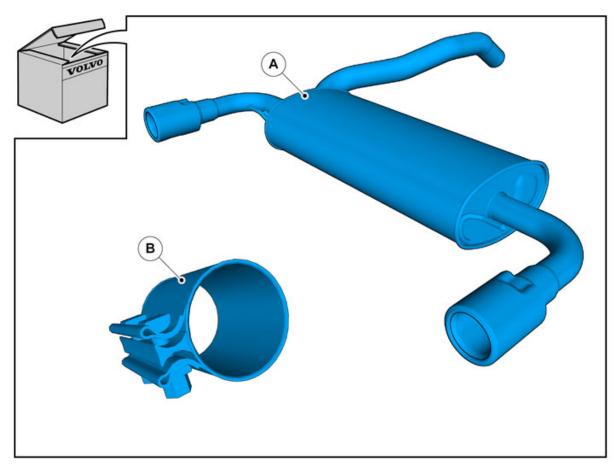

Volvo Car Corporation Gothenburg, Sweden

#### Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.


In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

#### Removal



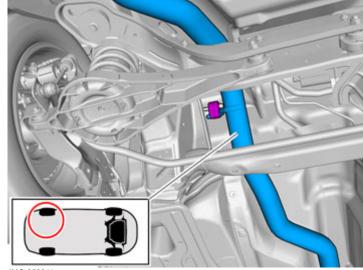


IMG-350911

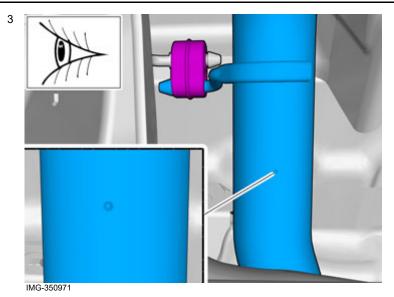


© Volvo Car Corporation


Volvo Car Corporation Gothenburg, Sweden

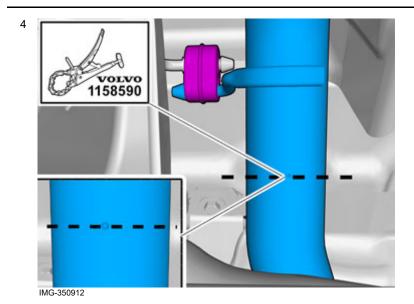

Use: Pipe cutter

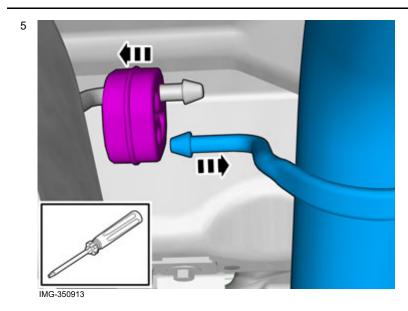


Volvo Car Corporation Gothenburg, Sweden

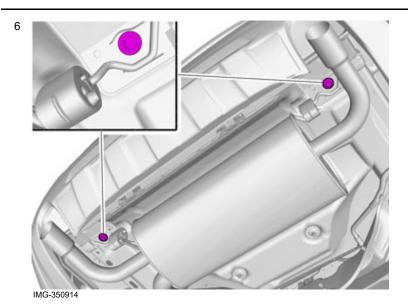


Remove the screws.



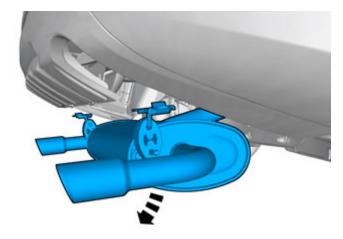


Volvo Car Corporation Gothenburg, Sweden

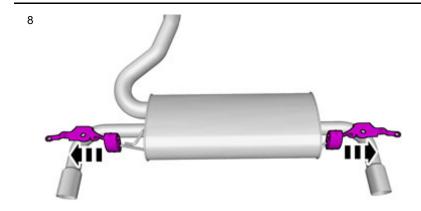


IMG-350916

#### Accessory installation


9

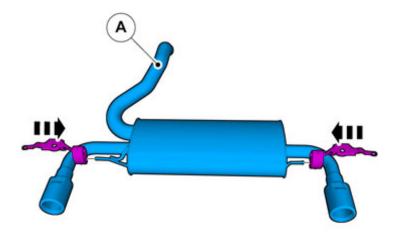


Volvo Car Corporation Gothenburg, Sweden

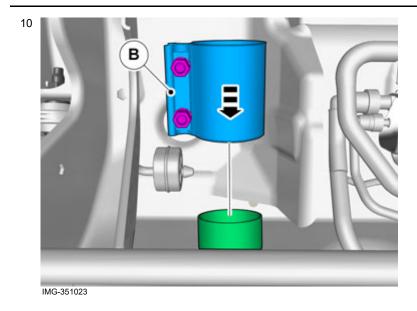


11

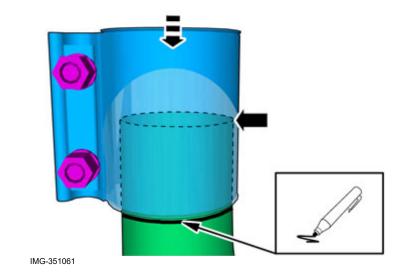


Volvo Car Corporation Gothenburg, Sweden

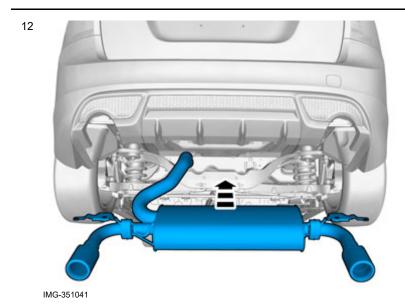

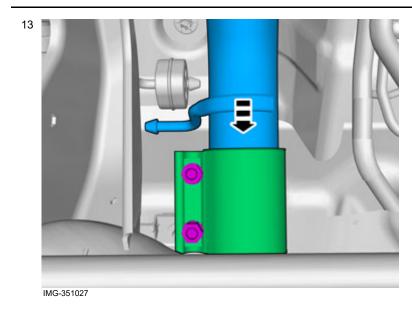


© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

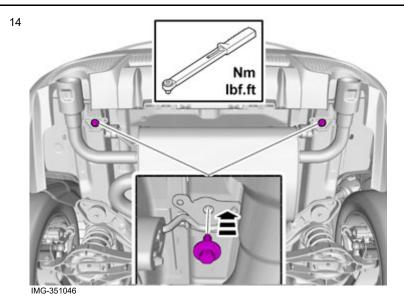


Install the screws.

Tightening torque: M8, 24 Nm

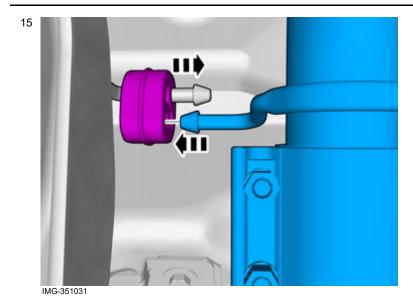

© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

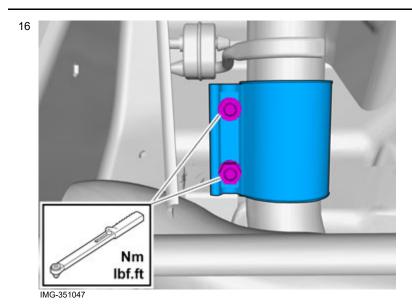

Tightening torque: M10, 50 Nm