
Volvo Car Corporation Gothenburg, Sweden


Instruction No 30756328 1.1

Version


Part. No. 30756325

Mudflaps

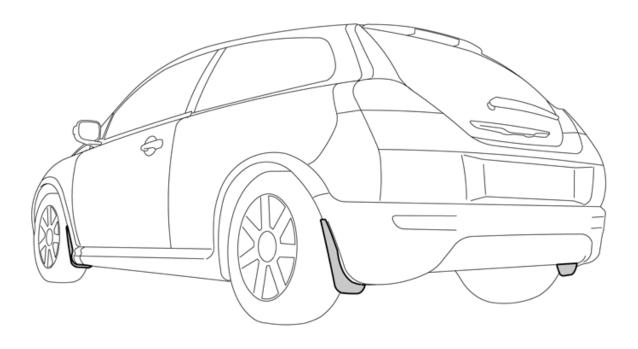

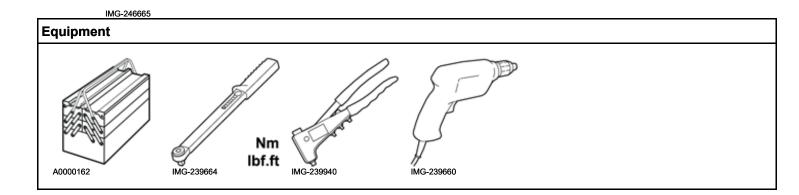


Volvo Car Corporation Gothenburg, Sweden

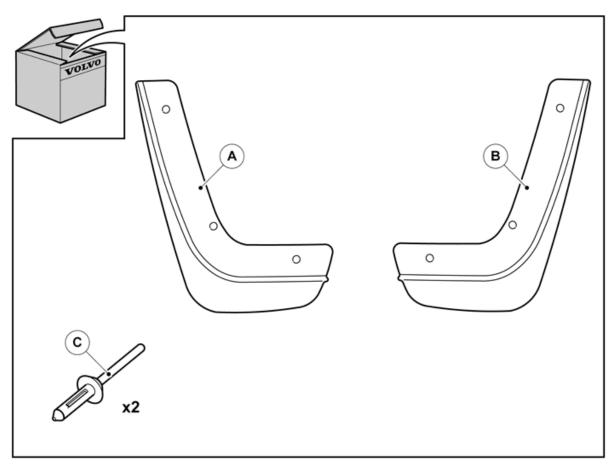

IMG-332919

Volvo Car Corporation Gothenburg, Sweden

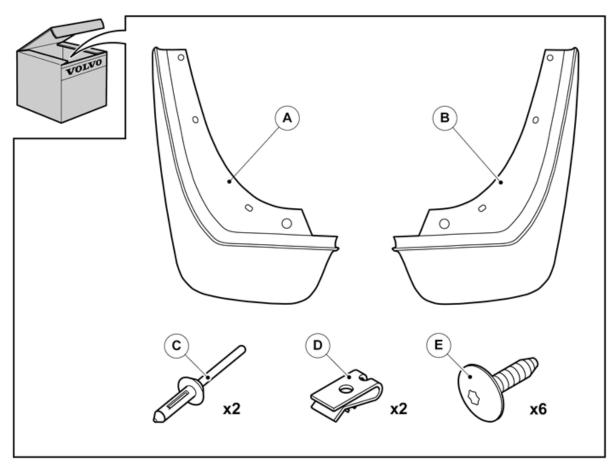

IMG-332922

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION


Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

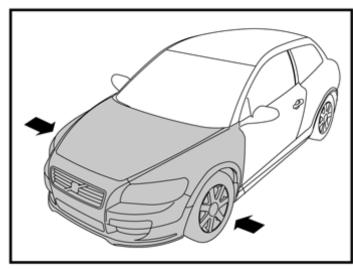

IMG-246667


2

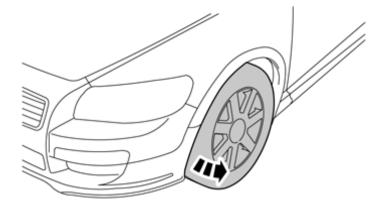


Turn the wheel.

IMG-247343


Volvo Car Corporation Gothenburg, Sweden

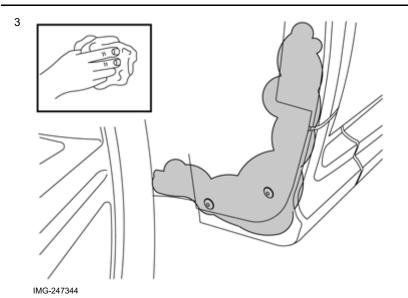


Clean the area where the mudflap is to be positioned.

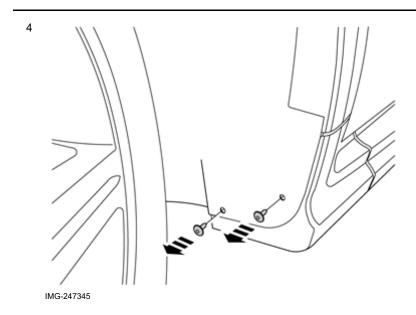


Volvo Car Corporation Gothenburg, Sweden

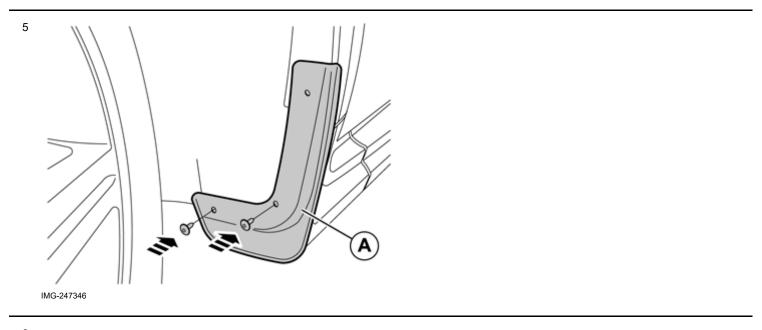


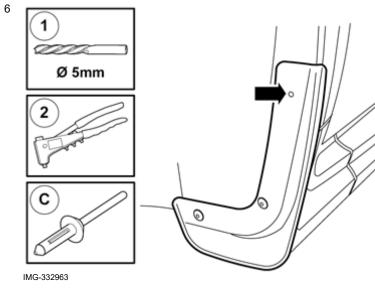

Volvo Car Corporation Gothenburg, Sweden

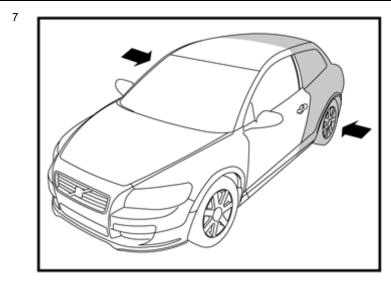

IMG-247348

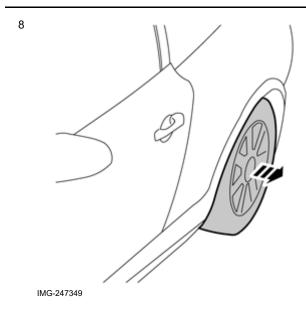


Volvo Car Corporation Gothenburg, Sweden

MG-332964


Note!

These will not be reused.

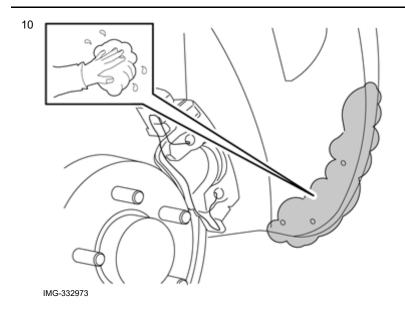


Clean the area where the mudflap is to be positioned.

Volvo Car Corporation Gothenburg, Sweden

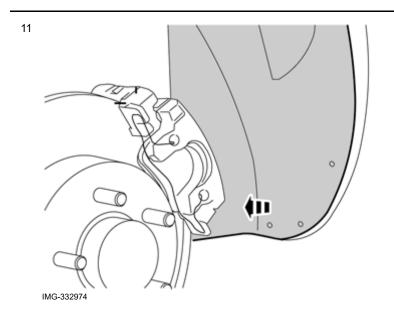


Fold the wing liner out of the way.

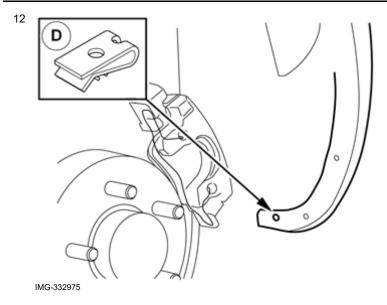


Install the clip.


Volvo Car Corporation Gothenburg, Sweden

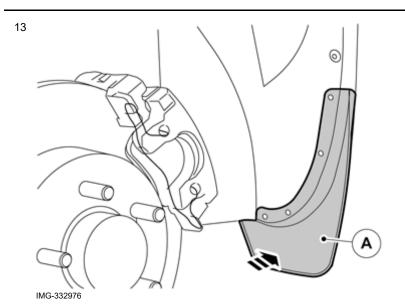


Fold the inner wing back and install the mudflap.

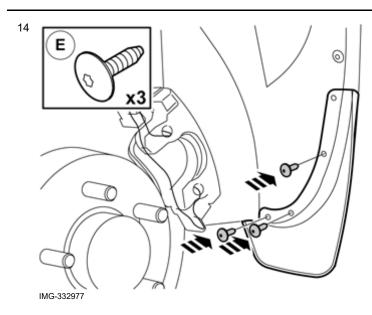

Volvo Car Corporation Gothenburg, Sweden

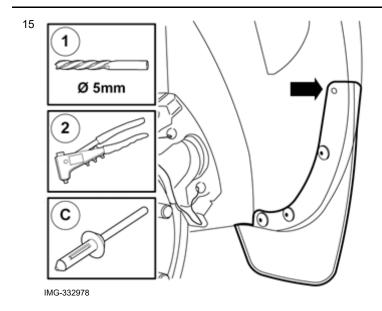

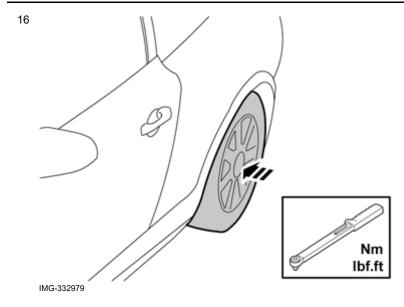

Tightening torque:

Step 1: Wheel to wheel hub, 20 Nm.

Step 2: Wheel to wheel hub, 110 Nm.