


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 31256392    **Version** 1.2    **Part. No.** 31256390, 30774754, 30774753

## Gearshift knob, automatic

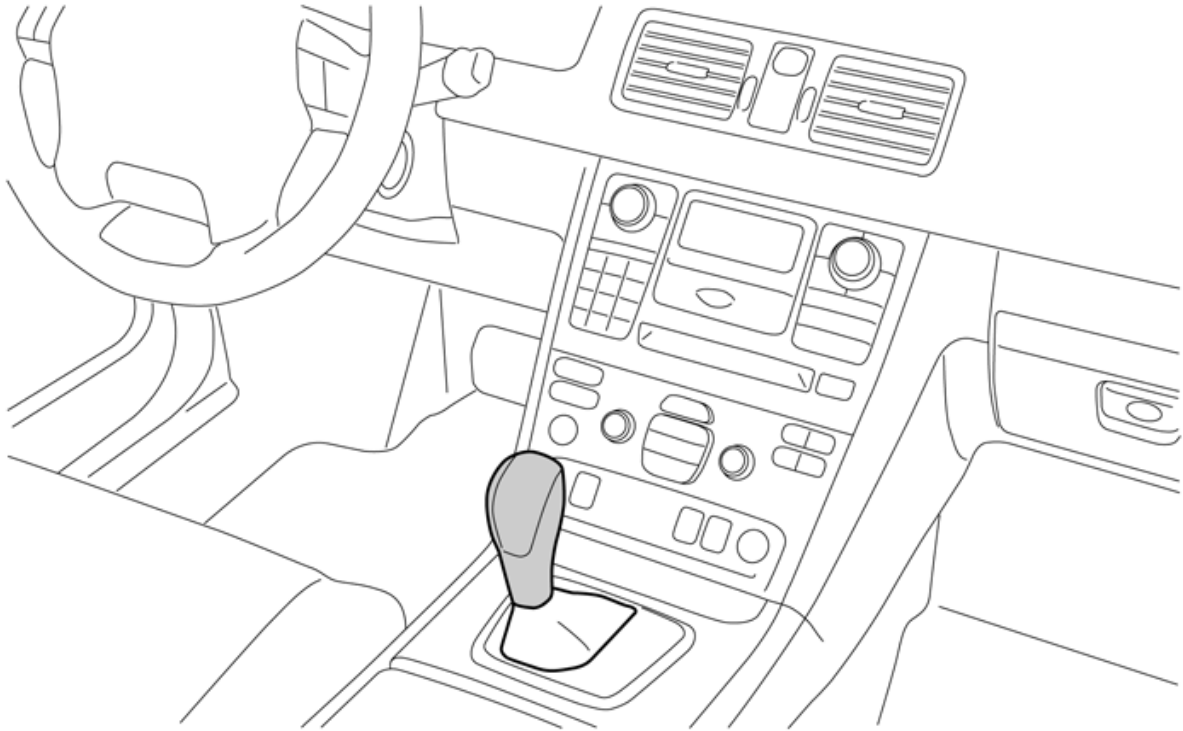

IMG-253863


### Equipment

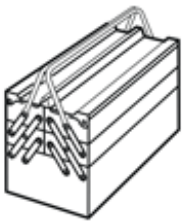

A0000162

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

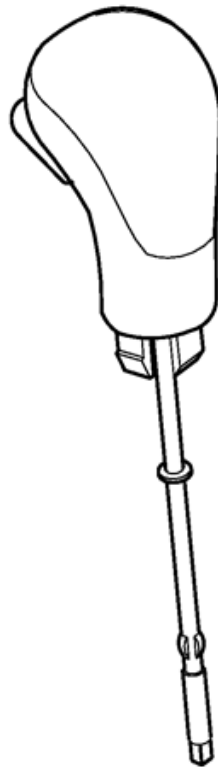

IMG-253864

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:	Issue:	Kit no:
Comments:.....		
.....		
.....		
.....		

From:	
Address:	
Telephone:	
Telefax:	

IMG-213320

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## INTRODUCTION

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.


1

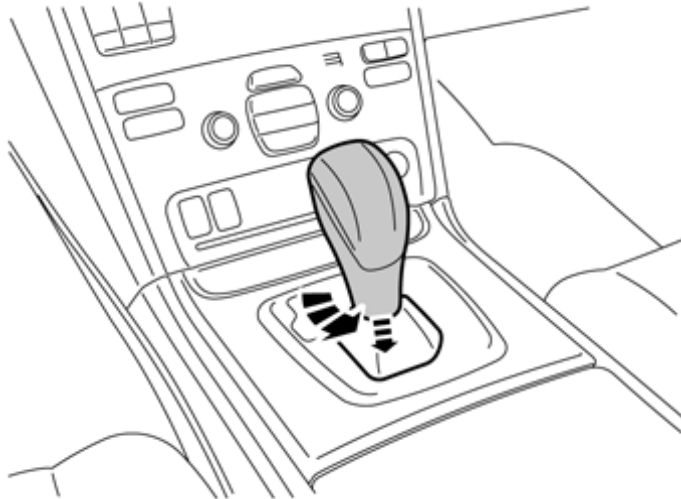

IMG-253873

Loosen the gaiter from the gear lever knob by turning the lock ring on the inside 1/4-turn, and pull down the gaiter.

2

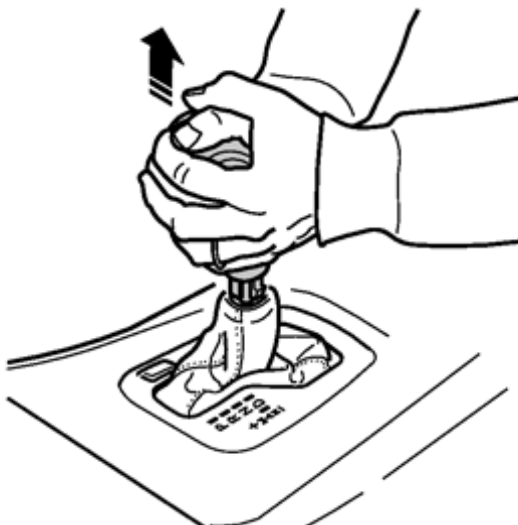

IMG-253874

Pull loose the gear lever knob by forcefully pulling it straight upward.


**Note!**

A lot of force is required to pull it loose.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

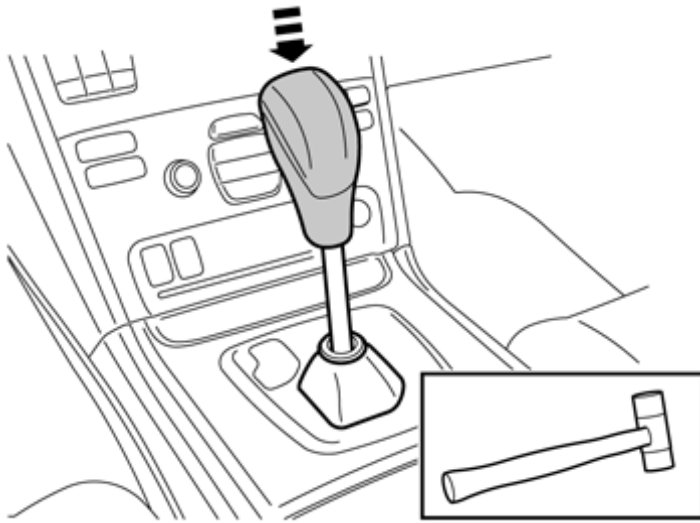


IMG-253875

Place the new knob in the correct position on the gear lever.  
Drive down the knob in position.

### Hint

Use, e.g., a plastic hammer and a spacer between the knob and hammer to avoid damaging the gear lever knob.

4

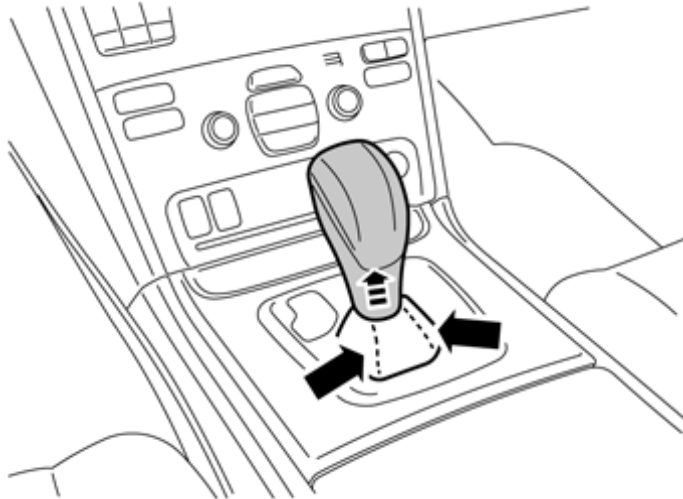

IMG-253876

Check that the gaiter's seams are straight. Then fix the lock ring by pulling it down and the gaiter straight up against the knob, and secure it by pressing it into place.

Check that the gear lever knob is fastened securely by pulling on it. Also check that the lockout function works in all its positions.