Volvo Car Corporation Gothenburg, Sweden

Instruction No 31339982


Version 1.0 Part. No. 31339983

Decor trim, air intake, chrome



IMG-359456

Materials	
Designation	Part number
soap solution	
Isopropanol	1161721

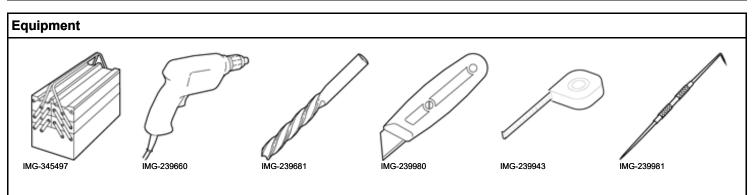


© Volvo Car Corporation

Decor trim, air intake, chrome- 31339982 - V1.0

Volvo Car Corporation Gothenburg, Sweden



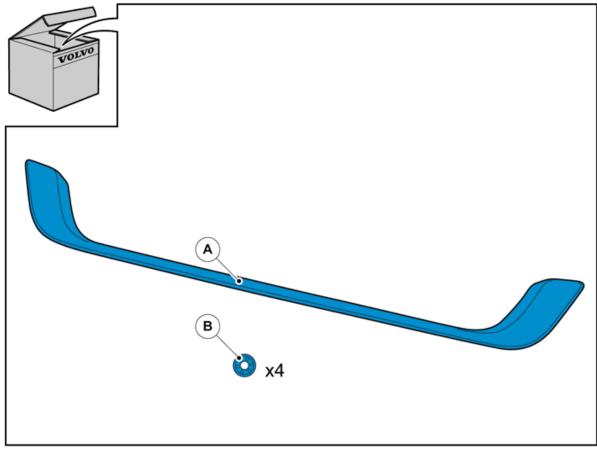

Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Conditions

2



Clean the surface.

Use:, soap solution


Wipe dry.

IMG-359602

Accessory installation


Volvo Car Corporation Gothenburg, Sweden

3

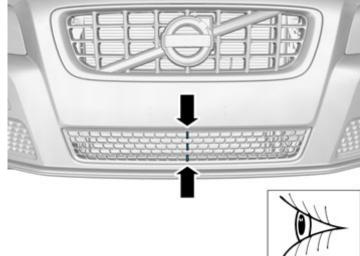

IMG-359466


4

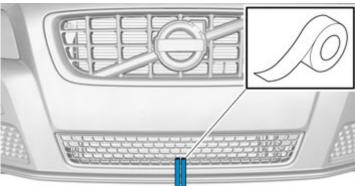

Use suitable tape to indicate the center.

Volvo Car Corporation Gothenburg, Sweden

5

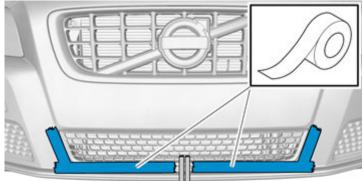


Caution!
Use suitable tape to protect the components.

IMG-359522

Removal



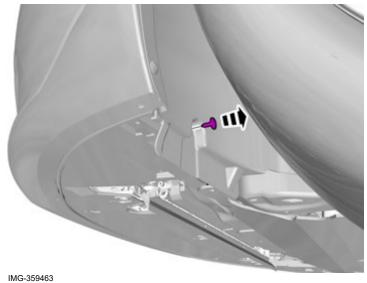

Remove the screw.


Repeat on the other side.

Volvo Car Corporation Gothenburg, Sweden

IMG-359516

7 (x8)


Remove the screws.

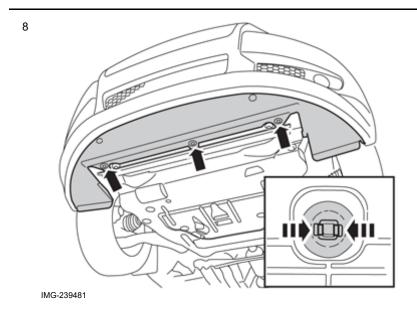

Unhook the clip(s).

Volvo Car Corporation Gothenburg, Sweden

9

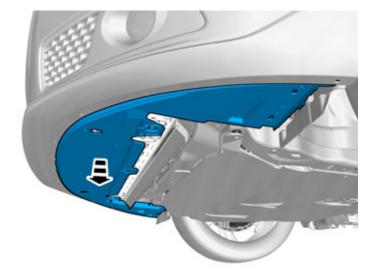


Remove the panel.

IMG-359518

Vehicles with parking assistance

10

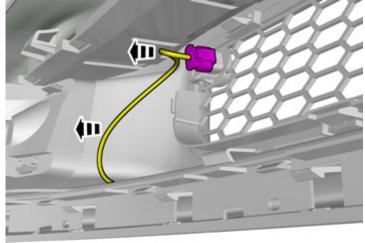


Loosen the wiring harness or move it to the side.

Repeat on the other side.


IMG-359635

Accessory installation

Volvo Car Corporation Gothenburg, Sweden

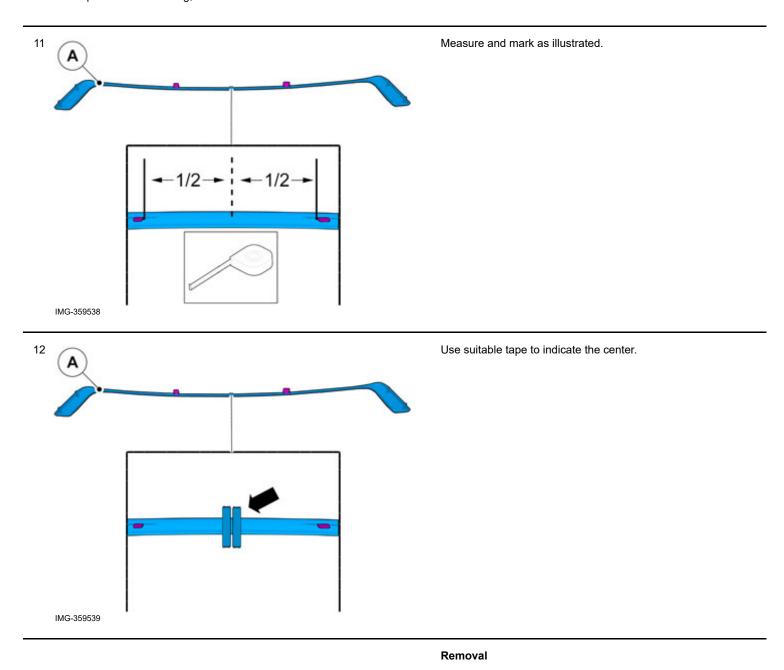


Volvo Car Corporation Gothenburg, Sweden

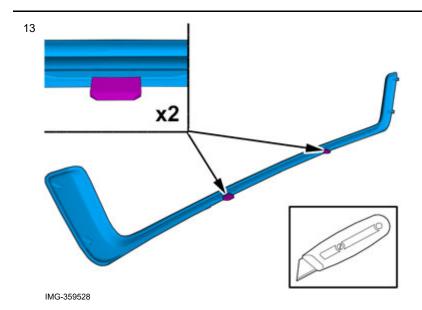


Caution!
Cut carefully to avoid unintentional damage or personal injury.

Installation

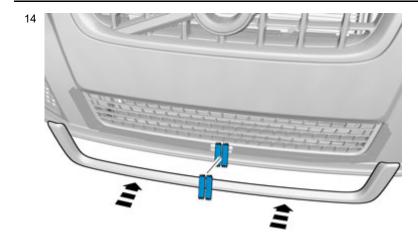

Volvo Car Corporation Gothenburg, Sweden

15

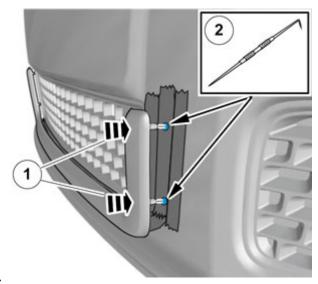


Request the aid of a colleague for this procedure.

Hold the component in the position shown.

Scribe/mark up

Repeat on the other side.

IMG-359587

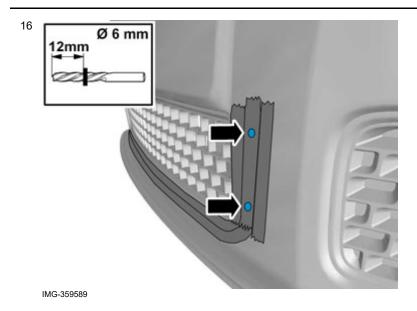

Caution!

Make sure not to damage wiring, hoses or other components.


Drill the holes.

Remove the swarf.

Removal

Volvo Car Corporation Gothenburg, Sweden


17

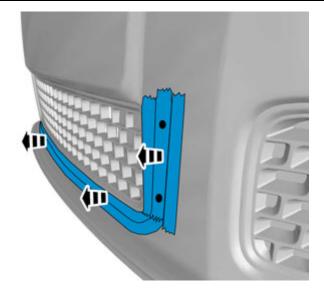

Remove the tape.

IMG-359601

18

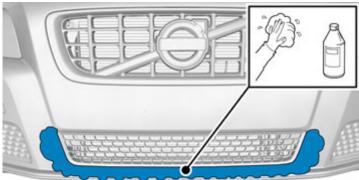

Clean the surface.


Use: 1161721, Isopropanol

Volvo Car Corporation Gothenburg, Sweden

19

Remove the protective film.


Repeat on the other side.

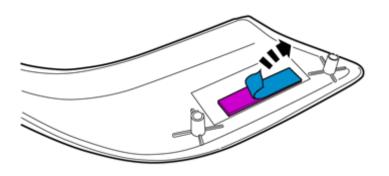

IMG-337559

20


Partly fold back the transparent foil to expose the sticky surface.

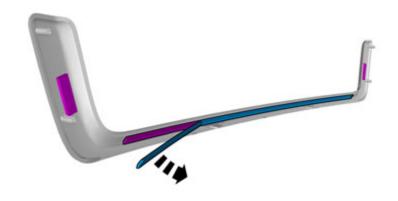

IMG-359621


Accessory installation

Volvo Car Corporation Gothenburg, Sweden

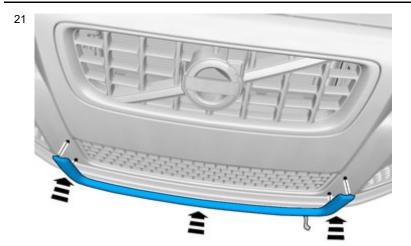

Note!
Make sure that the mating faces are at a minimum temperature of 20°C.

IMG-359607

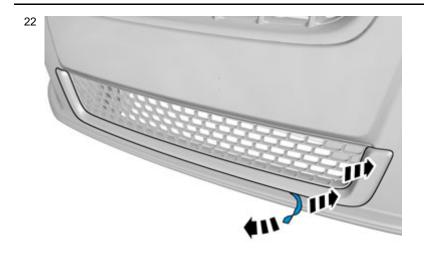


Caution!

Make sure that equal pressure is applied to the full length of the component.

Remove the protective film.

After installation, the car must not be washed for 48 hours

Volvo Car Corporation Gothenburg, Sweden

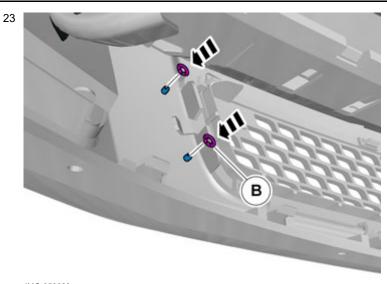

Install the clips as illustrated.

IMG-359628

24

Reinstall the removed parts in reverse order.