





# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

<b>Instruction No</b>	<b>Version</b>	<b>Part. No.</b>
31338932	1.1	31373768, 31408989, 31373462, 31373492, 31373493, 31373494, 31338931, 31338930, 31338929

## Side scuff plate

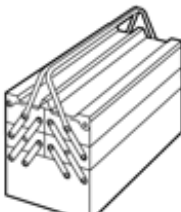Materials	
Designation	Part number
Isopropanol	1161721

Equipment			
			
IMG-345497	IMG-244945	IMG-239940	IMG-239660

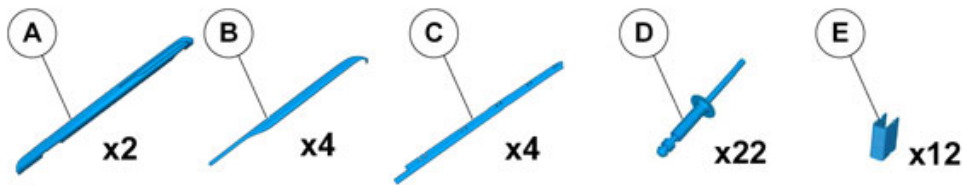

IMG-377501

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## Information

- 1
- Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.


## Conditions

- 2
- When installing, the car must retain a temperature of 20 degrees C.

After installation, the car must not be washed for 48 hours

After installation, the car must not be driven for 2 hours

## Color symbols

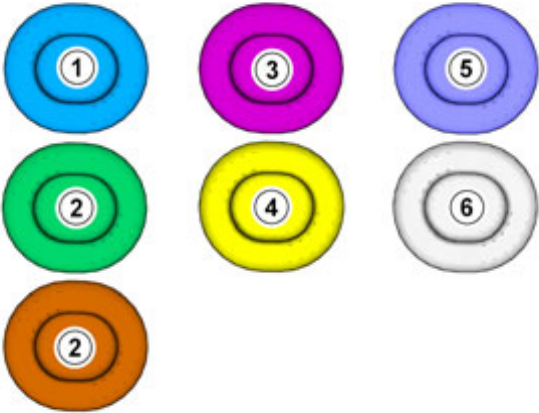- 3
- 
- Note!**  
This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

  - 1. Used for focused component, the component with which you will do something.
  - 2. Used as extra colors when you need to show or differentiate additional parts.
  - 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
  - 4. Used when the component is not fully removed from the vehicle but only hung to the side.
  - 5. Used for standard tools and special tools.
  - 6. Used as background color for vehicle components.


IMG-363036

## Applies to unpainted component

# Installation instructions, accessories



Volvo Car Corporation Gothenburg, Sweden

4

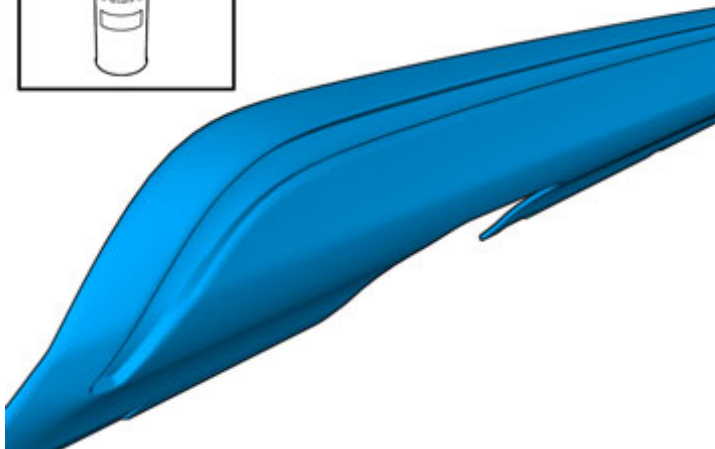

IMG-377438

5

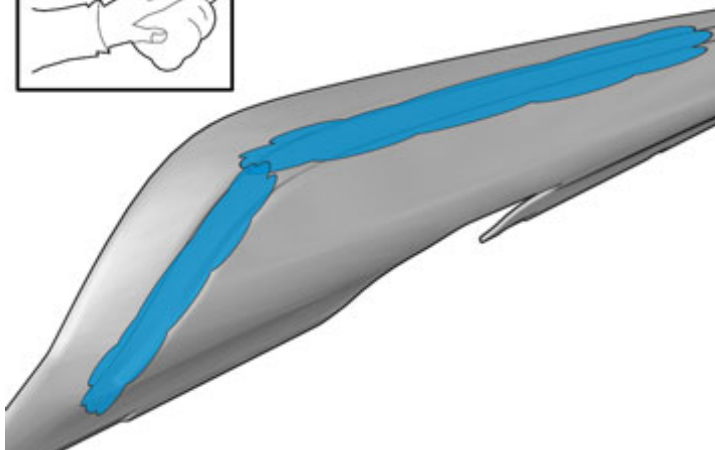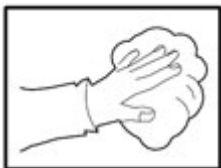

IMG-377442

## Caution!

First the paint must dry after painting.

Clean the surface.


**Use:** 1161721, Isopropanol

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6


Remove the protective film.

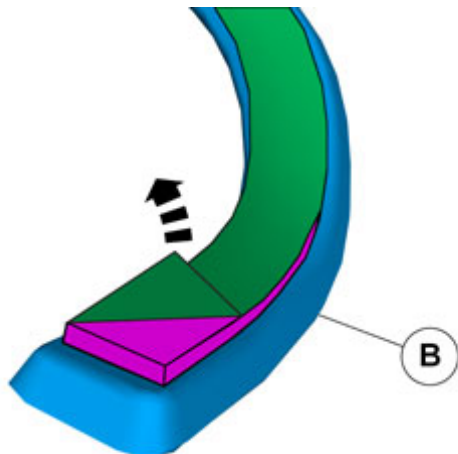

IMG-377445

7

Install component that comes with the accessory kit.

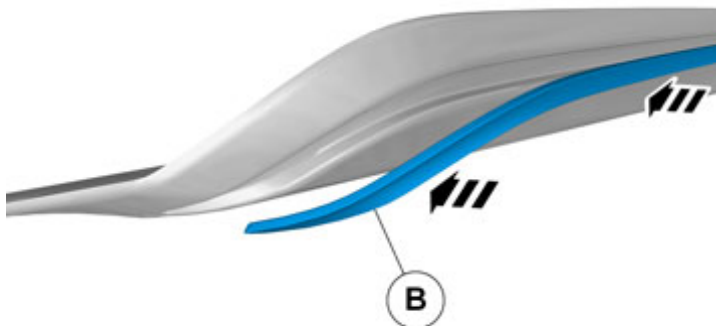

IMG-377446

**All vehicles**

**Accessory installation**


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

8

Clean the surface.


Allow to dry.

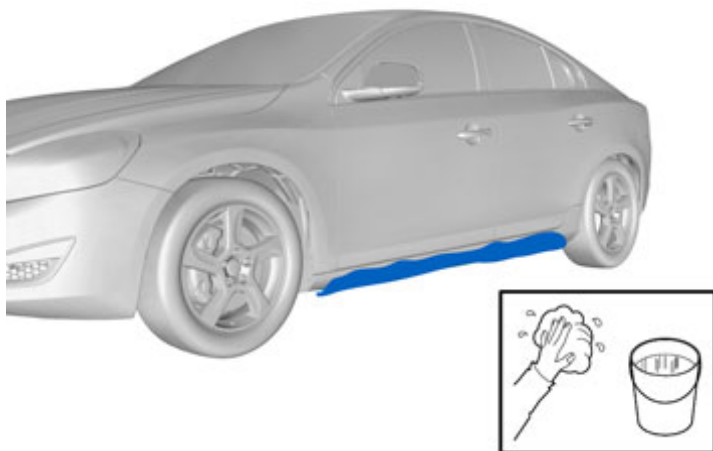

IMG-340411

9

Remove the protective film.

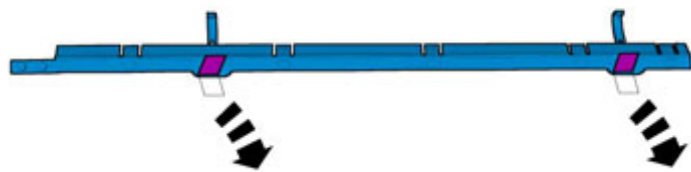


IMG-355879

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


10

Remove the protective film.

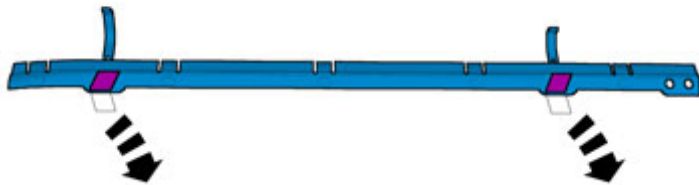

IMG-355880

11

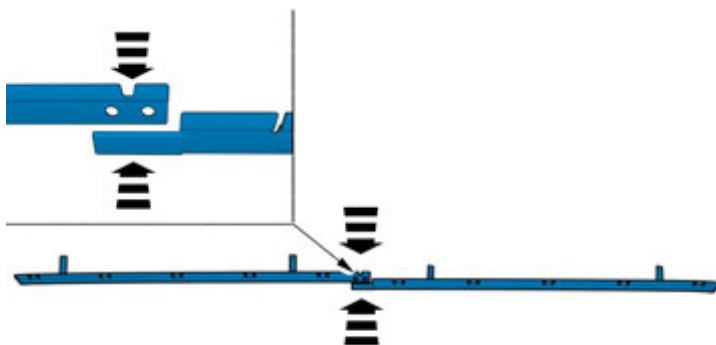


IMG-374598

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

12

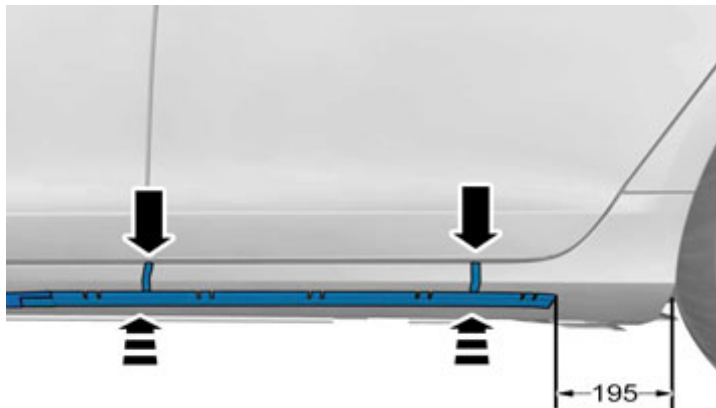

IMG-374452

13

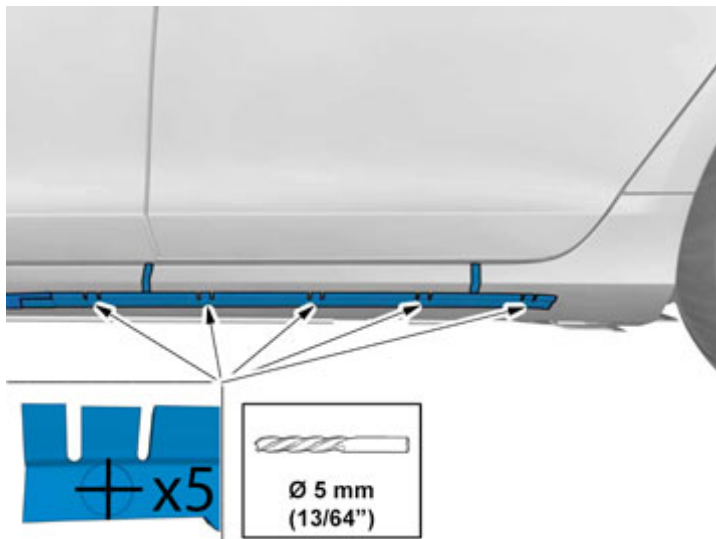


Drill the holes.

IMG-374455

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

14

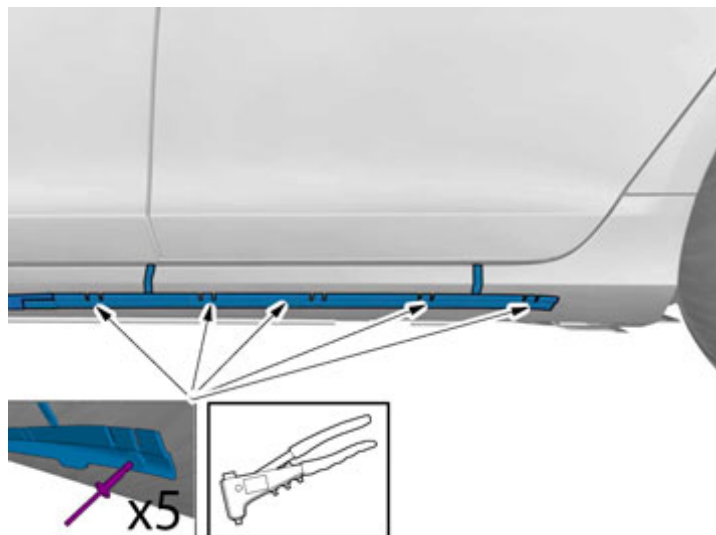

IMG-374453

15

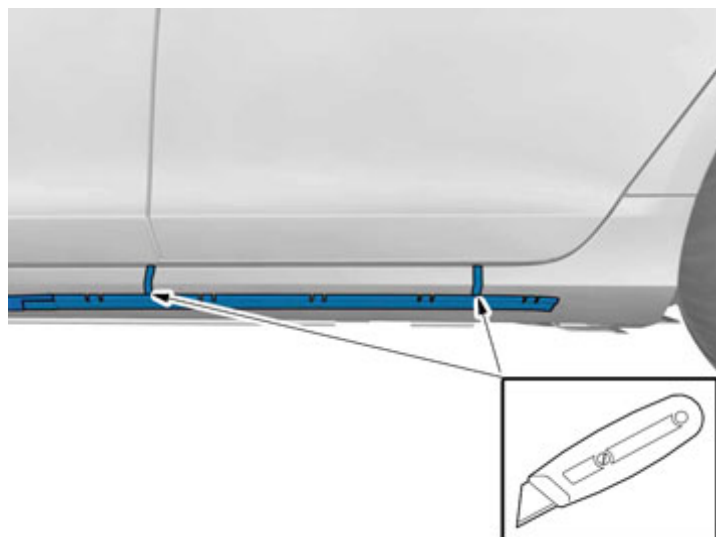


IMG-374454



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


16

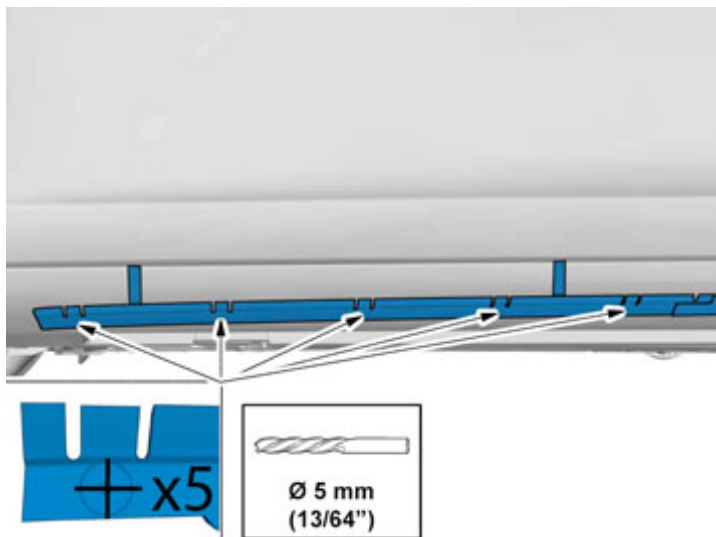

IMG-374456

Drill the holes.

17

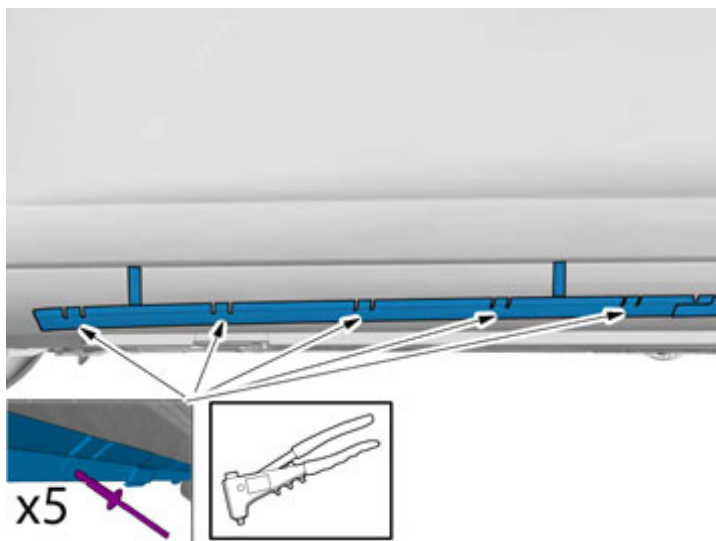


IMG-374459

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

18

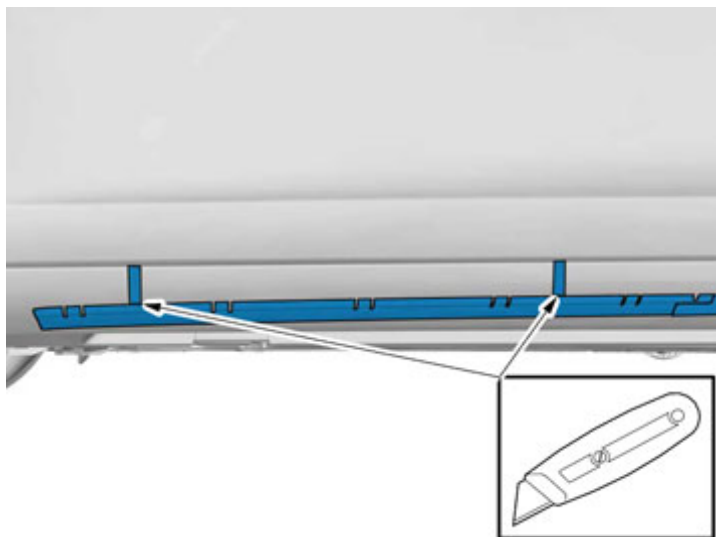

IMG-374457

19

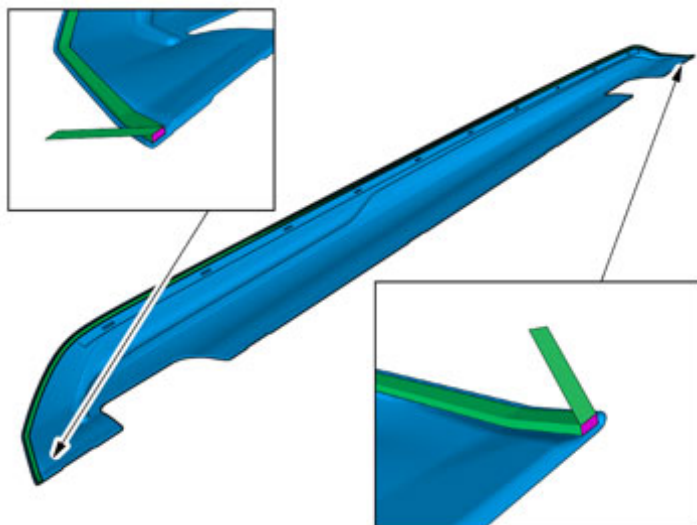

IMG-376798

Fold the protective film forward

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

20




Clean the surface.

**Use:** 1161721, Isopropanol

IMG-376972

21

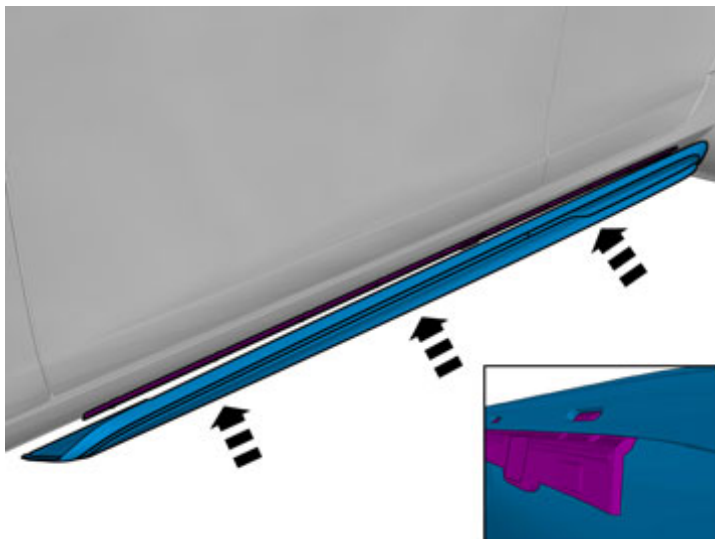


IMG-374471

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

22

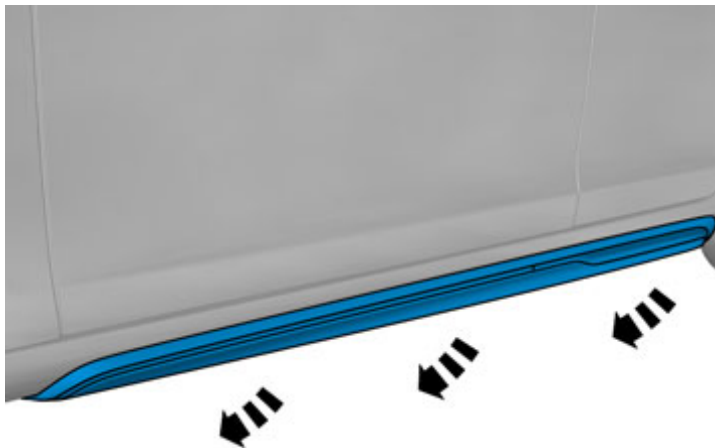

IMG-374473

23

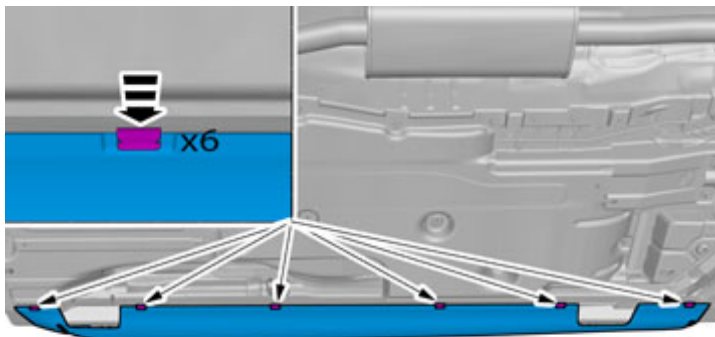


IMG-374476

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

24

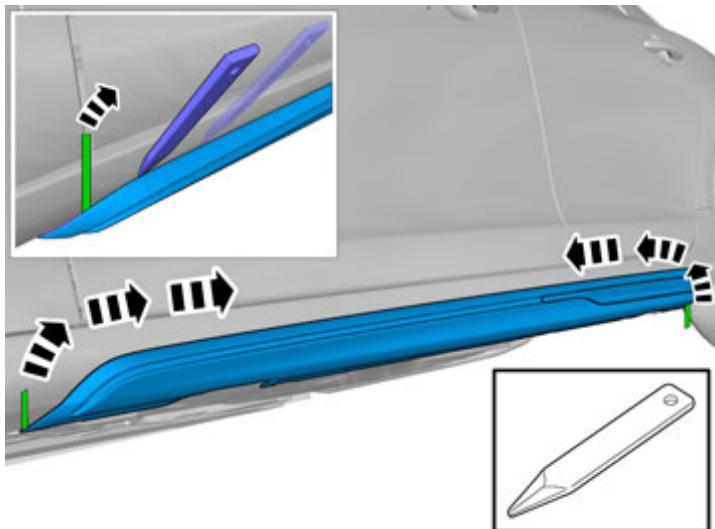

IMG-376811

**Caution!**  
Pull carefully.

Remove the protective film.

**Use:** Interior trim remover

**Hint**  
Press and apply pressure to the part over the tape for at least 20 seconds.

25

Repeat all method steps for the other side.