
Volvo Car Corporation Gothenburg, Sweden


Instruction No 32207215

Version 1.1

Part. No. 32351437, 32207211

Mudflaps, rear

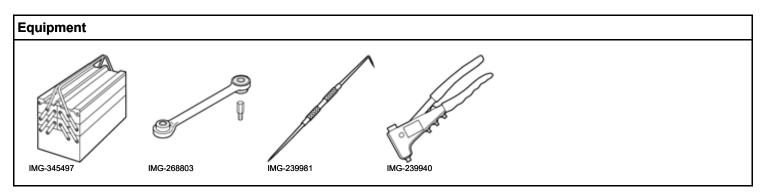

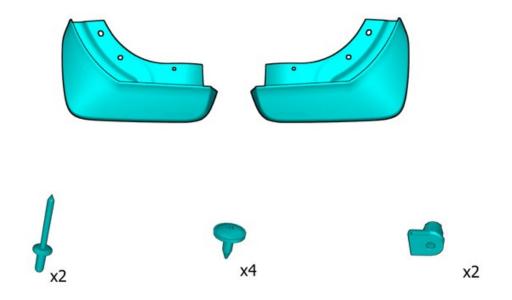

IMG-442469

Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

IMG-400010

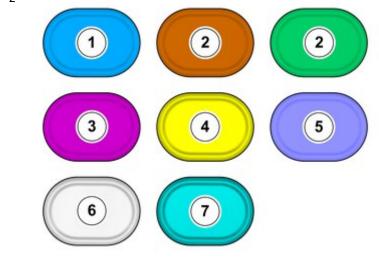

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.
- 7. Used for accessory components.


Removal

Volvo Car Corporation Gothenburg, Sweden

3


Remove the marked part.



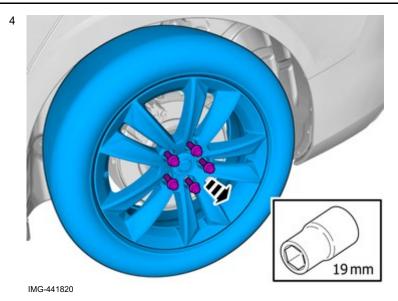


Remove the marked part.

Volvo Car Corporation Gothenburg, Sweden

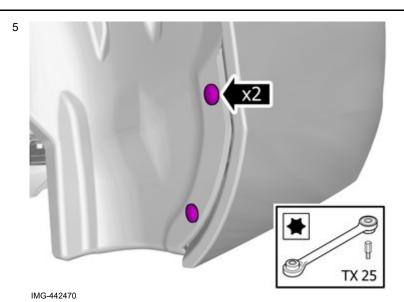


Loosen the screws.

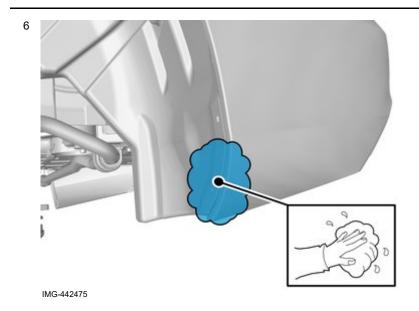

Wipe off

Volvo Car Corporation Gothenburg, Sweden

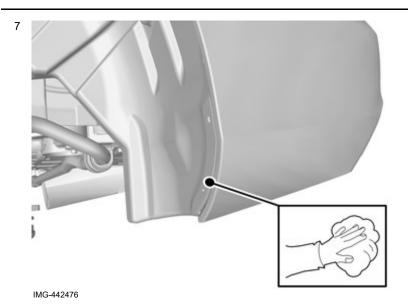

Wipe dry.



Fold the wing liner aside.


IMG-442477

Accessory installation

Volvo Car Corporation Gothenburg, Sweden

IMG-442479


Place the component where indicated in the graphic.

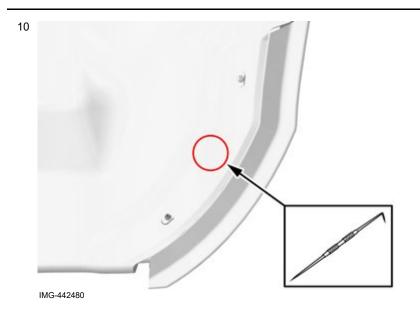

Locate the existing holes.


Make a hole, using the tool indicated.

Volvo Car Corporation Gothenburg, Sweden

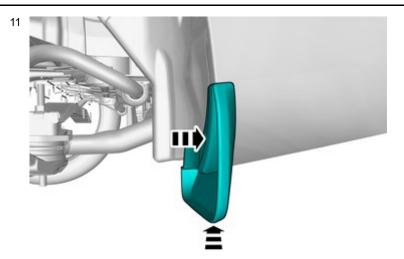

Place the component where indicated in the graphic.

IMG-442490

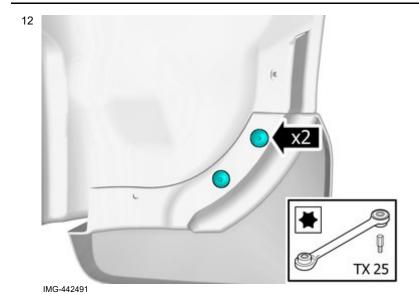

Note!


Ensure that the component is in contact with the surface, with no space.

Install component that comes with the accessory kit.

Tighten the bolts.

Volvo Car Corporation Gothenburg, Sweden

IMG-442501

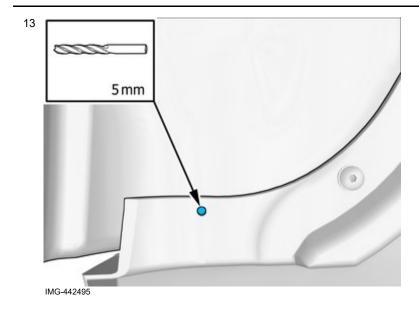

Install component that comes with the accessory kit.

15 Repeat all method steps for the other side.

16 Reinstall the removed parts in reverse order.