

Volvo Car Corporation Gothenburg, Sweden


Instruction No 31454839 Version 1.0 Part. No. 31439244

# Mudflaps, rear

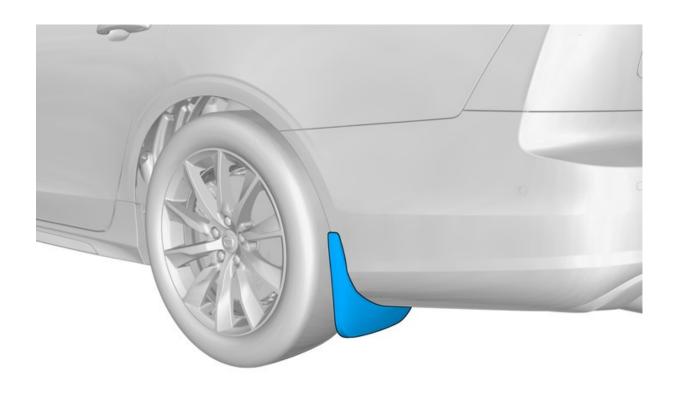

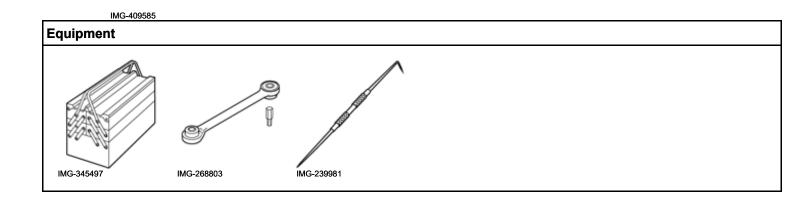

Volvo Car Corporation Gothenburg, Sweden

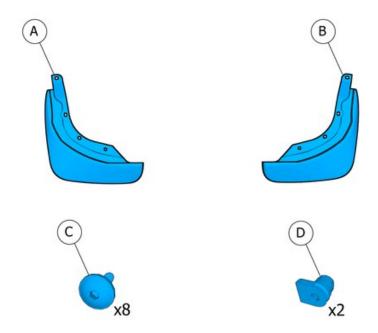


IMG-409510

Volvo Car Corporation Gothenburg, Sweden

# Read through all of the instructions before starting installation. Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation. Ensure that all tools stated in the instructions are available before starting installation. Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps. In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

2

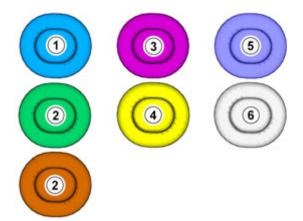

IMG-363036

### Note!


Color symbols

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

### Removal

Volvo Car Corporation Gothenburg, Sweden

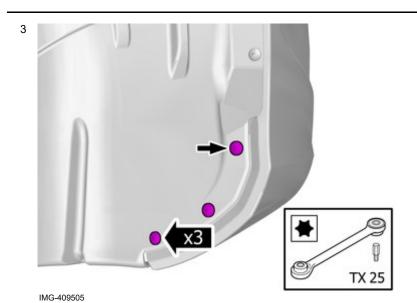

Loosen the screws.




Fold the wing liner aside.


IMG-409575

Preparation

Volvo Car Corporation Gothenburg, Sweden

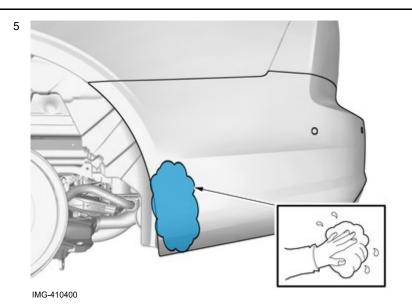


Wipe off

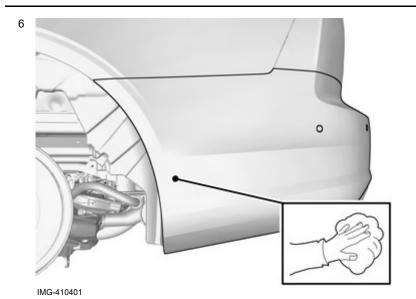


Wipe dry.

**Accessory installation** 

Volvo Car Corporation Gothenburg, Sweden

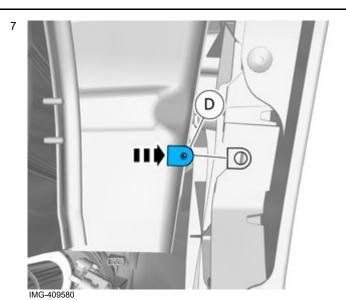


Place the component where indicated in the graphic.

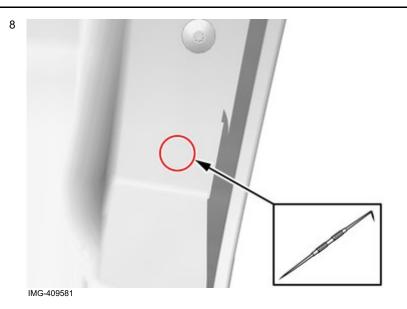

Locate the existing holes.

Make a hole, using the tool indicated.

Volvo Car Corporation Gothenburg, Sweden

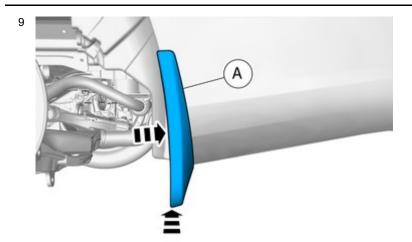


Place the component where indicated in the graphic.

IMG-409582

IMG-409583

11

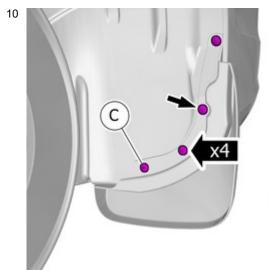

Tighten the bolts.

Install component that comes with the accessory kit.

TX 25

Repeat all method steps for the other side.

© Volvo Car Corporation