
Volvo Car Corporation Gothenburg, Sweden

Instruction No 31373166 Version 1.1 Part. No. 31265329

Mudflaps, front

Materials	
Designation	Part number
Isopropanol	1161721

Equipment IMG-345497

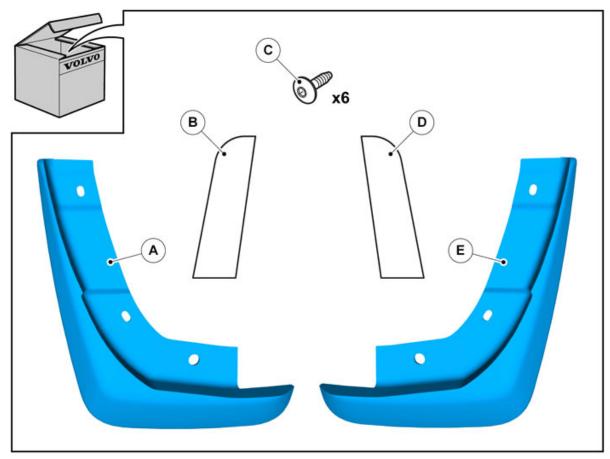


IMG-340354

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Color symbols
2	
	Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.
3	 Used for focused component, the component with which you will do something.
	Used as extra colors when you need to show or differentiate additional parts.
	3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
	Used when the component is not fully removed from the vehicle but only hung to the side.
	5. Used for standard tools and special tools.
(2)	6. Used as background color for vehicle components.
IMG-363036	
	Preparation


© Volvo Car Corporation Mudflaps, front- 31373166 - V1.1

Volvo Car Corporation Gothenburg, Sweden

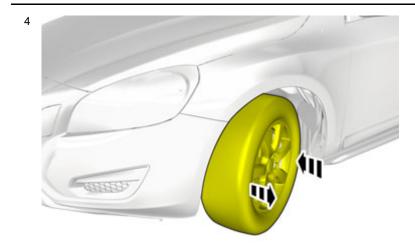

IMG-340356

Removal

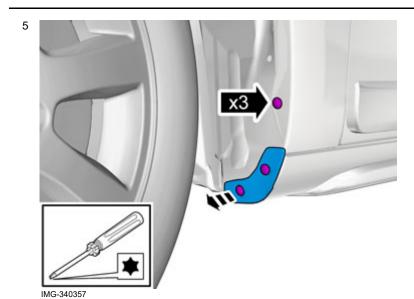


Remove the screws.

Remove the panel.

The part is not to be reused.


© Volvo Car Corporation Mudflaps, front- 31373166 - V1.1

Volvo Car Corporation Gothenburg, Sweden

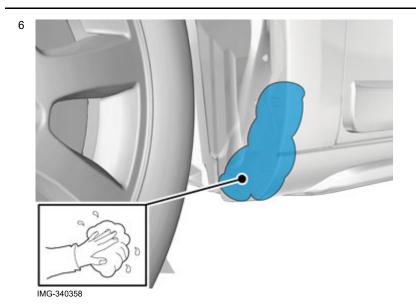

Clean the surface.

Wipe dry.

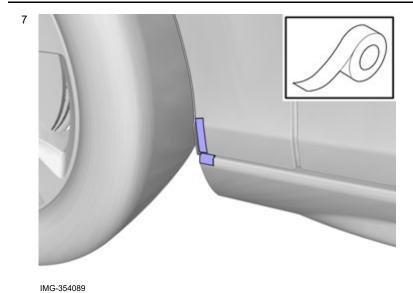

Note! Protect adjacent components with tape.

© Volvo Car Corporation Mudflaps, front- 31373166 - V1.1

Volvo Car Corporation Gothenburg, Sweden


8 IMG-354090

Caution!
Cut carefully to avoid unintentional damage or personal injury.

Caution!

Make sure not to damage painted surfaces.

Remove the tape.

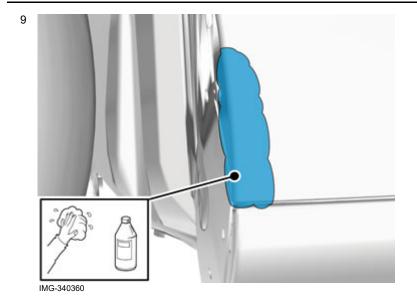


Clean the surface.

Use: 1161721, Isopropanol


Allow to dry.

Accessory installation

Volvo Car Corporation Gothenburg, Sweden

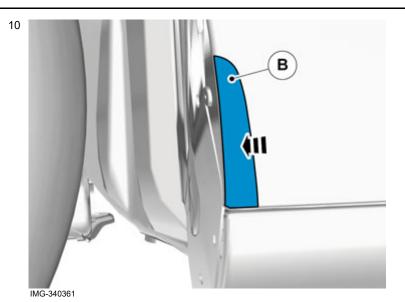

Install component that comes with the accessory kit.

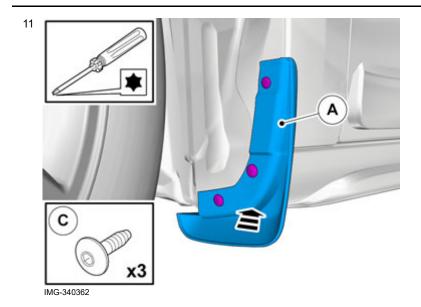

Install component that comes with the accessory kit.

Repeat all method steps for the other side.