

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 31439241  
**Version** 1.1  
**Part. No.** 31439240

## Bumper cover

### Materials

Designation	Part number
Isopropanol	
Masking tape	


### Equipment

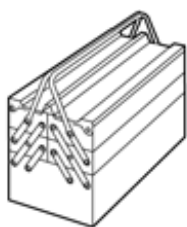

IMG-345497



IMG-397698

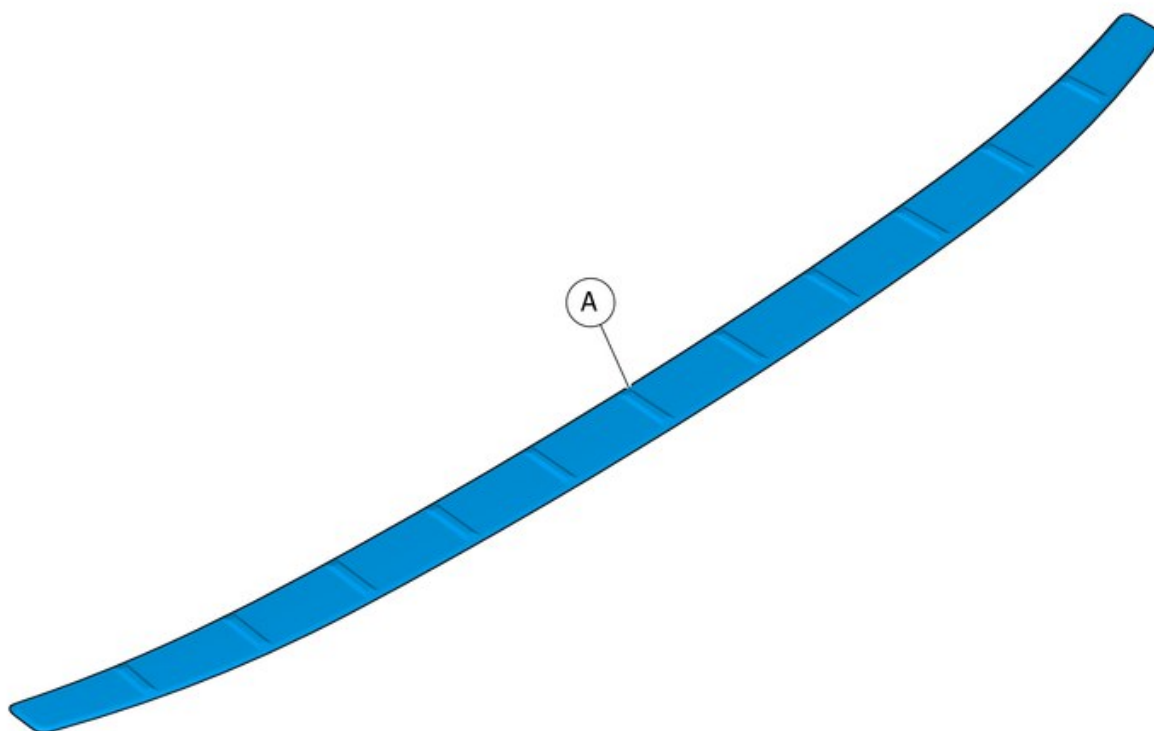

IMG-407105

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## Information

- 1
- Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.


In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

## Conditions

- 2
- When installing, the car must retain a temperature of 20 degrees C.

After installation, the car must not be washed for 48 hours

## Color symbols

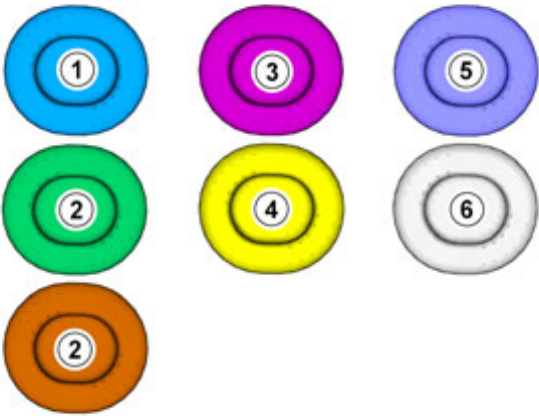- 3
- 
- Note!**  
This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

  1. Used for focused component, the component with which you will do something.
  2. Used as extra colors when you need to show or differentiate additional parts.
  3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
  4. Used when the component is not fully removed from the vehicle but only hung to the side.
  5. Used for standard tools and special tools.
  6. Used as background color for vehicle components.

IMG-363036


## Preparation

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4


Open the tailgate.

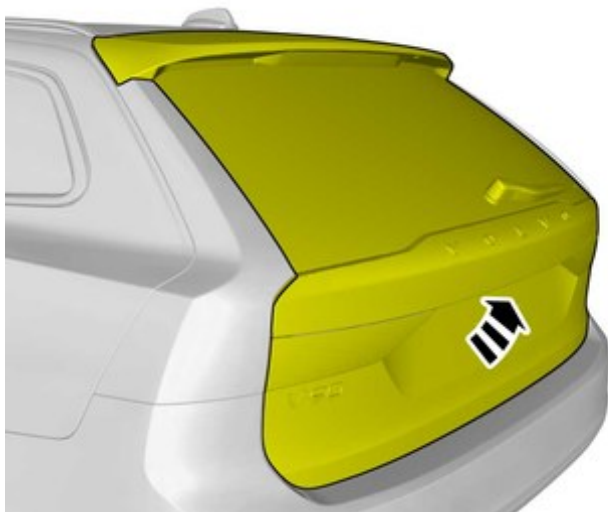

IMG-407110

5

Clean the surface.

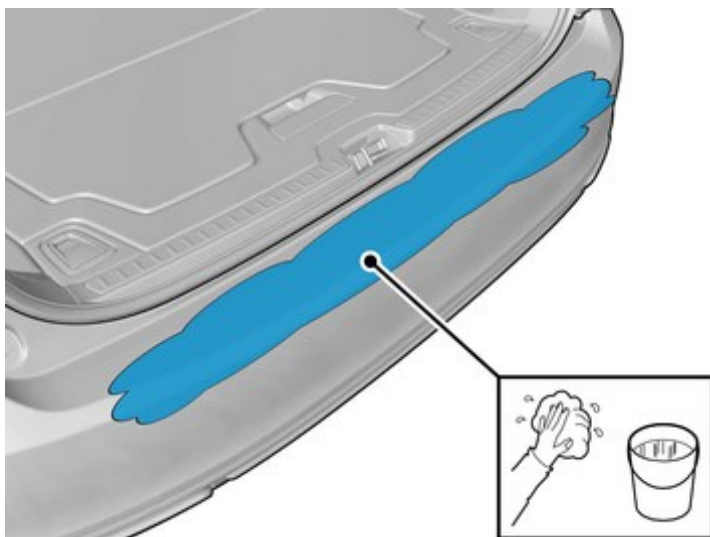


IMG-412008

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6

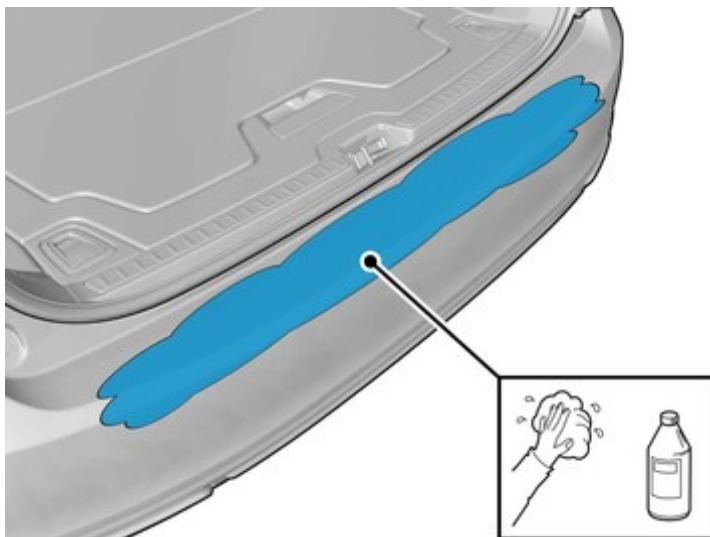

IMG-412005


Wipe off

**Use:** , Isopropanol

Allow to dry.

## Accessory installation

7

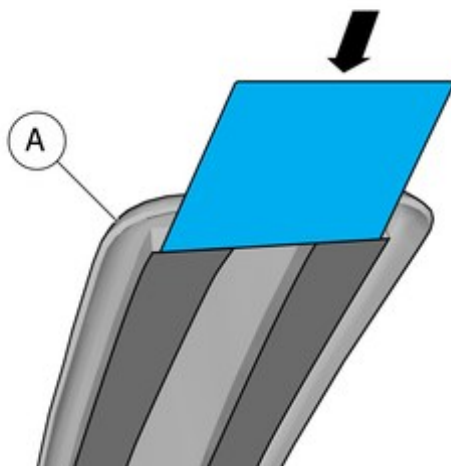

IMG-412021


Remove the marked part.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

8


Fold the protective film forward

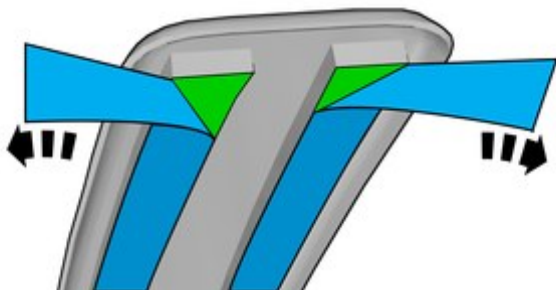

IMG-412293

9

Mark the centre.

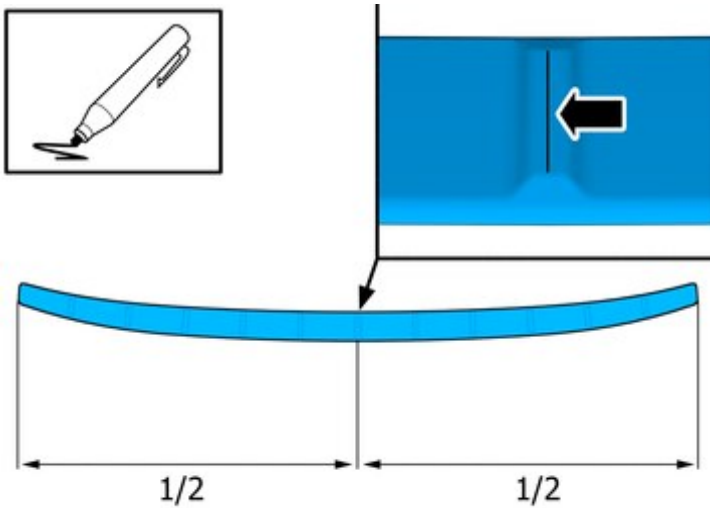


IMG-412295

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

10

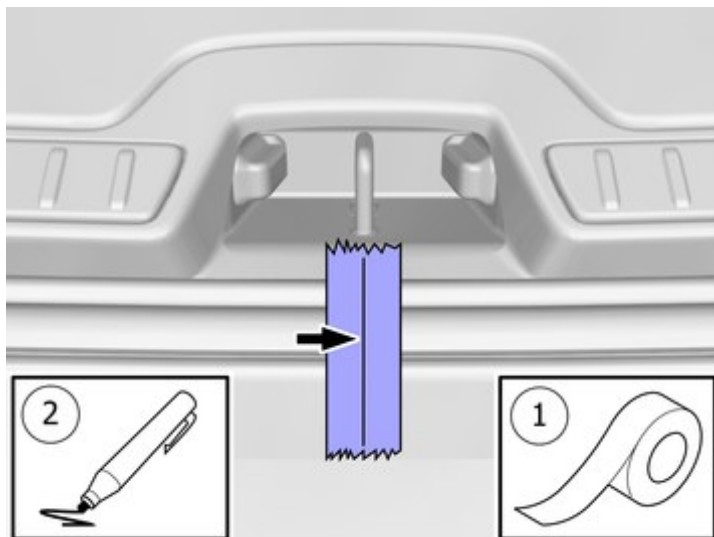


IMG-412296

1. **Use:** , Masking tape

2. Mark the centre.

11

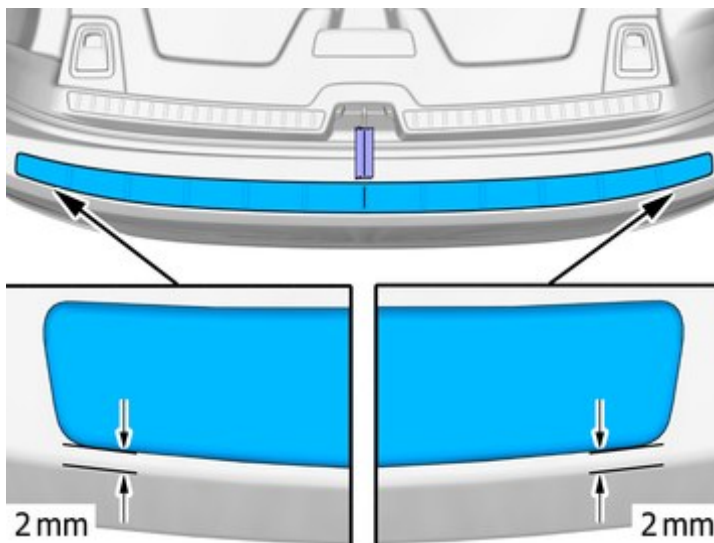

IMG-412301

Install component that comes with the accessory kit.

Place the component where indicated in the graphic.


Measure

**Use:** Vernier caliper

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

12

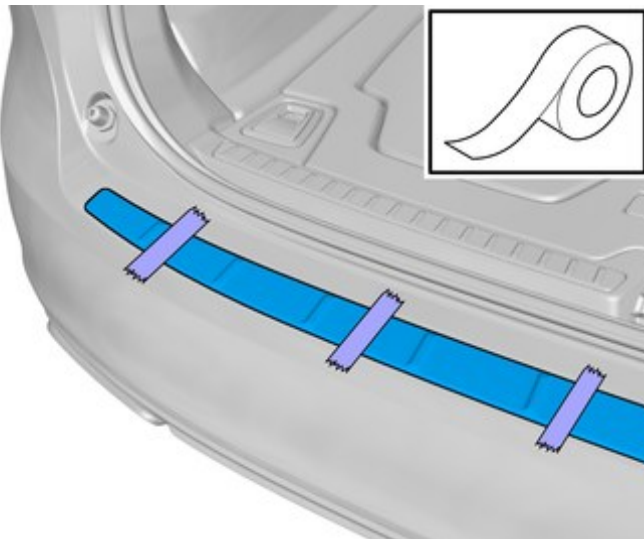

IMG-412376


## Note!

Note the position.

Allow the Bumper Protection to adhere to the Bumper Cover as indicated.

**Use:** , Masking tape

13

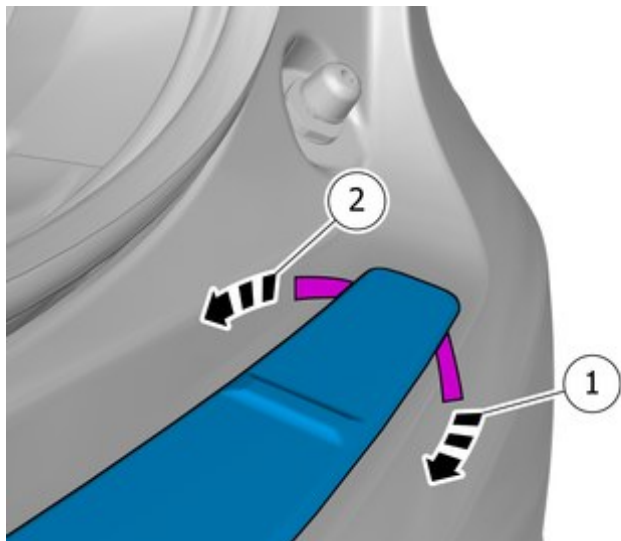

IMG-412305

## Note!

Note the position.


Remove the protective film.



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


14

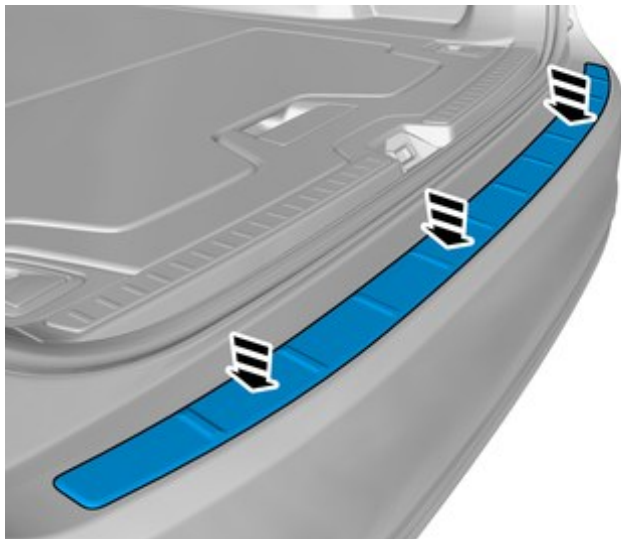

IMG-412391

Thoroughly press, by hand, all over the Bumper Protection to make it cling properly.

15

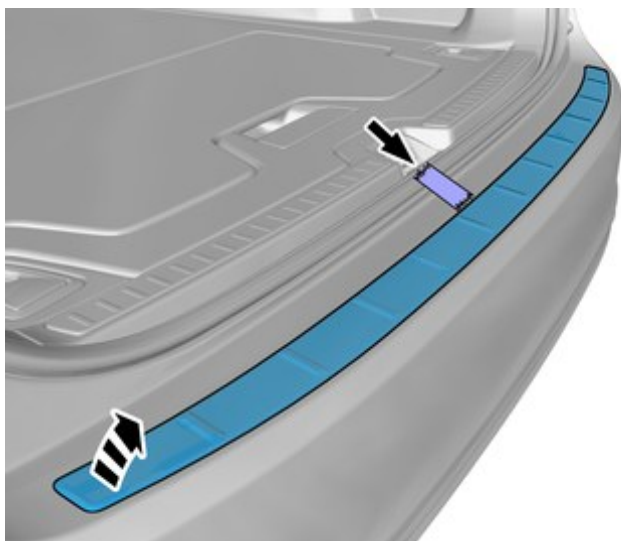

IMG-412411

Remove the tape.

Remove the protective film.