


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 31399625  
**Version** 1.1  
**Part. No.** 31399213

## Sun curtain

### Equipment

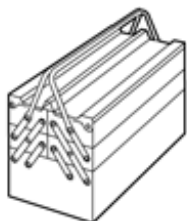

IMG-345497

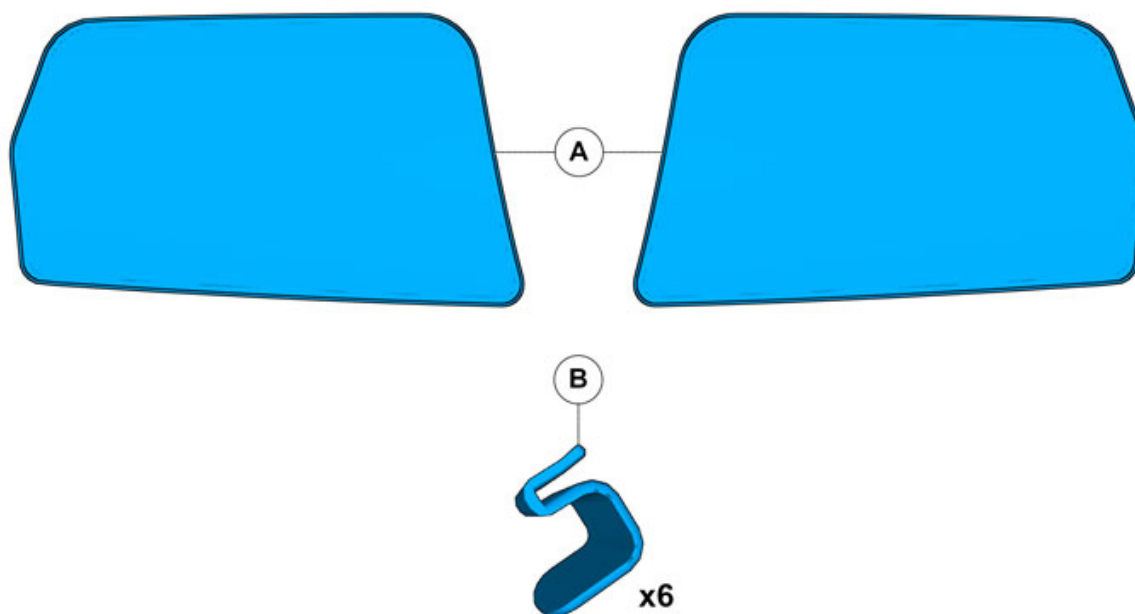

IMG-378790

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

## Information

---

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

---

## Color symbols

---

2



IMG-363036

### Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

1. Used for focused component, the component with which you will do something.
2. Used as extra colors when you need to show or differentiate additional parts.
3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
4. Used when the component is not fully removed from the vehicle but only hung to the side.
5. Used for standard tools and special tools.
6. Used as background color for vehicle components.

---

## Accessory installation


---

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

Set the ignition key to position I.

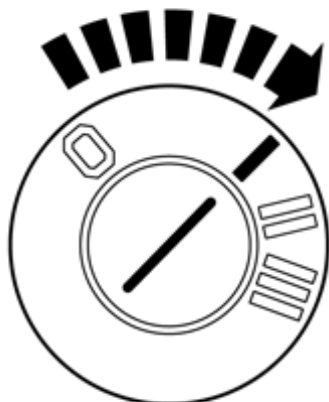

IMG-332194

4




IMG-378793

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

5


Set the ignition key to position 0.

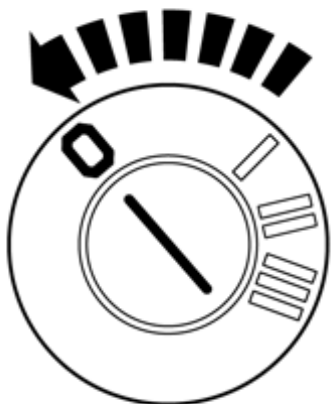

IMG-332193

6

Remove the weatherstrip.

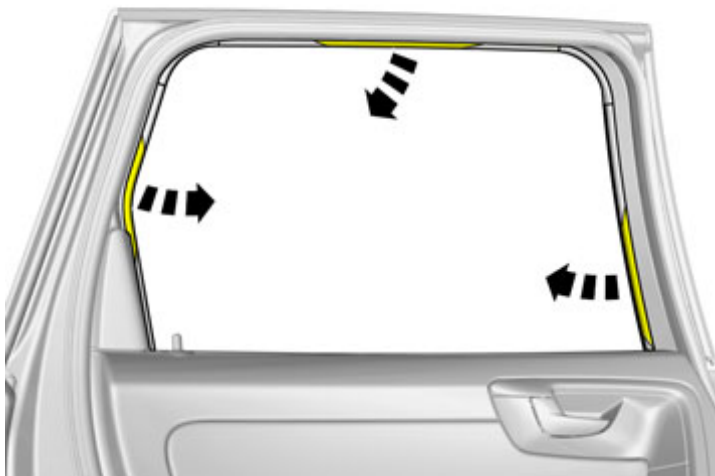


IMG-378795

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


7

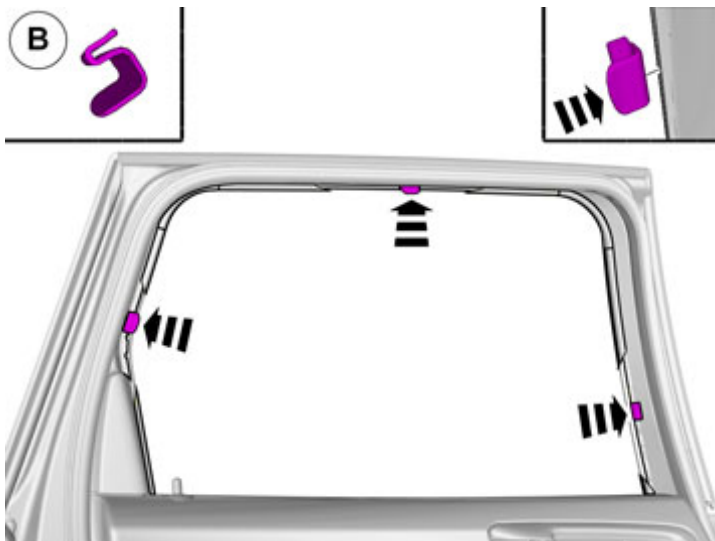

IMG-378812

Install the clip(s).

8

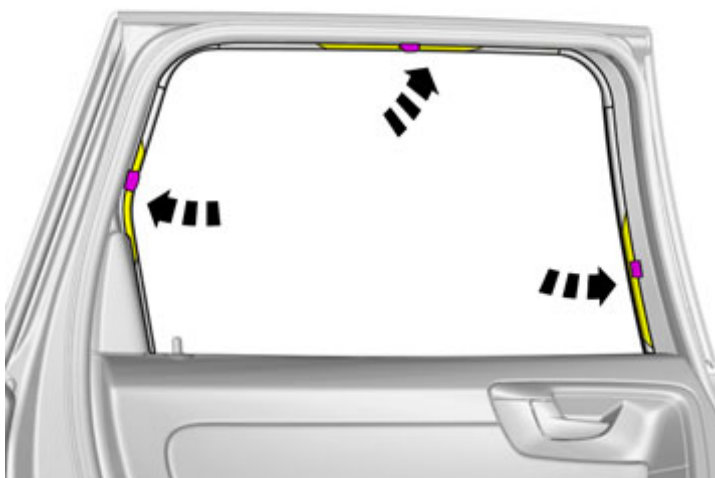


IMG-378814

Reinstall the rubber weatherstrip.

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

9

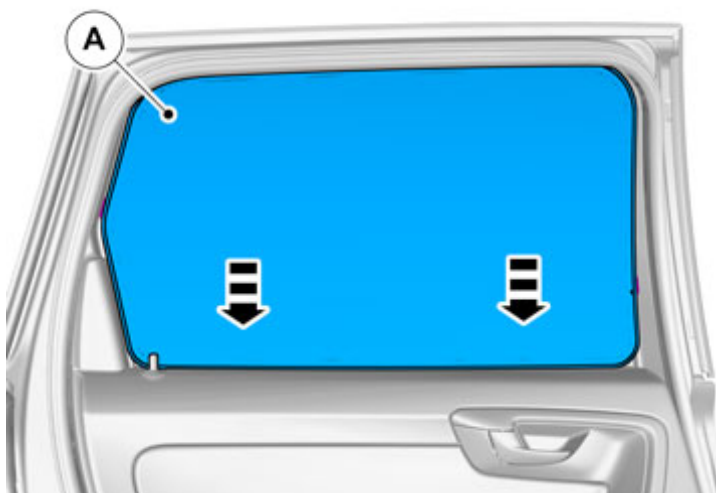

IMG-378823

10

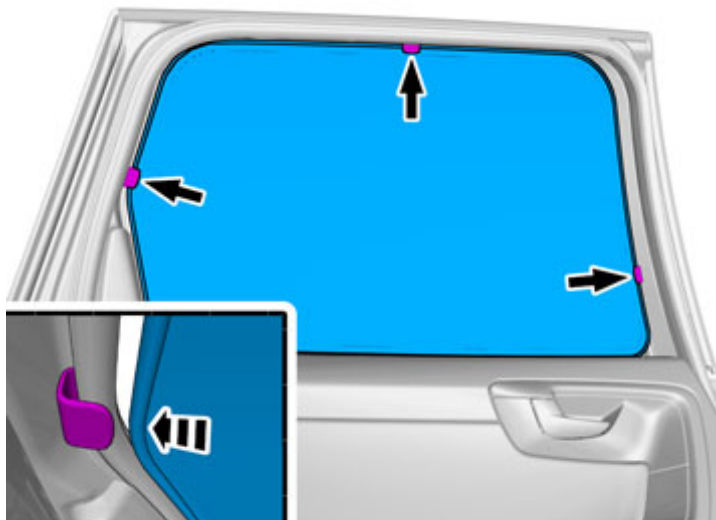


IMG-378825

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


11

Set the ignition key to position I.

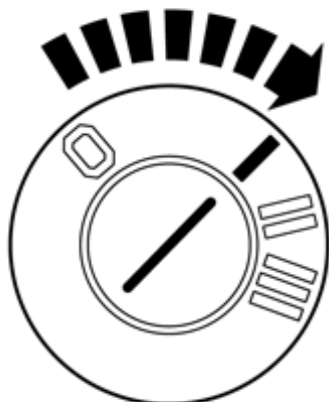

IMG-332194

12

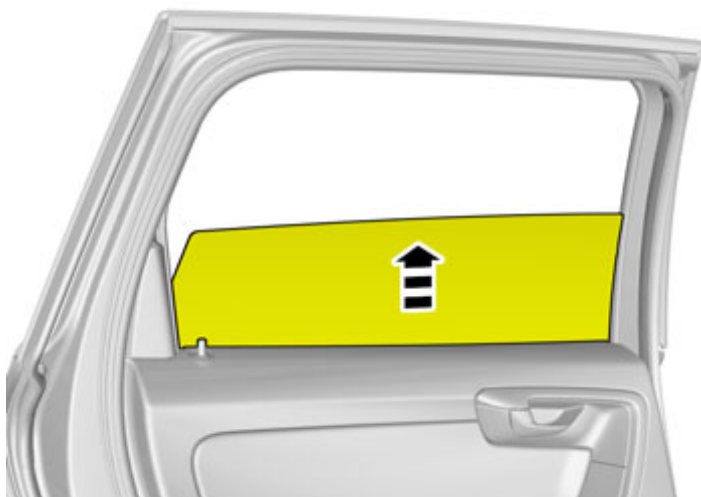

IMG-378824

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

13

Set the ignition key to position 0.

Repeat all method steps for the other side.



IMG-332193

---