

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

**Instruction No**  
30756584

**Version**  
1.1

**Part. No.**  
30756579, 30756580

## Decor trim, fog lights

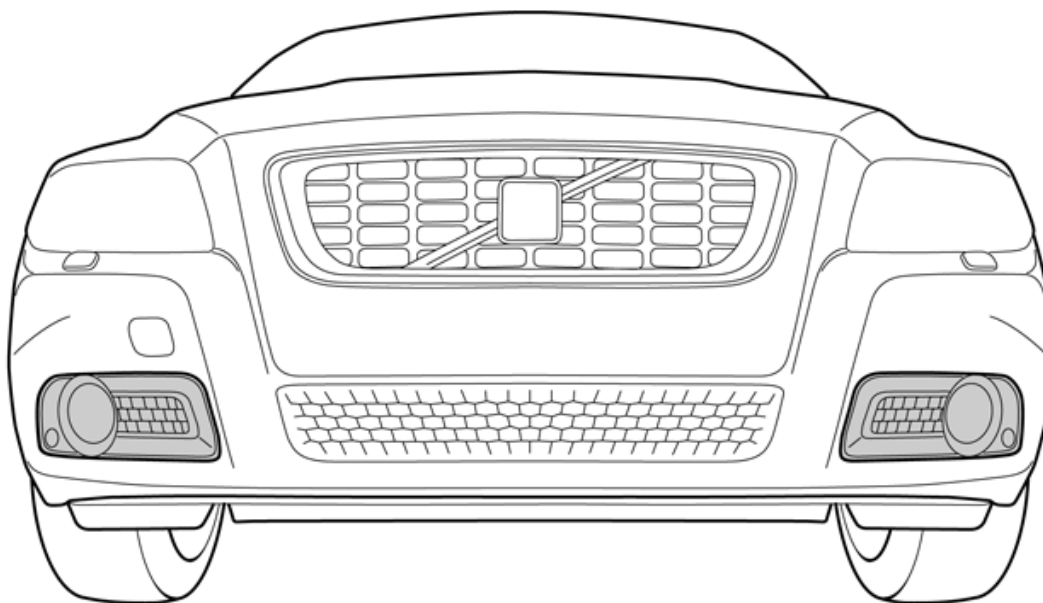


IMG-310904

### Equipment

**VIDA**


IMG-242205

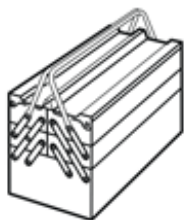

A0000162

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

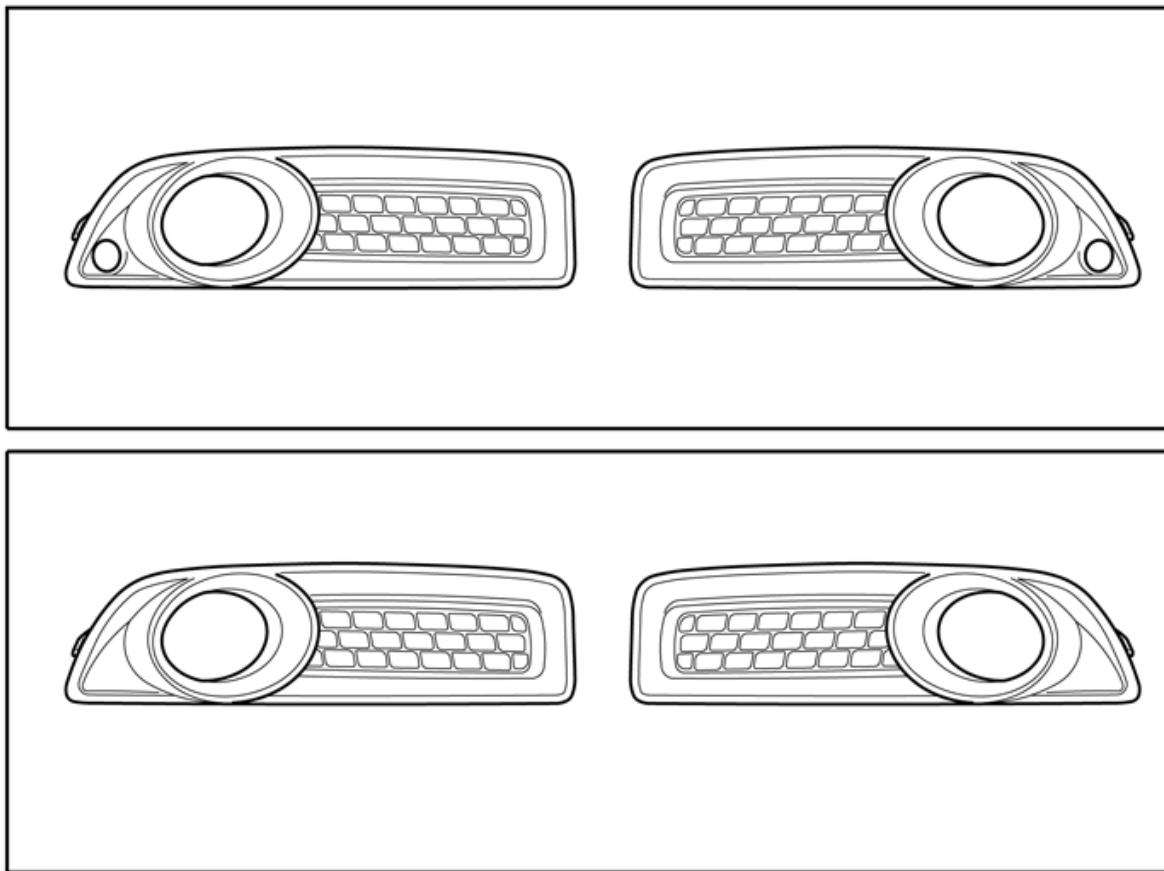

IMG-310903

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

### Note!

Decor trim, fog lights R-Design in combination with front parking assistance may only be installed on cars where also Spoiler rear bumper R-Design has been installed.

1

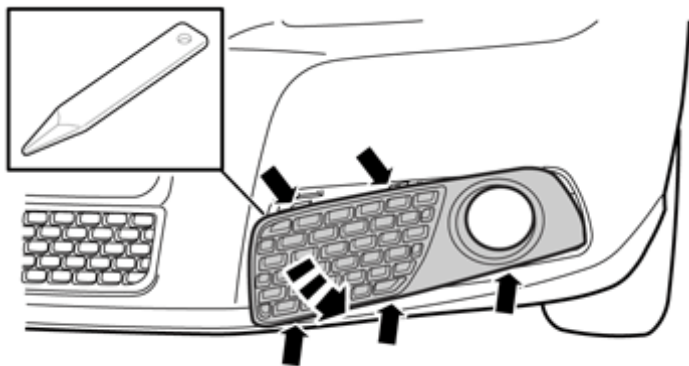

### Applies to all models

Carefully pry off the panel using a weatherstrip tool. Start at the inner end and continue around. It is secured by six hooks.

Place the panel aside, new is included in the kit.

IMG-309005


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

2

**Applies to cars with parking assistance, front**


Disconnect the connector to the sensor.

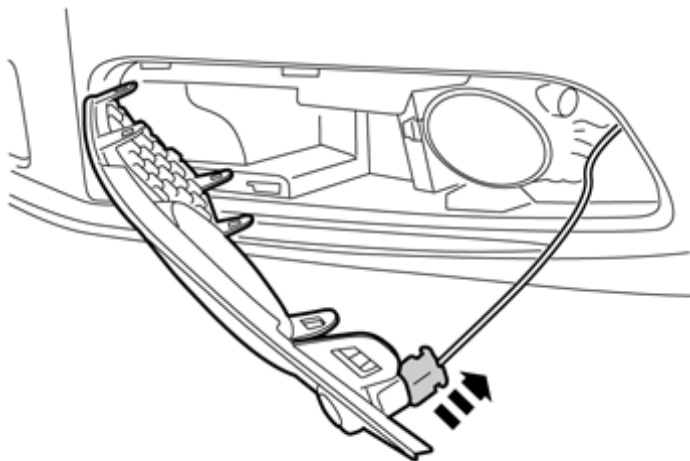

IMG-309006

3

Remove the sensor by carefully prying up the catches and pulling it out.

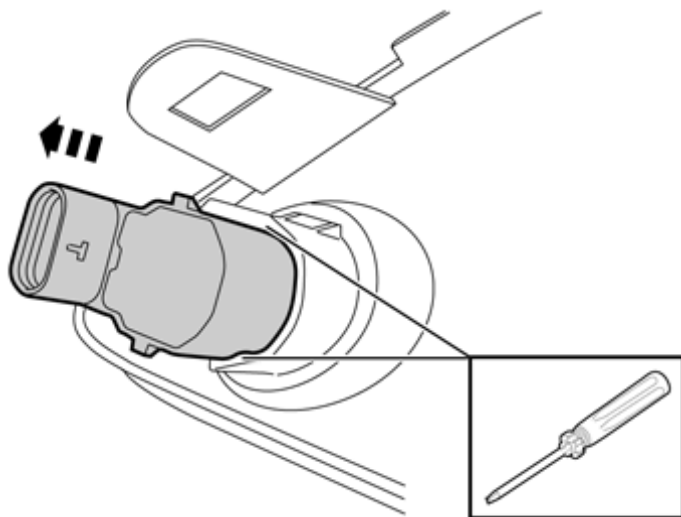


IMG-309007

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4

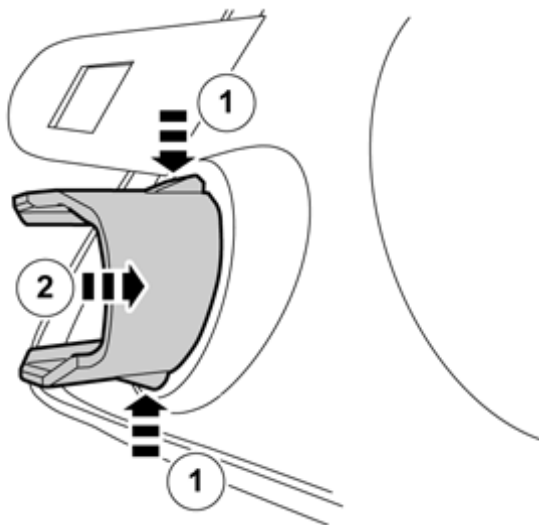


IMG-309008

Remove the cradle by pressing in the catches on top and underneath and pressing it out.

Place the panel aside, new is included in the kit.

5

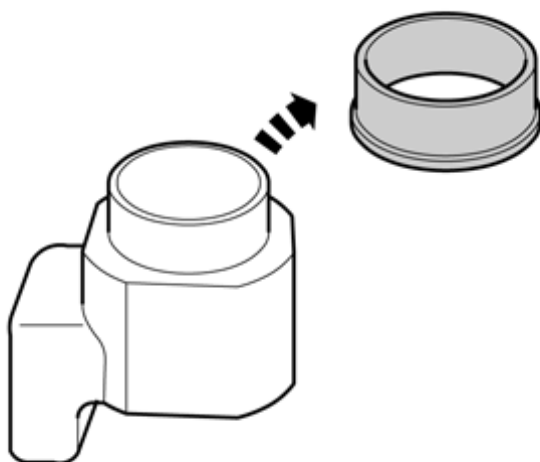

IMG-311024


**Points 5-7 apply to all cars with parking assistance where the customer desires surface treatment of sensors and holders in the same colour as the decor trim (silver 426)**

Remove the seal rings from the sensors.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6

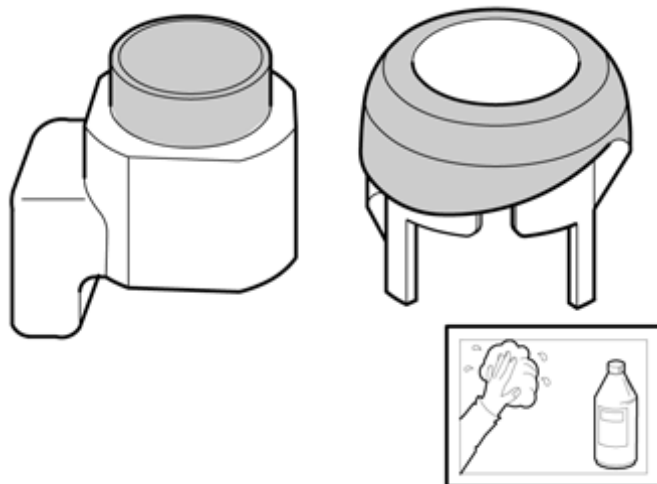


IMG-311025

Clean the sensors and holders on the surface shown in the illustration. Use isopropanol and let dry.

Apply a thin and even coat of activator on the cleaned surfaces. Let dry for at least 10 minutes and max. 30 minutes before painting.

7

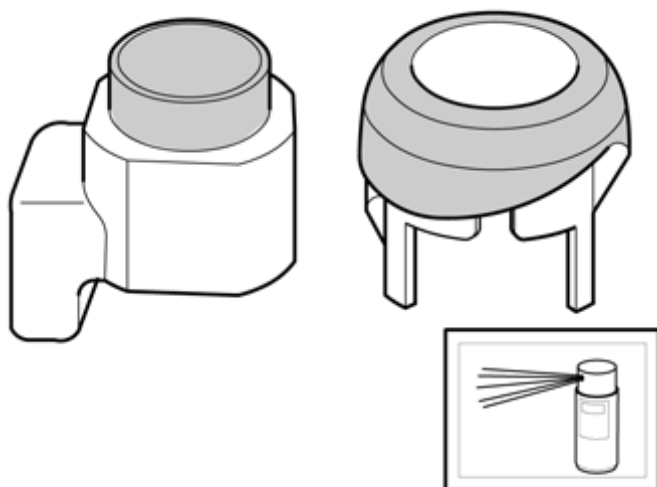

IMG-311026

Paint the sensors and holders with the same color code as the decor trim around the fog lights' panels. Use paint recommended by Volvo. Paint max. two layers (1 layer base coat and 1 layer clear coat). Protect connections so that paint does not end up on the contact surfaces.

## Caution!


Too many layers of paint may result in partial or complete malfunction.

When the paint has dried, reinstall the sealing rings.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


8

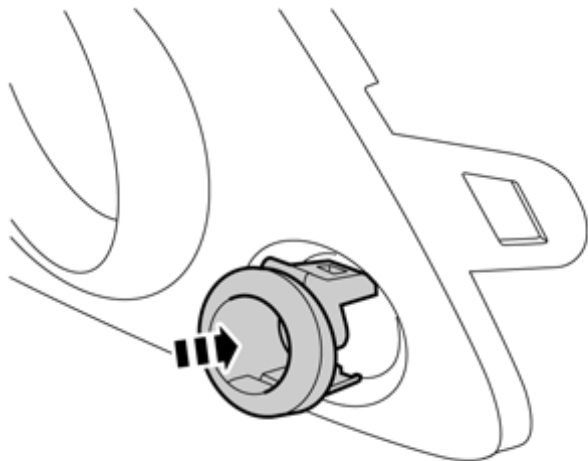

Take a new panel from the kit. Secure the sensor cradle in the new panel. Ensure that the catches engage.

IMG-309009

9

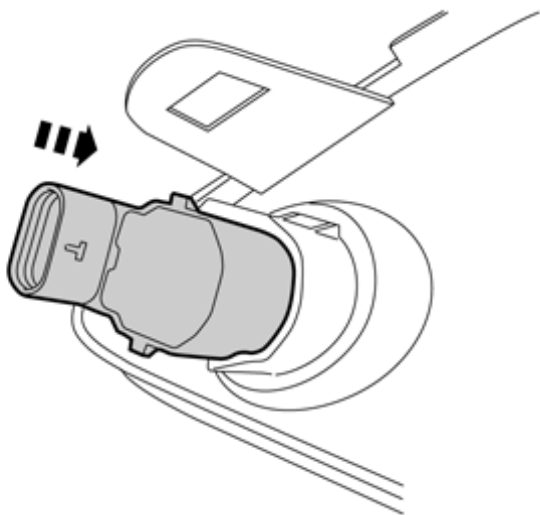


Press the sensor into the cradle.

IMG-309010

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


10

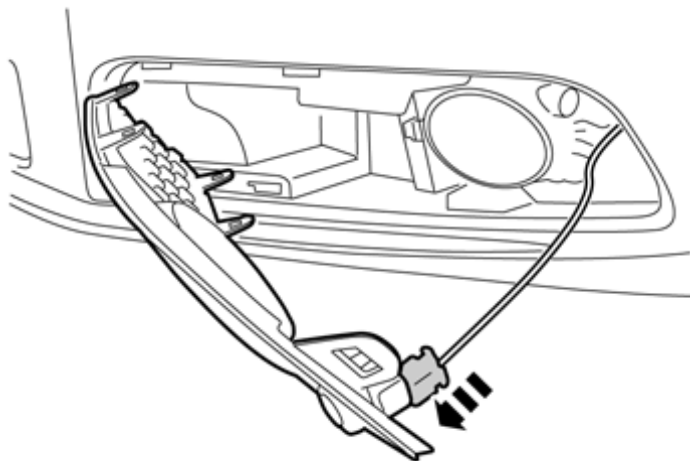

IMG-311027

Plug in the connector to the sensor.

11

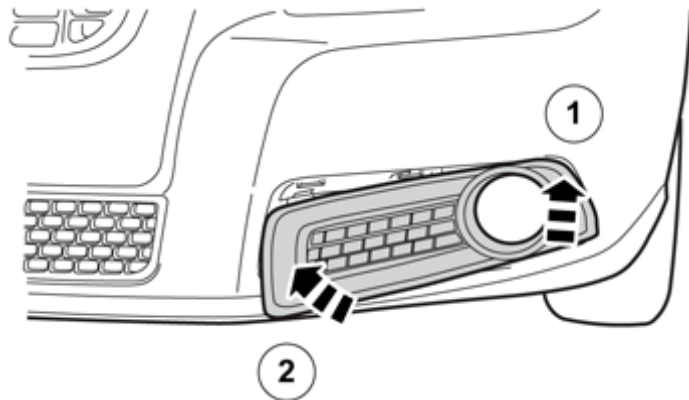

IMG-311028

**Applies to all models**

Press in the new panel. Make sure all catches engage.


Repeat the operation on the other side.



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

12

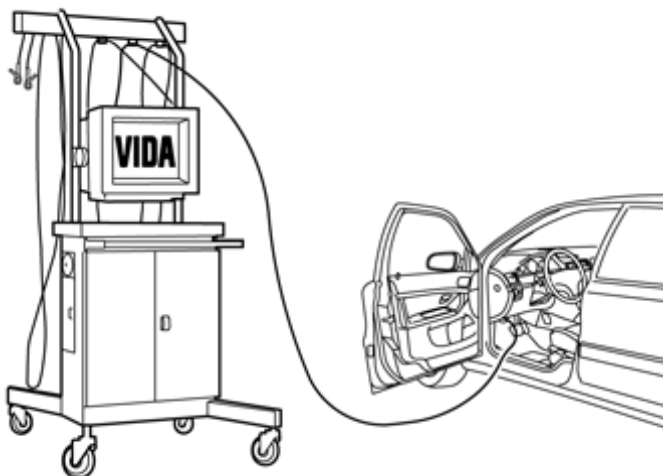

IMG-242268

## **Applies to cars with parking assistance, front**

A new placement of sensors with holders means that new software has to be downloaded.

Download the software for the accessory's function following the service information in VIDA.