


Volvo Car Corporation Gothenburg, Sweden

Instruction No 31408785 Version 1.0 Part. No. 31408784

Mudflaps, rear

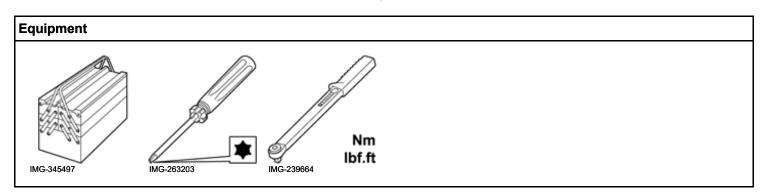

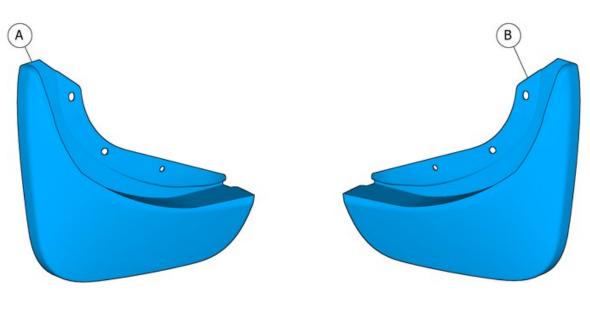




IMG-422808

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

2

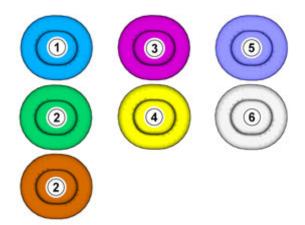

IMG-363036

Note!

Color symbols


This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- ${\bf 6.} \ {\bf Used} \ {\bf as} \ {\bf background} \ {\bf color} \ {\bf for} \ {\bf vehicle} \ {\bf components}.$


Removal

© Volvo Car Corporation Mudflaps, rear- 31408785 - V1.0

Volvo Car Corporation Gothenburg, Sweden

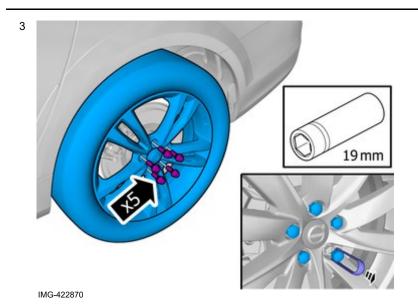


Remove the marked part.

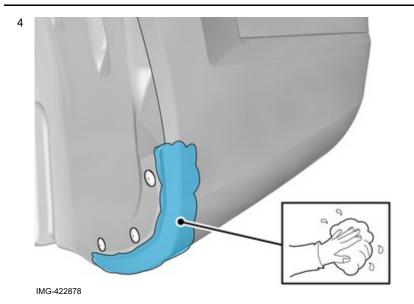

Clean the surface.


© Volvo Car Corporation Mudflaps, rear- 31408785 - V1.0

Volvo Car Corporation Gothenburg, Sweden

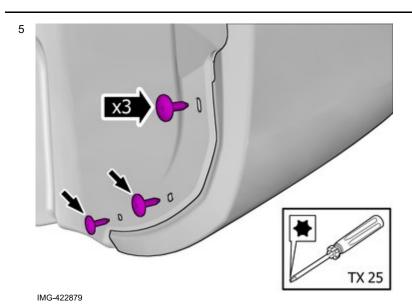

Remove the screws.

Accessory installation

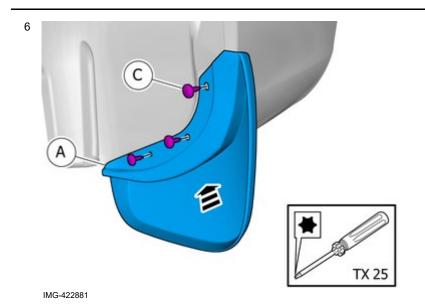


Install component that comes with the accessory kit.

Check

© Volvo Car Corporation Mudflaps, rear- 31408785 - V1.0


Volvo Car Corporation Gothenburg, Sweden

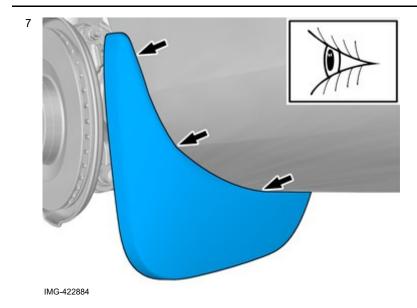

8

Repeat all method steps for the other side.

Installation

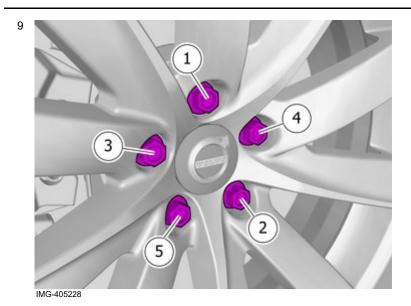

Note!

Make sure to follow the sequence indicated.

Tightening torque: Aluminum wheel rim to wheel hub Stage 1: 4 Nm Stage 2: 50 Nm Stage 3: 140 Nm

© Volvo Car Corporation Mudflaps, rear- 31408785 - V1.0