
Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.


 30756480
 1.1
 30756476

Decor trim, air intake, chrome

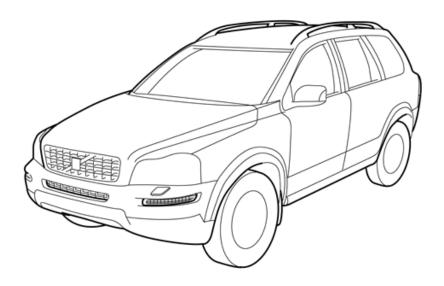

IMG-306626 Equipment VOLVO 9512943 IMG-239446

Volvo Car Corporation Gothenburg, Sweden

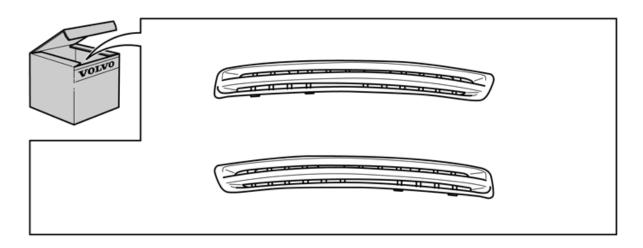

IMG-306628

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!		
Publ.no:	Issue:	Kit no:
Comments:		
From:		
Address:		
Telephone:		
Telefax:		

IMG-213320

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION


Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

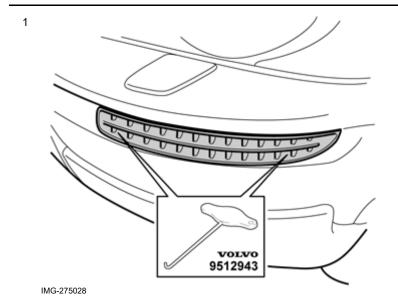


Carefully remove the bumper cover grilles on both sides by carefully pulling them off using tool part no. 9512943.

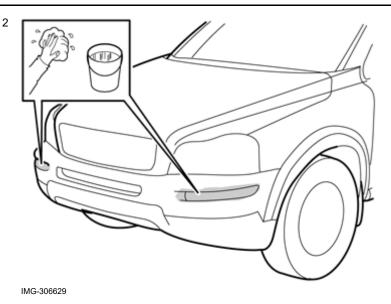

Clean the bumper cover where the decor strip is to be secured.

Volvo Car Corporation Gothenburg, Sweden

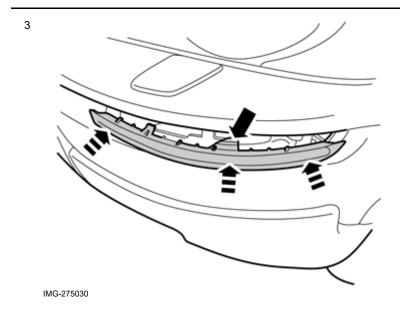

Align the decor panel in the cut-out and press it into place. Ensure that all hooks engage.

Repeat the operation on the other side.