

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31470794 Version 1.0 Part. No. 32351435, 31470791

# Mudflaps, front

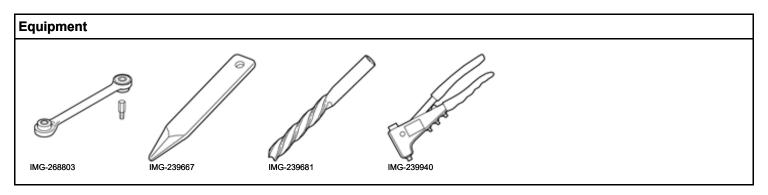

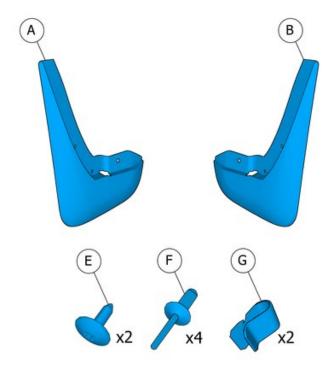


IMG-419980

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

2

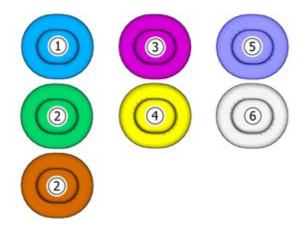

IMG-363036

### Note!

**Color symbols** 


This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.


#### Removal

© Volvo Car Corporation Mudflaps, front- 31470794 - V1.0

Volvo Car Corporation Gothenburg, Sweden

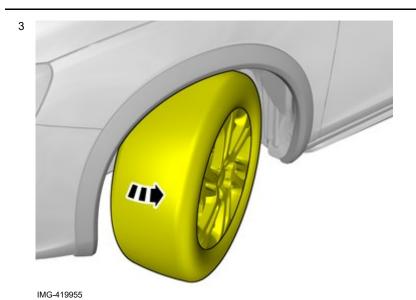

Turn the wheel inwards.

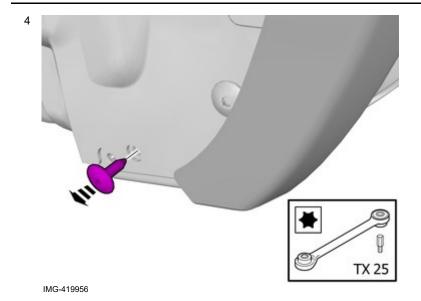


Remove the screw.

**Accessory installation** 

© Volvo Car Corporation Mudflaps, front- 31470794 - V1.0

Volvo Car Corporation Gothenburg, Sweden

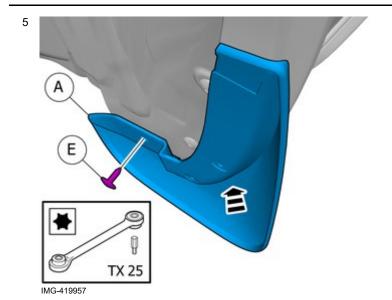


### Caution!

Make sure that the components are positioned correctly.

Install component that comes with the accessory kit.

Tighten the screw.

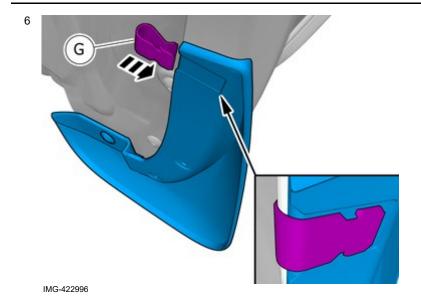


#### Caution!

Check that the component has locked in its bottom position.

Install component that comes with the accessory kit.

Use: Interior trim remover


Volvo Car Corporation Gothenburg, Sweden

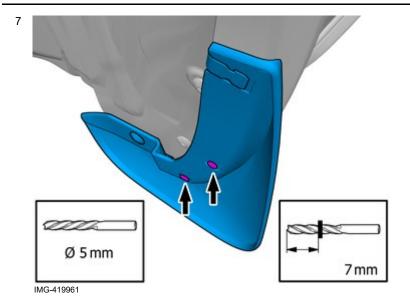

Note! Note the position.

Drill first layer only

Drill the holes.

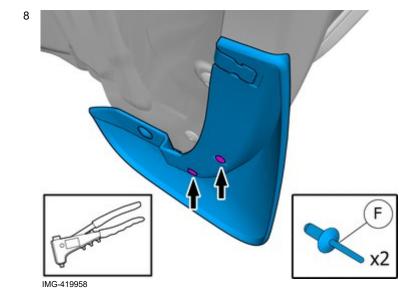

Install component that comes with the accessory kit.

9

Repeat the steps when installing accessories on opposite side.