
Volvo Car Corporation Gothenburg, Sweden

Instruction No 31650293

Version 1.0

Part. No. 32351434, 31650287

Mudflaps, front

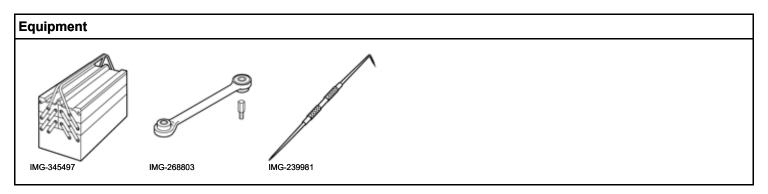









IMG-441737

Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

IMG-400010

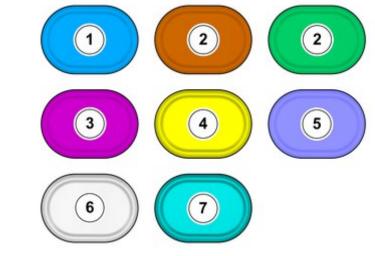

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.
- 7. Used for accessory components.

Preparation

Volvo Car Corporation Gothenburg, Sweden

3

IMG-441820

Remove the marked part.




4 19 mm

Remove the marked part.


Removal

Volvo Car Corporation Gothenburg, Sweden

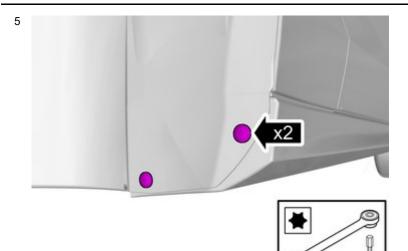

Remove the screws.

IMG-441631

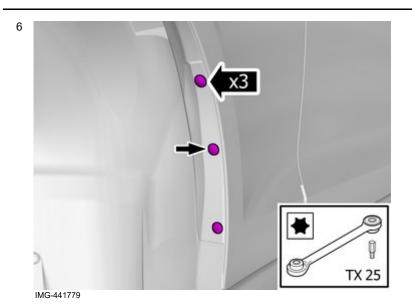


Remove the screws.


TX 25

Preparation

Volvo Car Corporation Gothenburg, Sweden

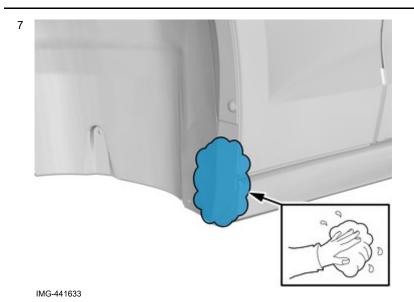


Clean the surfaces.

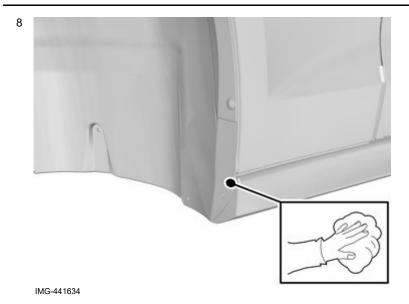


Wipe dry.

Volvo Car Corporation Gothenburg, Sweden

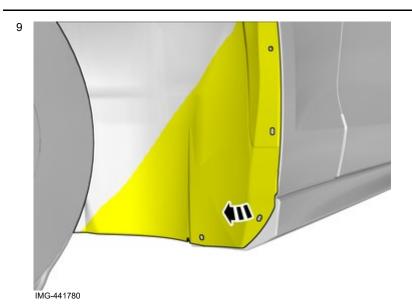

Fold marked part aside.


Accessory installation

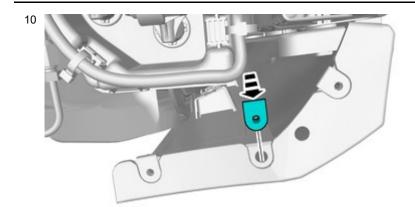

Install component that comes with the accessory kit.


IMG-441860

Volvo Car Corporation Gothenburg, Sweden

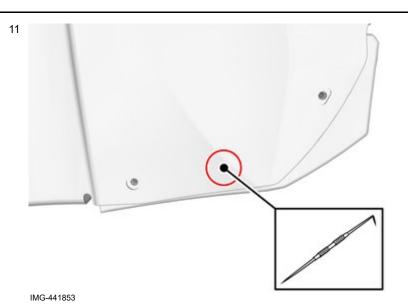

Locate the existing holes.

Make a hole, using the tool indicated.

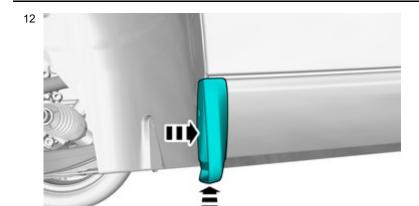

Install components that come with the accessory kit.


IMG-441863

Volvo Car Corporation Gothenburg, Sweden



Note!
Ensure that the component is in contact with the surface, with no space.

Install component that comes with the accessory kit.



IMG-441864

14 Reinstall the removed parts in reverse order.

15 Repeat all method steps for the other side.