

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31347491 Version 1.1 Part. No. 31347474

Mudflaps, rear

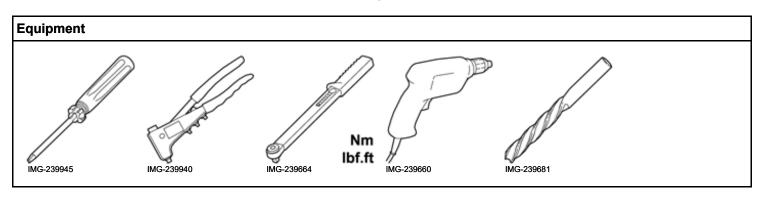

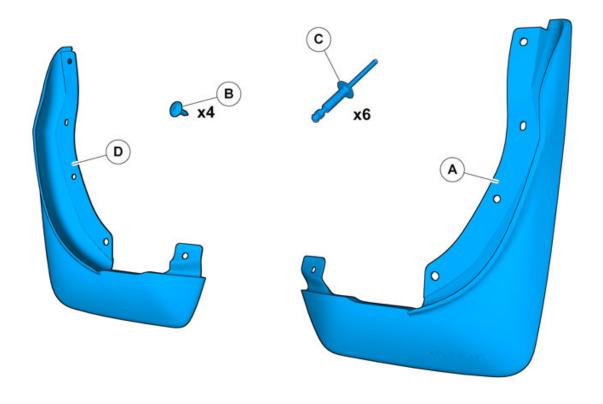

IMG-376966

Volvo Car Corporation Gothenburg, Sweden

86321	
Mudflane	roar

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

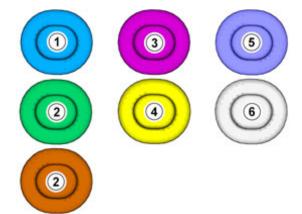

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.


- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

Removal

© Volvo Car Corporation Mudflaps, rear- 31347491 - V1.1

Volvo Car Corporation Gothenburg, Sweden

3

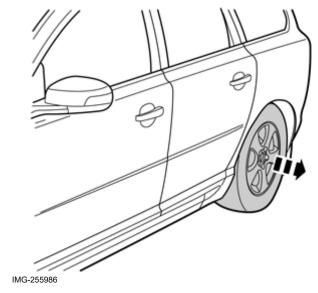

4




Remove the screws.

IMG-376954


Accessory installation

Volvo Car Corporation Gothenburg, Sweden

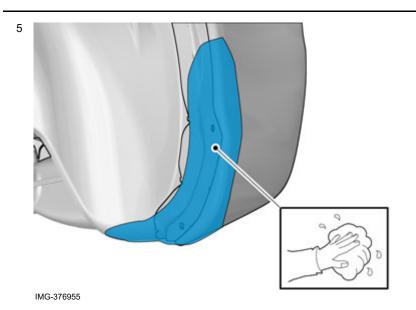

Clean the surface.


Wipe dry.

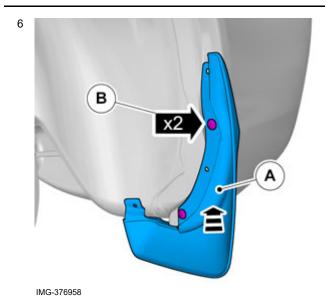


Install component that comes with the accessory kit.

© Volvo Car Corporation Mudflaps, rear- 31347491 - V1.1

Volvo Car Corporation Gothenburg, Sweden

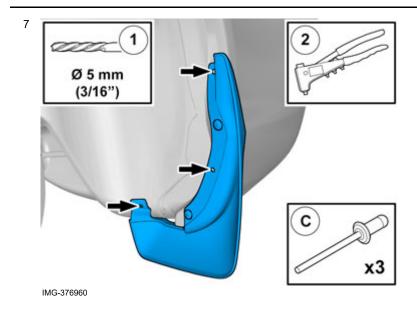

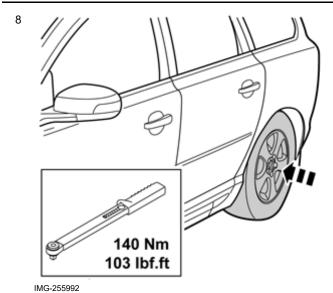

Repeat all method steps for the other side.

© Volvo Car Corporation Mudflaps, rear- 31347491 - V1.1