

Volvo Car Corporation Gothenburg, Sweden

Instruction No 30758077 Version 1.0 Part. No. 30756499

Mesh pocket, cargo compartment, side panel

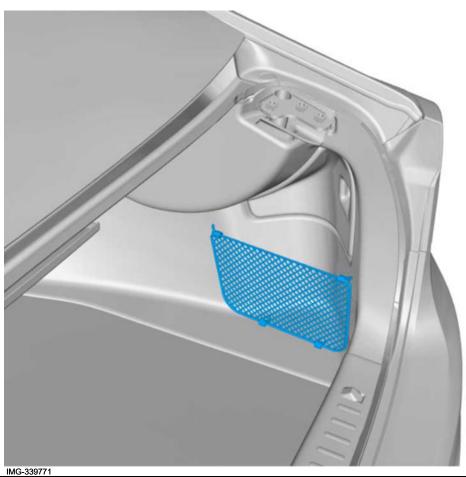

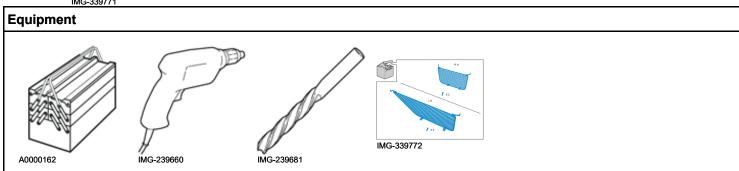

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION


Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

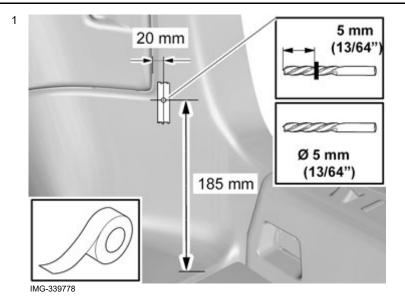


Mesh pocket right side

Apply the strips of tape as illustrated.


Make marks for drilling holes for the mesh pocket mountings.

Drill out the hole.

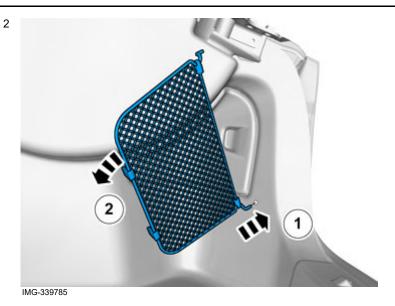


Insert the pocket's rear mounting in the hole in the panel and fold down.

Volvo Car Corporation Gothenburg, Sweden

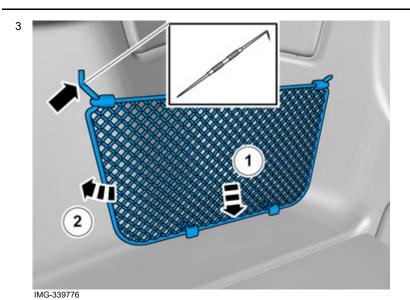


Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.

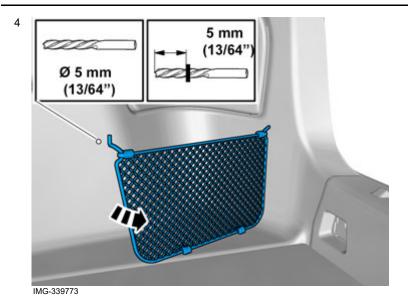

Move the front mounting to one side and drill the hole.

Volvo Car Corporation Gothenburg, Sweden

5

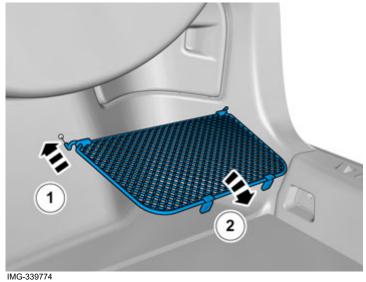

Insert the front mounting in the panel and fold down the mesh pocket.

Ø 3 mm (1/8")


5 mm

(13/64")


IMG-339775

Drill out the holes in the panel through the two clips.

Volvo Car Corporation Gothenburg, Sweden

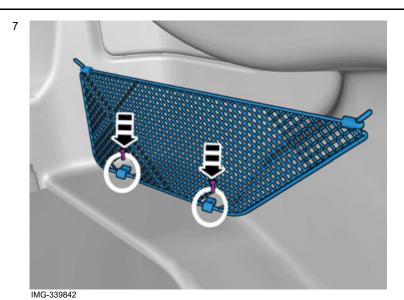

Tighten the mesh pocket's lower end

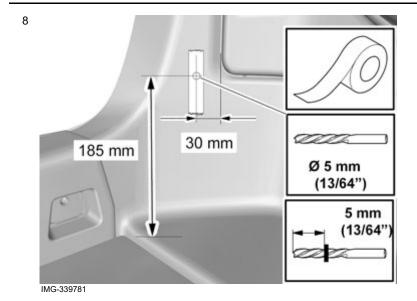


Mesh pocket left side


Apply the strips of tape as illustrated.

Make marks for drilling holes for the mesh pocket mountings. Drill out the hole.

Volvo Car Corporation Gothenburg, Sweden

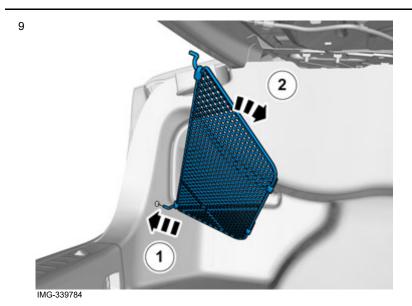

Insert the rear mounting in the panel and fold down the mesh pocket.

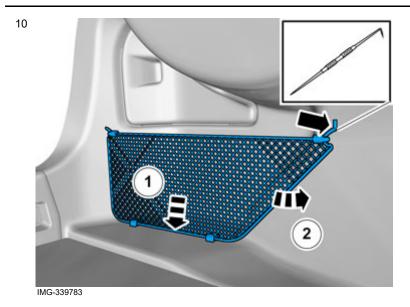

Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.


Mark the hole in the panel level with the middle of the radius of the bent wire frame.

Volvo Car Corporation Gothenburg, Sweden

IMG-339779


5 mm (13/64") Ø 5 mm (13/64")

Move the front mounting to one side and drill the hole.

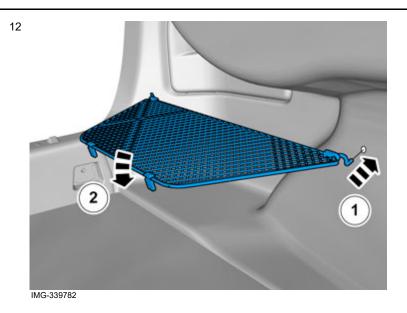


Insert the front mounting in the panel and fold down the mesh pocket.

Volvo Car Corporation Gothenburg, Sweden

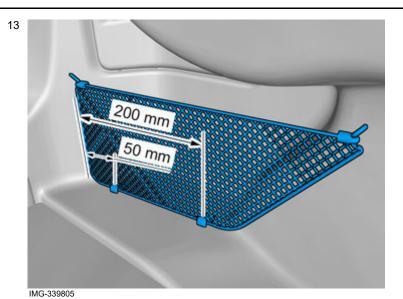


Applies to vehicles with control module for electric handbrake.


Measure and place the clips in the wire frame. Measure between the rear edge panel and centre.

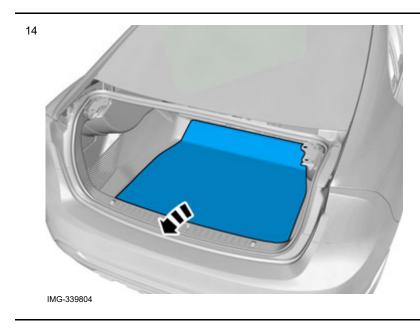

Volvo Car Corporation Gothenburg, Sweden

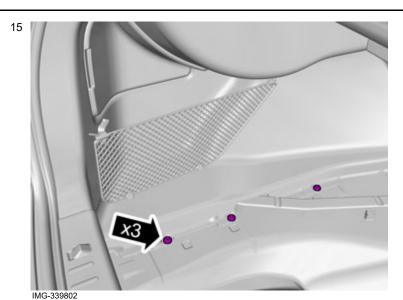


Remove the clips.

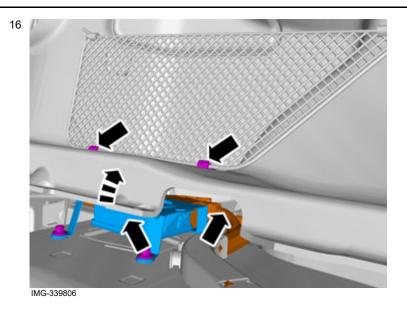


Lift up the panel and check that the clips are positioned so that the control module and cable harness are not drilled. Move the clips if necessary.


Reinstall the panel.

Volvo Car Corporation Gothenburg, Sweden

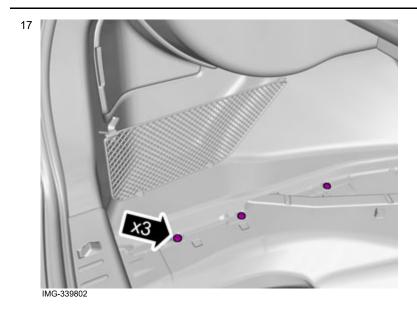

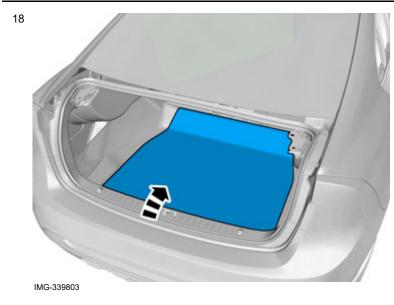


Volvo Car Corporation Gothenburg, Sweden

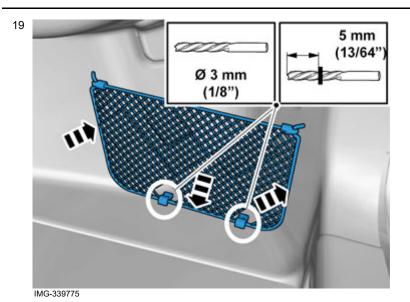

Applies to all models

Drill out the holes in the panel through the two clips.

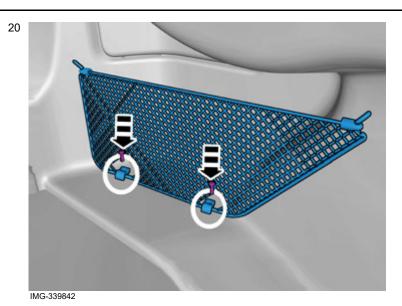

Tighten the mesh pocket's lower end.