

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
9172291	1.0	

Mounting kit for the front child seat

Equipment





A0000162



Nm
lbf.ft

A0000161

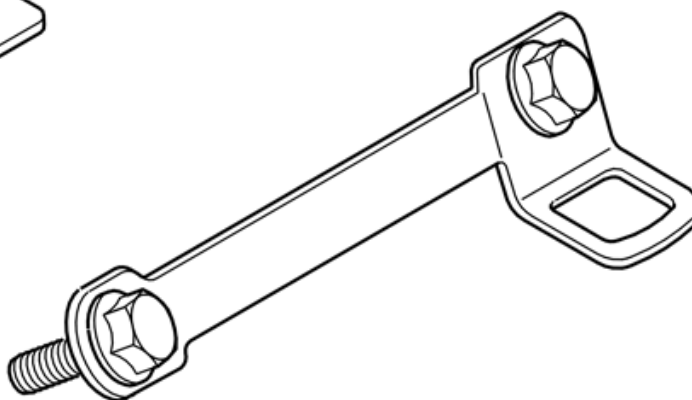

D8802862

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Note!

It is recommended that an authorised Volvo workshop carries out the installation.

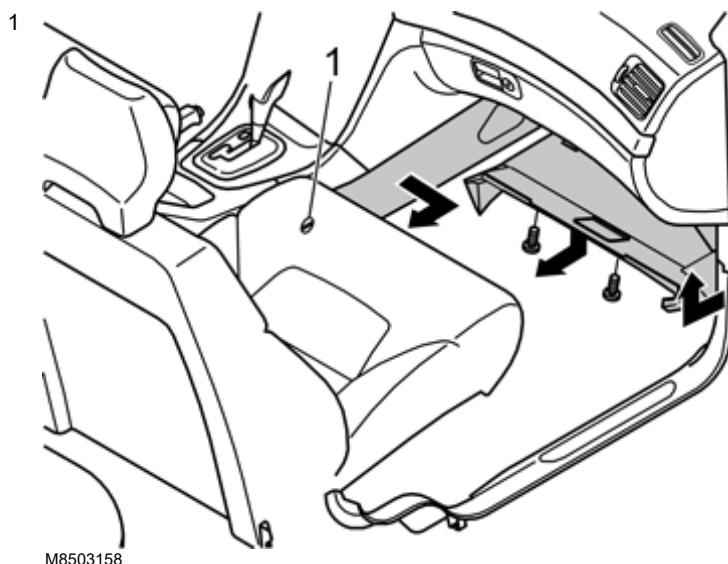


Move the right-hand seat as far back as possible

Remove the right-hand side panel from the centre console. Turn the clip (1) 90°. Pull out the rear section of the panel so that the panel can be pulled backwards

Remove the soundproofing panel on the right-hand side. Remove the two screws. Pry off the rear edge of the soundproofing panel so that the right-hand side releases and the soundproofing panel can be pulled downwards/backwards.


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

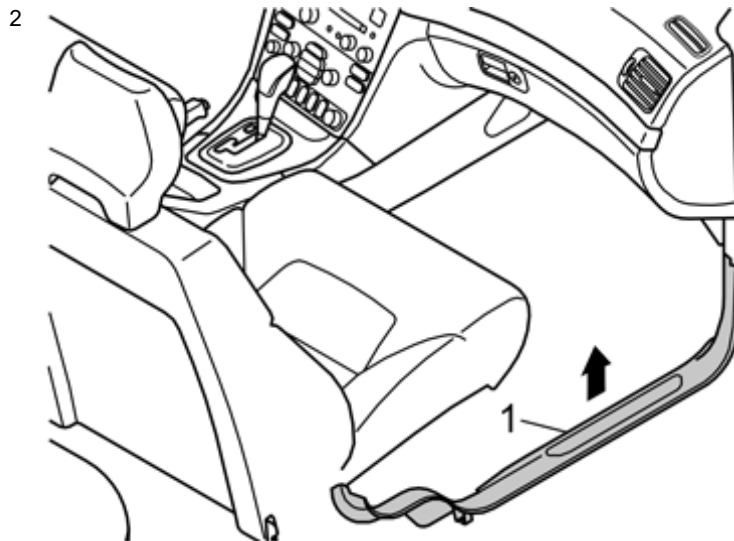

D8501872

Remove the sill trim panel (1) by pulling upwards. Twist the front section inwards and unhook the rear section from the B-post panel.

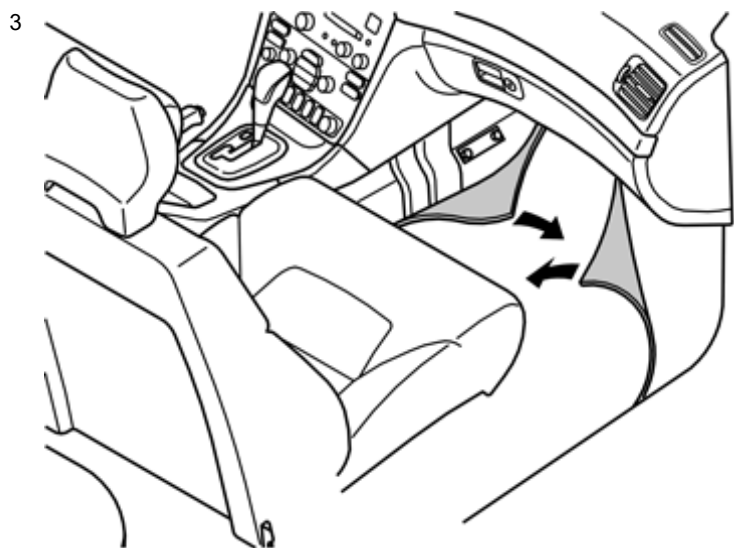


Push the floor carpet and insulation panel to one side.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4

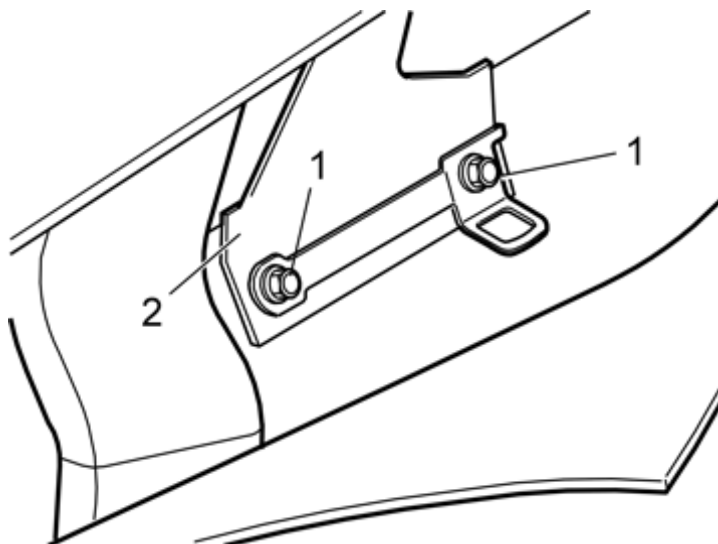


D8802863

Remove the two screws from the bracket (2) on the tunnel (the screws will not be reused)

Place the end mounting in position, Tighten using both screws (1). Tighten to 25 Nm (19 lbf. ft).

5

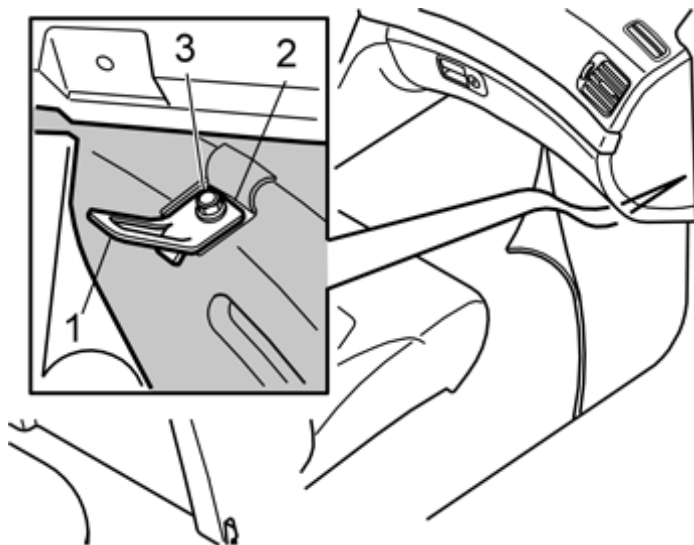

D8801776


Fold up the tab on the firewall

Remove the adhesive label covering the hole (2)

Install the mounting eyelet (1) using the screws (3) from the kit. Tighten to 25 Nm (19 lbf. ft).

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

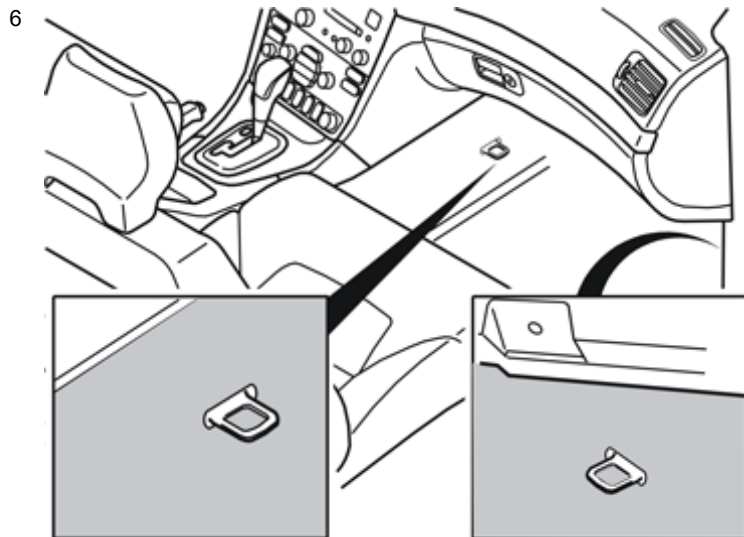

D8501876

Fold the insulation panel and floor carpet back into position so that the mounting eyelets protrude through the stamped grooves in the floor carpet.

7

Reinstall the tunnel panel
Reinstall the soundproofing panel
Reinstall the sill trim panel.