Volvo Car Corporation Gothenburg, Sweden

1.1


Instruction No 31338932 Version


Part. No.

31373768, 31408989, 31373462, 31373492, 31373493, 31373494, 31338931, 31338930, 31338929

Side scuff plate

Materials	
Designation	Part number
Isopropanol	1161721

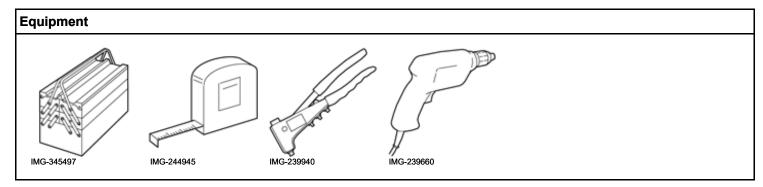




IMG-377501

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Conditions
2	When installing, the car must retain a temperature of 20 degree C.
	After installation, the car must not be washed for 48 hours
	After installation, the car must not be driven for 2 hours
	Color symbols

3

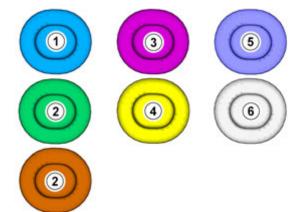

IMG-363036


Note!


This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- 1. Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

Applies to unpainted component

Volvo Car Corporation Gothenburg, Sweden

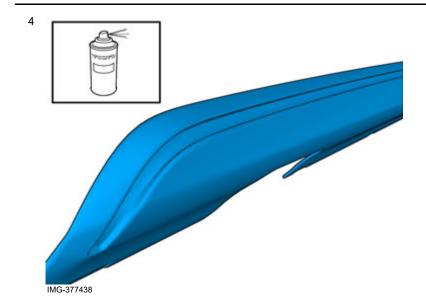

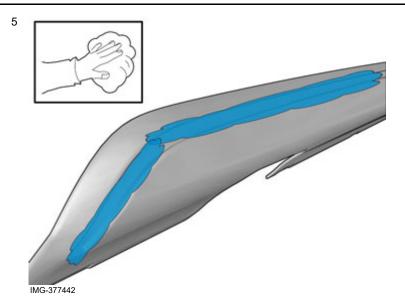


Caution! First the paint must dry after painting.

Clean the surface.

Use: 1161721, Isopropanol

Volvo Car Corporation Gothenburg, Sweden

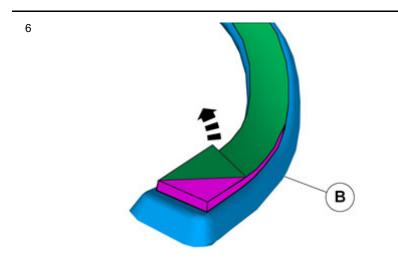


Remove the protective film.

IMG-377445

7

Install component that comes with the accessory kit.

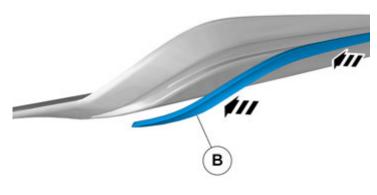


IMG-377446

All vehicles

Accessory installation

Volvo Car Corporation Gothenburg, Sweden


8

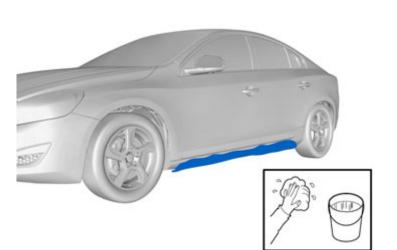

Clean the surface.

Allow to dry.

9 Remove the protective film.



IMG-355879

IMG-340411


Volvo Car Corporation Gothenburg, Sweden

10

Remove the protective film.




IMG-355880

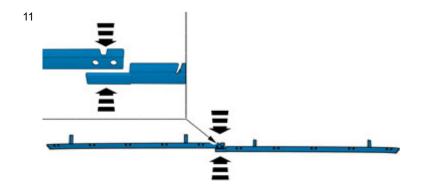


IMG-374598

Volvo Car Corporation Gothenburg, Sweden

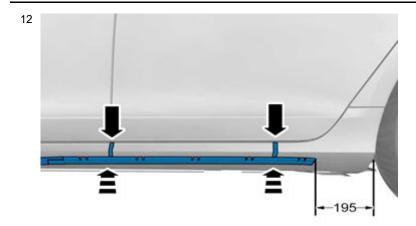



IMG-374452

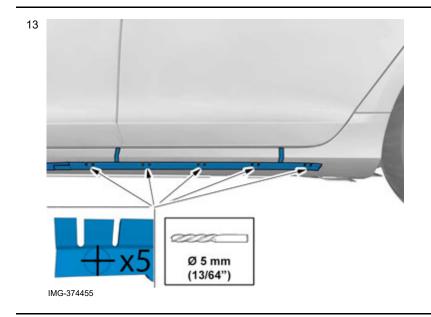


Drill the holes.

Volvo Car Corporation Gothenburg, Sweden

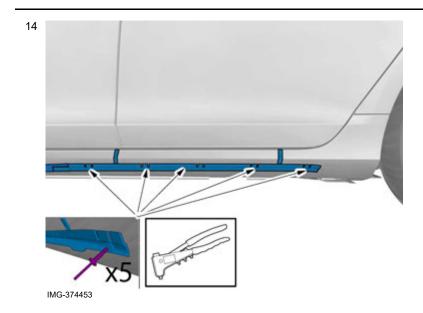


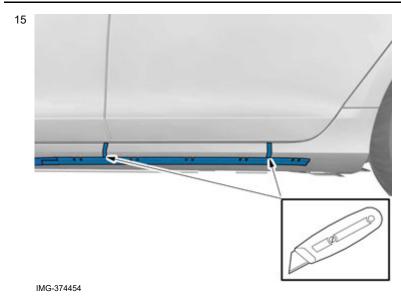


Volvo Car Corporation Gothenburg, Sweden

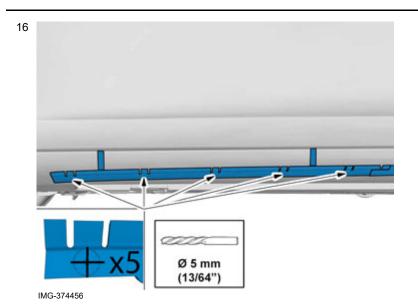


Drill the holes.

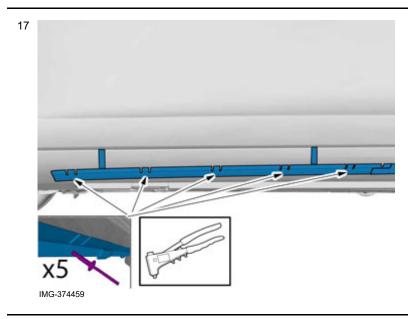


Volvo Car Corporation Gothenburg, Sweden

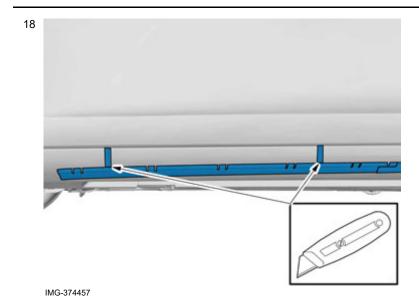

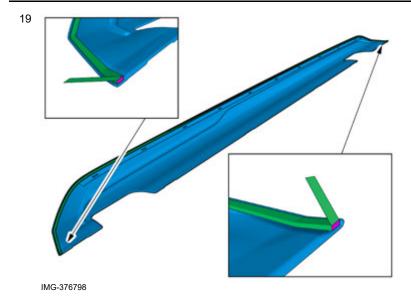

Fold the protective film forward


Volvo Car Corporation Gothenburg, Sweden

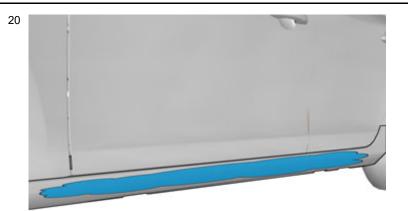


Clean the surface.

Use: 1161721, Isopropanol


IMG-376972

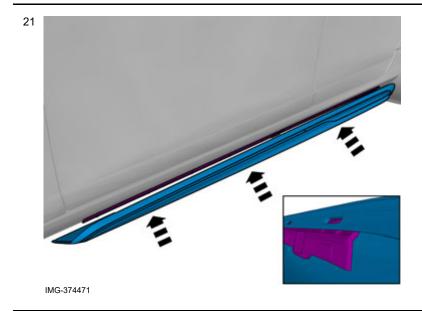

Volvo Car Corporation Gothenburg, Sweden

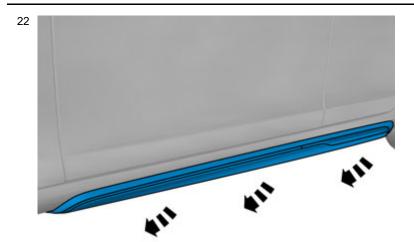


IMG-374473

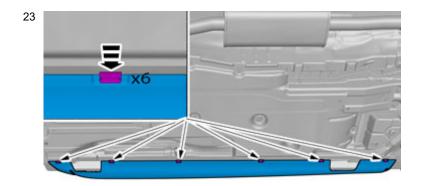

IMG-374476

Volvo Car Corporation Gothenburg, Sweden

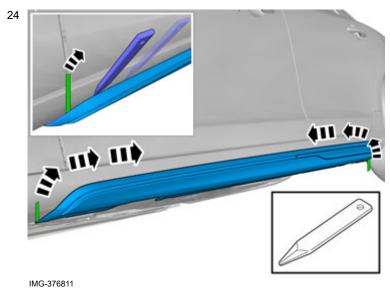

Caution! Pull carefully.

Remove the protective film.

Use: Interior trim remover

Hint

Press and apply pressure to the part over the tape for at least 20 seconds.

25

Repeat all method steps for the other side.