

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


Instruction No	Version	Part. No.
31428162	1.2	31399346

Mudflaps, rear



IMG-382756


Equipment

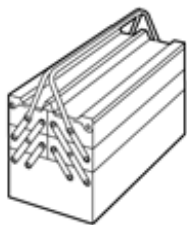

IMG-345497

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

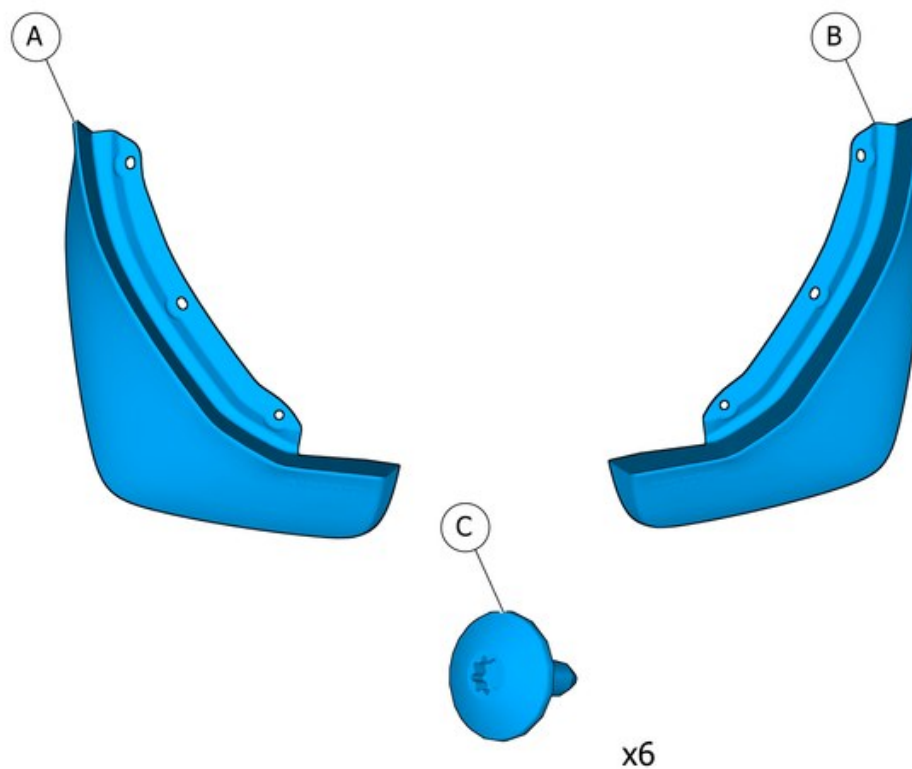

IMG-382758

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

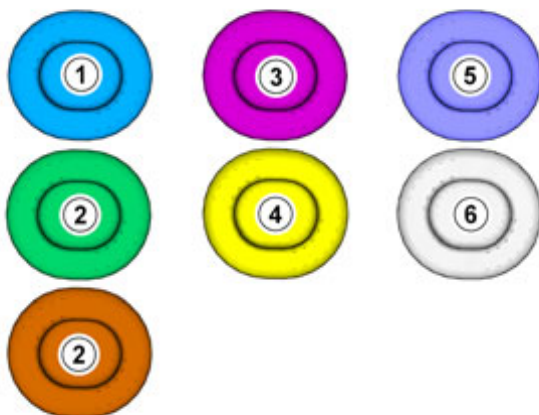

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.


1. Used for focused component, the component with which you will do something.
2. Used as extra colors when you need to show or differentiate additional parts.
3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
4. Used when the component is not fully removed from the vehicle but only hung to the side.
5. Used for standard tools and special tools.
6. Used as background color for vehicle components.

Removal

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

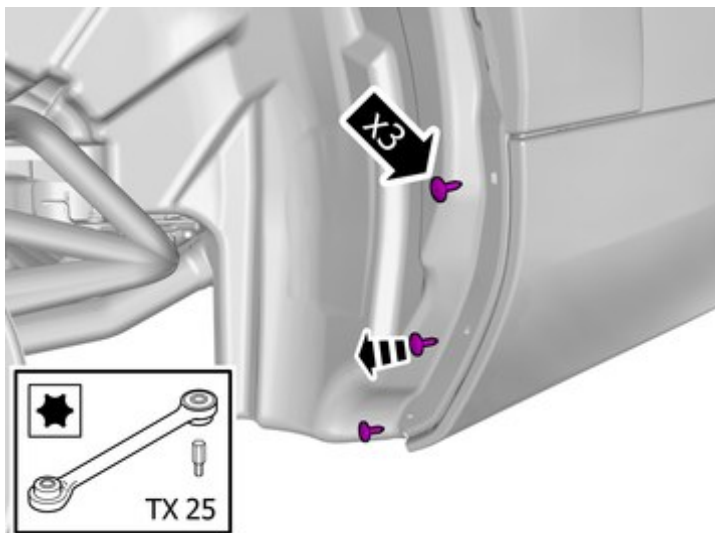


IMG-382759

Remove the screws.

Preparation

4

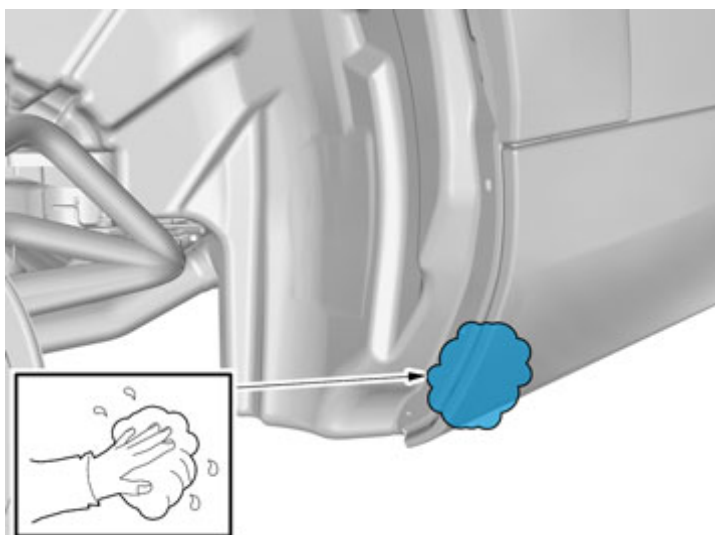

IMG-382760

Clean the surface.


Wipe dry.

Accessory installation

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


5

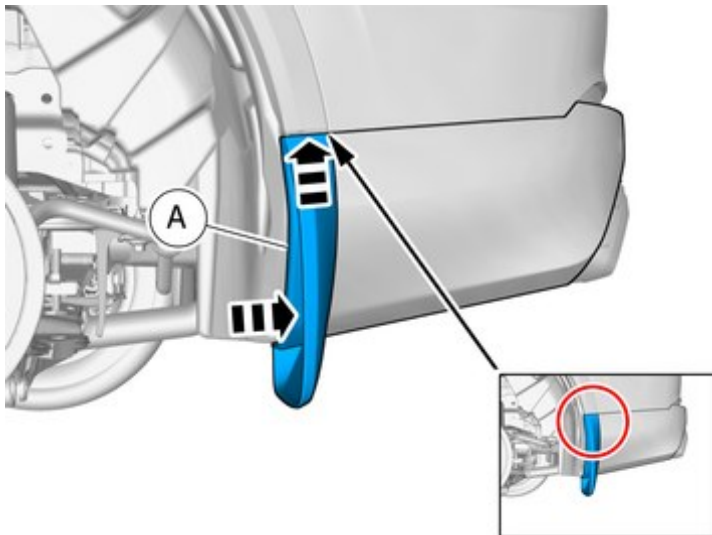

IMG-382762

Place the component where indicated in the graphic.

6

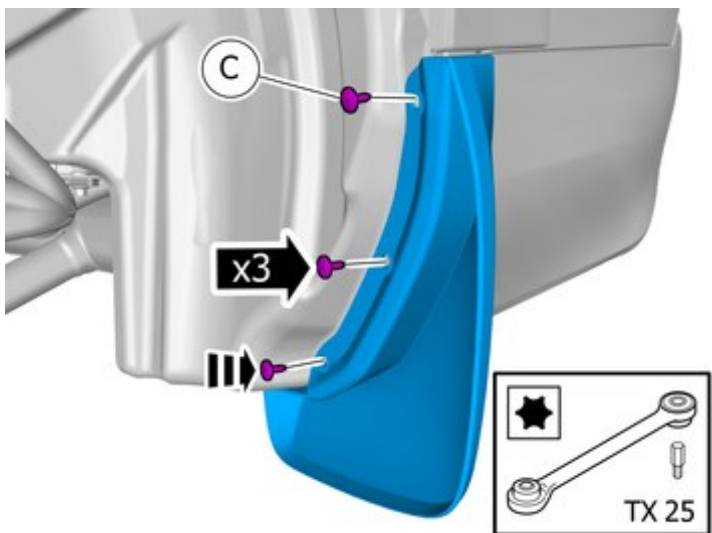

IMG-382763

Install the screws.

7

Repeat all method steps for the other side.