

Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.

 32273238
 1.1
 32273237

Body kit

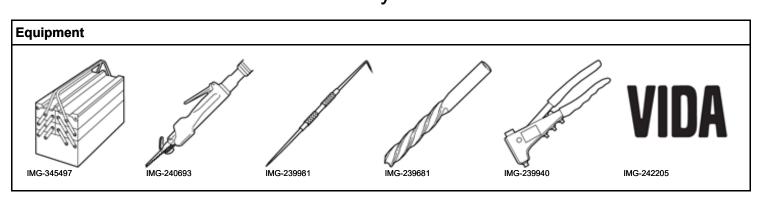

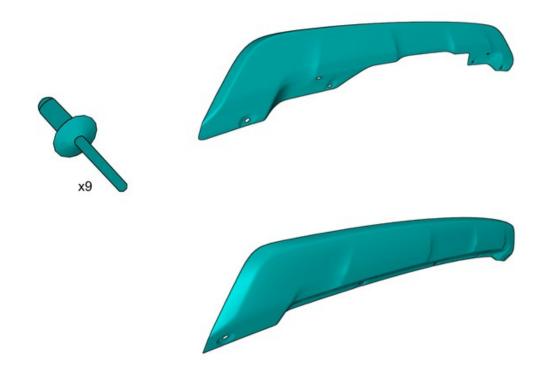

Volvo Car Corporation Gothenburg, Sweden


	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Color symbols
	<b>Note!</b> This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.
<ul> <li>3</li> <li>4</li> <li>5</li> <li>6</li> <li>7</li> <li>MG-40010</li> </ul>	<ol> <li>Used for focused component, the component with which you will do something.</li> <li>Used as extra colors when you need to show or differentiate additional parts.</li> <li>Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.</li> <li>Used when the component is not fully removed from the vehicle but only hung to the side.</li> <li>Used for standard tools and special tools.</li> <li>Used as background color for vehicle components.</li> </ol>

Volvo Car Corporation Gothenburg, Sweden




**Note!** Orientation view

IMG-464656

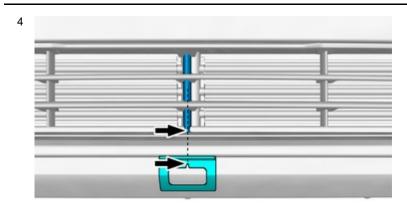


Place the component where indicated in the graphic.


Volvo Car Corporation Gothenburg, Sweden

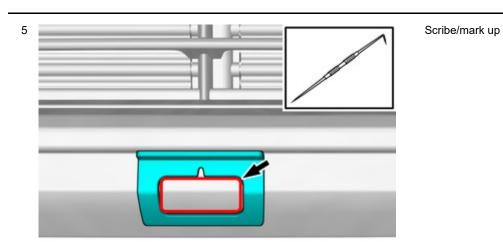

IMG-457246

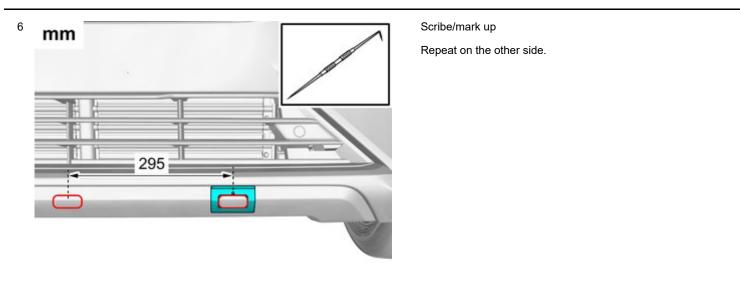


Volvo Car Corporation Gothenburg, Sweden

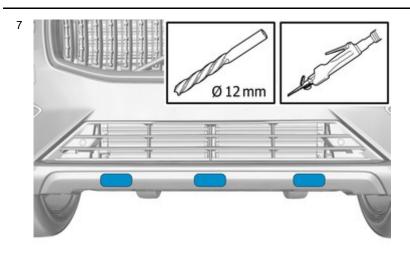

Caution! Make sure that the cutout does not exceed the marking.


Use a drill with the stated size Use: Air-powered air saw Cut out following the template.

IMG-457252

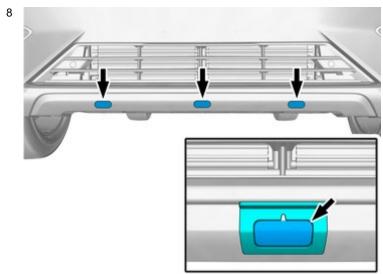


- Use the template in the installation instructions.
- Make sure that no material is inside the template.

Volvo Car Corporation Gothenburg, Sweden

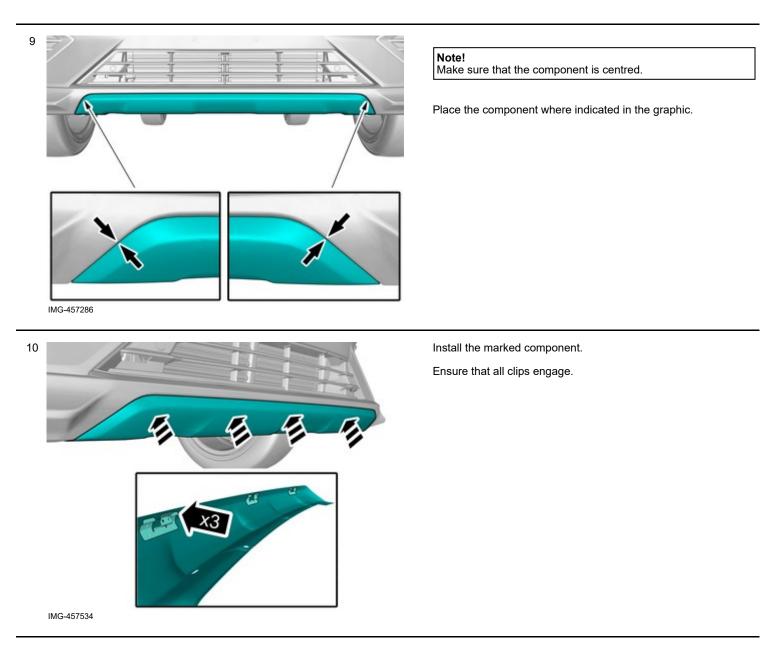


Volvo Car Corporation Gothenburg, Sweden

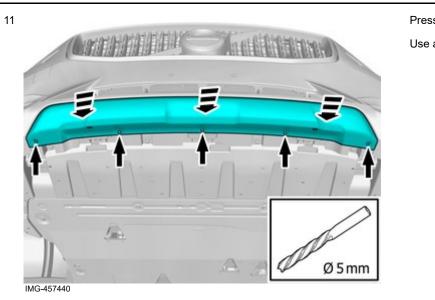


Press the marked component.

Use a drill with the stated size


12

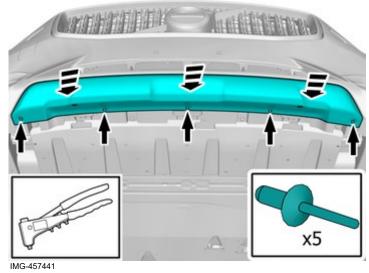

Volvo Car Corporation Gothenburg, Sweden

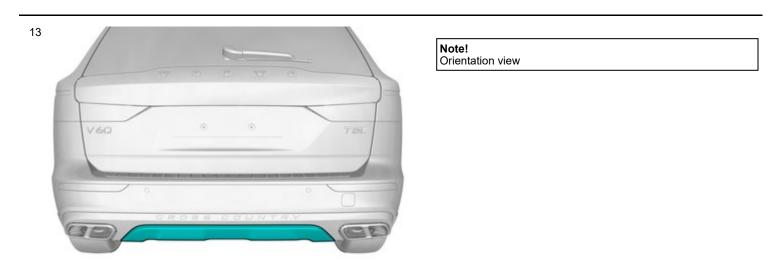



IMG-464653

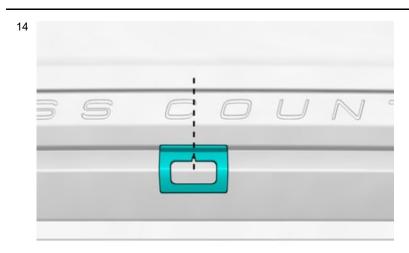


Place the component where indicated in the graphic.

Volvo Car Corporation Gothenburg, Sweden

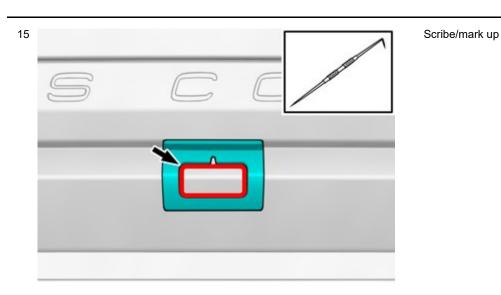

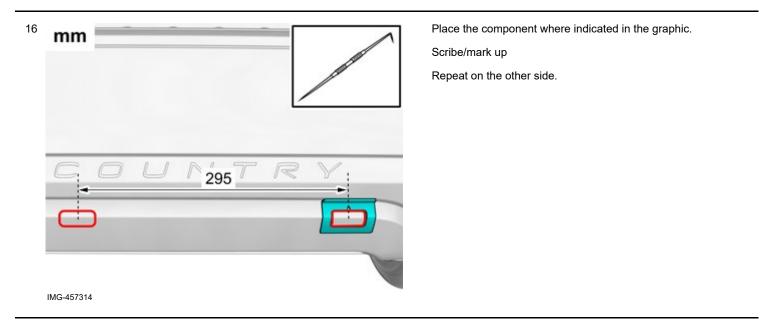


Volvo Car Corporation Gothenburg, Sweden

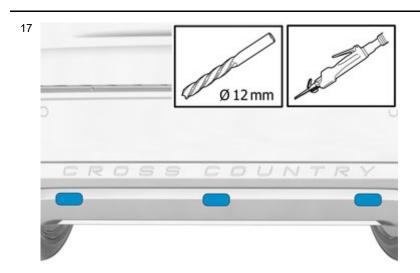

Caution! Make sure that the cutout does not exceed the marking.

Use a drill with the stated size Use: Air-powered air saw Cut out following the template.

IMG-456900

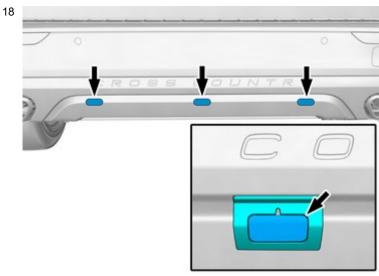


Use the template in the installation instructions.

Remove the marked part.

Make sure that no material is inside the template.

Volvo Car Corporation Gothenburg, Sweden

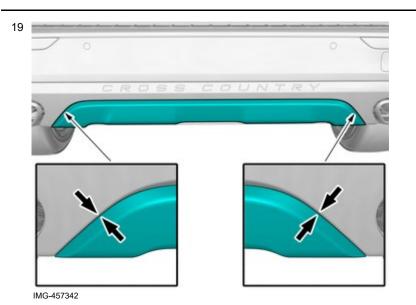

D)

**Note!** Make sure that the component is centred.


Place the component where indicated in the graphic.

Install the marked component. Ensure that all clips engage.

IMG-457536


20

Volvo Car Corporation Gothenburg, Sweden

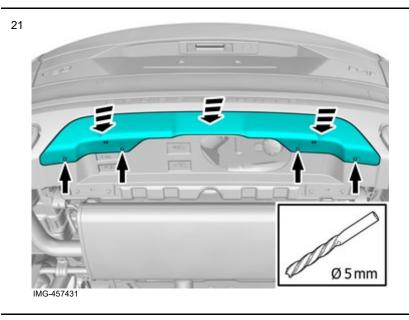

- Press the marked component.
- Use a drill with the stated size

22

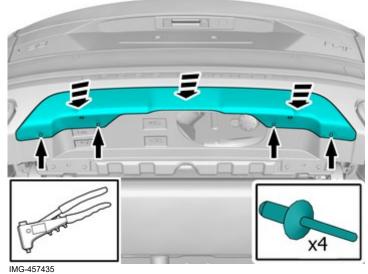

Vehicles with Foot movement detection (FMDM)

Volvo Car Corporation Gothenburg, Sweden

