


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


Instruction No 30796656
Version 1.2
Part. No. 30764294

Mudflaps, front

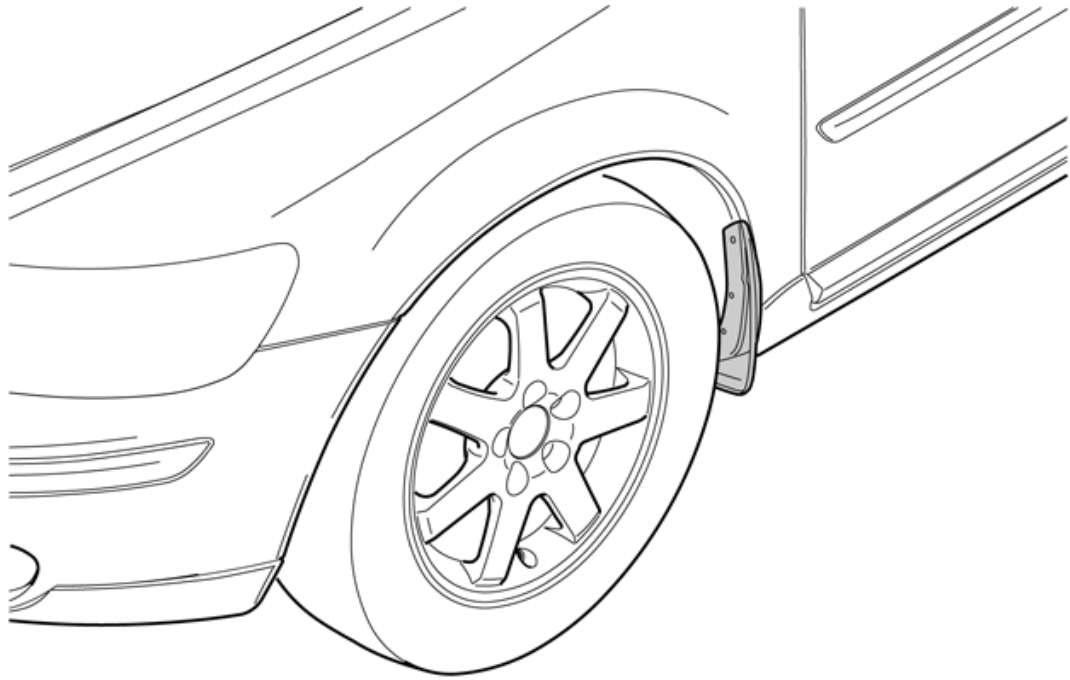

IMG-260643

Equipment

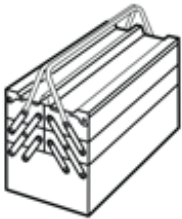

A0000162




IMG-239660



IMG-239940

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

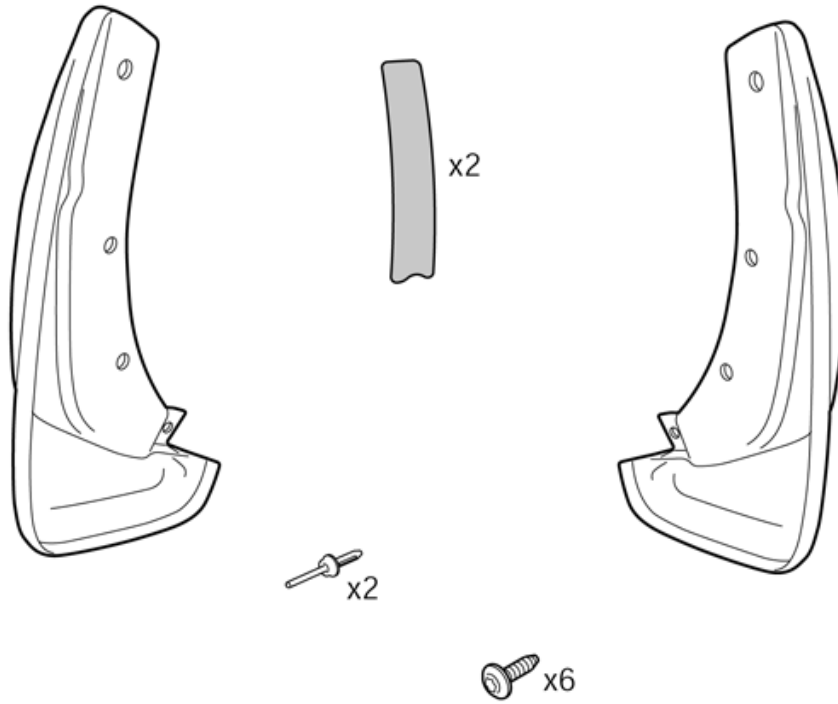

IMG-260642

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:	Issue:	Kit no:
Comments:.....		
.....		
.....		
.....		

From:	
Address:	
Telephone:	
Telefax:	

IMG-213320

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

1

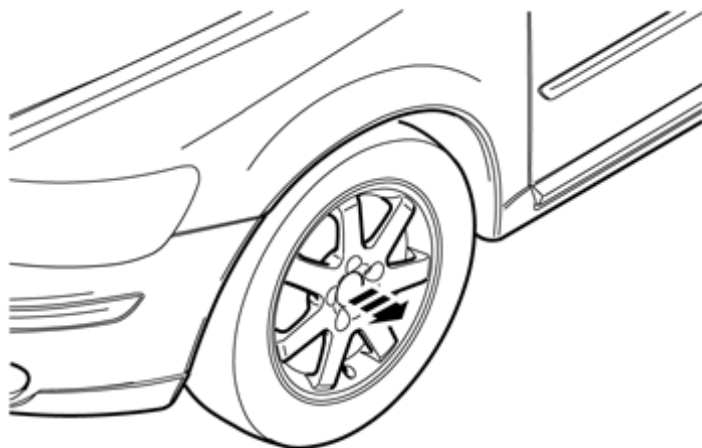


Remove the front wheels.

IMG-260635

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

2A

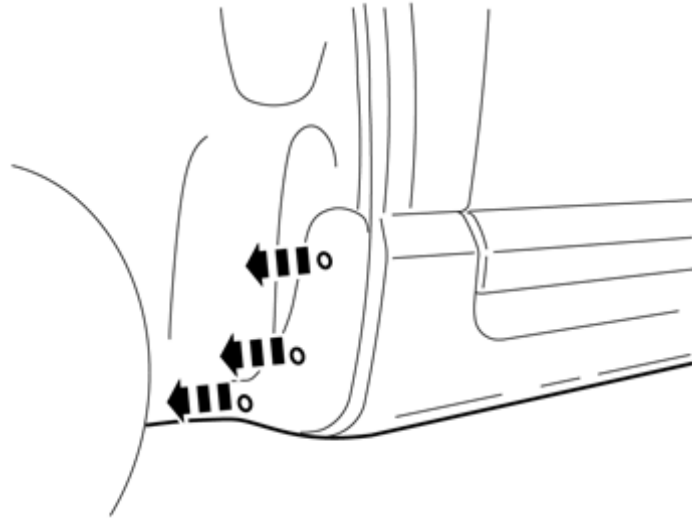

IMG-260634

Illustration A

Remove the three screws at the rear edge of the wheel arch.


Illustration B

Applies to cars with painted door sill panels

Remove the three screws at the rear edge of the wheel arch.


Remove the stone-chip protection. It shall not be re-used.

2B

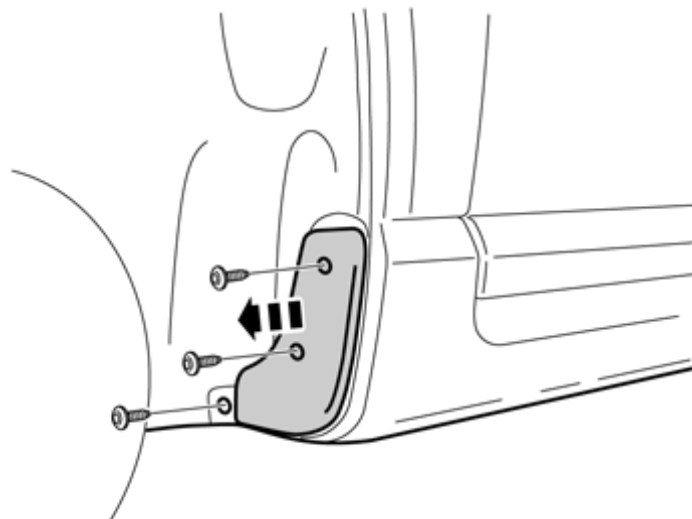

IMG-264343

3

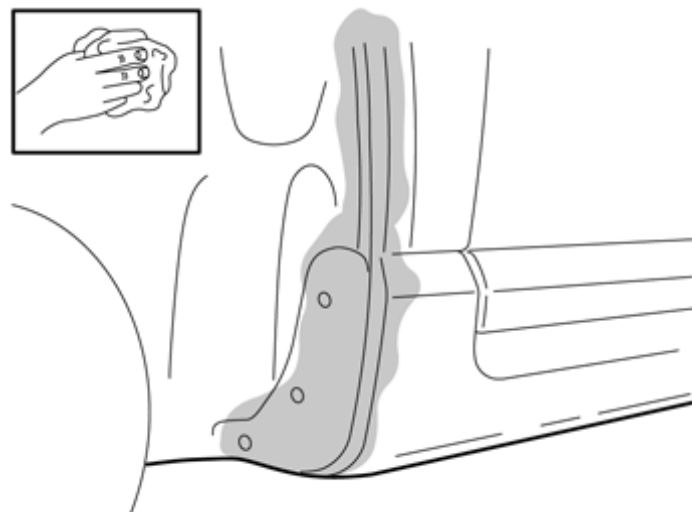


IMG-260640

Clean as illustrated.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


4

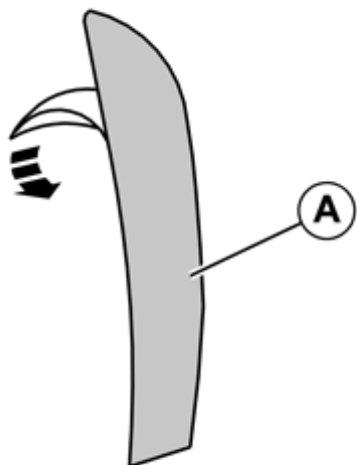

Remove the backing paper from the tape (A).

IMG-221680

5

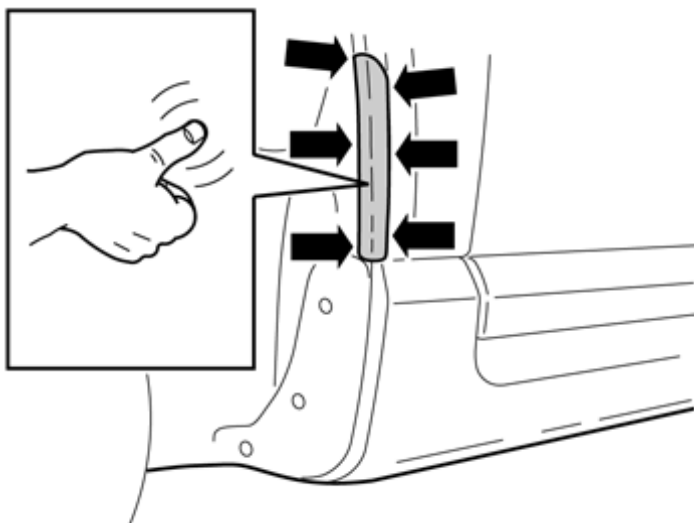


Position as illustrated.

IMG-260641

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6

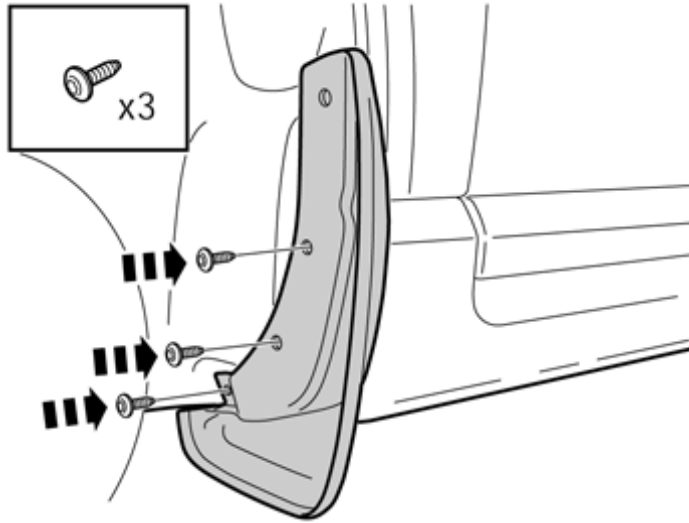


IMG-260636

Install:

the mudflap
the new screws.
Tighten the screws.

7

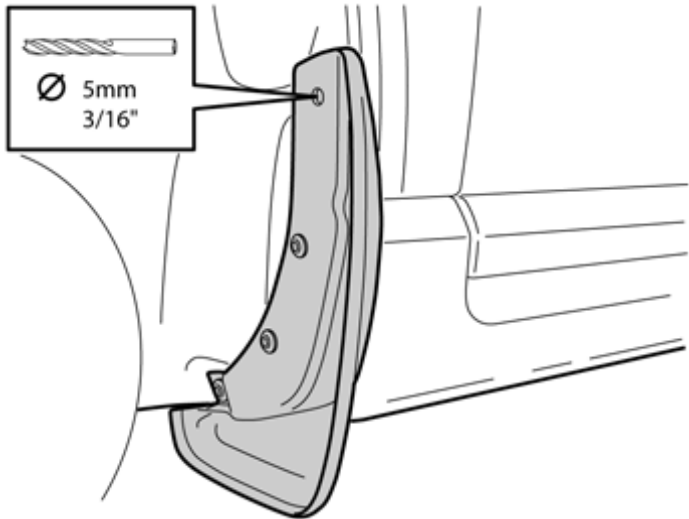


IMG-260637

Drill a new 5 mm (3/16) hole at the marking.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


8

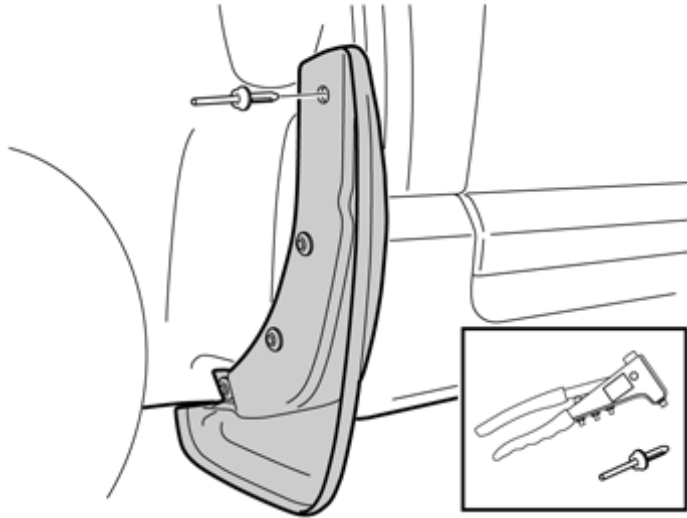

IMG-260638

Secure the pop rivet.

9

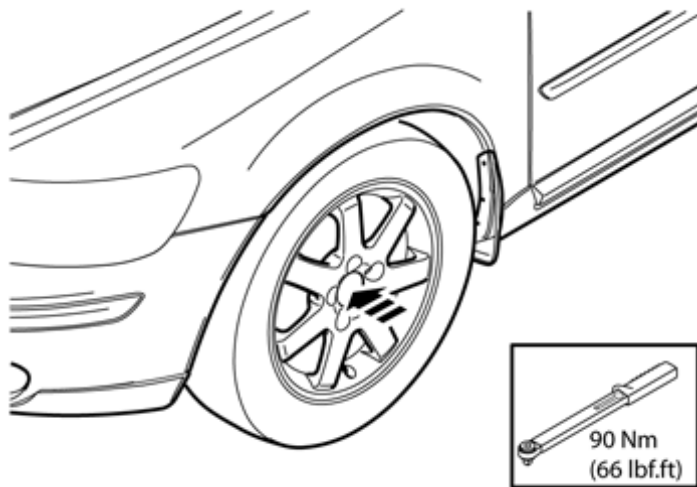

IMG-260639

Install the front wheel.

Tighten to the correct torque.