
Volvo Car Corporation Gothenburg, Sweden

Instruction No 31359353 Version 1.1 Part. No.

31373766, 31373456, 31359368, 31373458, 31373455, 31359366


Bumper bar, front bumper

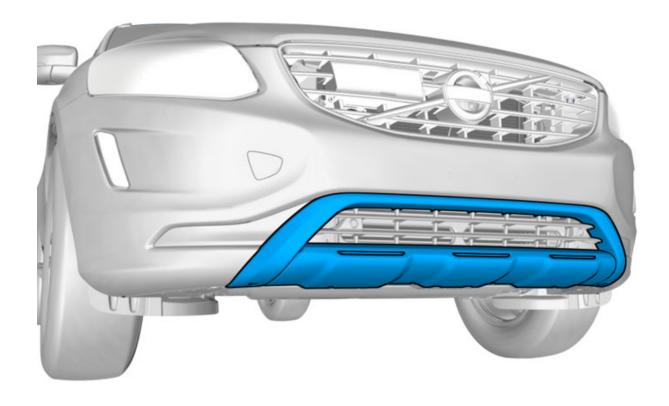


IMG-375145

Materials	
Designation	Part number
Isopropanol	1161721

Equipment

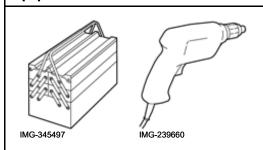

Volvo Car Corporation Gothenburg, Sweden




IMG-375166

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation. Notifications and warning texts are for your safety and to
	minimise the risk of something breaking during installation. Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Further information
2	When installing, the car must retain a temperature of 20 degrees C.
	Color symbols

3

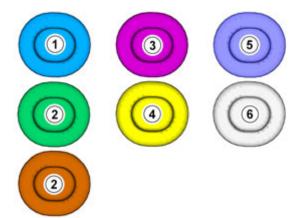

IMG-363036


Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.


- 1. Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used when the component is not fully removed from the vehicle but only hung to the side.

Applies to unpainted component

Volvo Car Corporation Gothenburg, Sweden

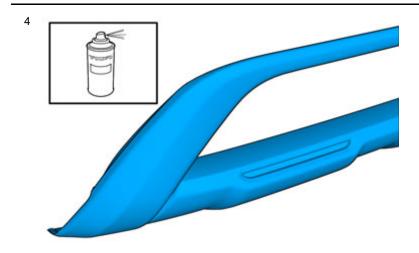

IMG-377449

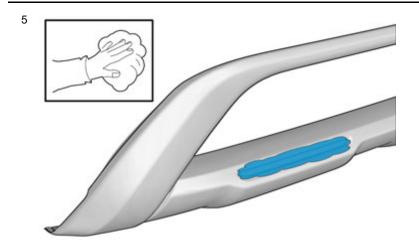

Caution! First the paint must dry after painting.


Clean the surface.

Use: 1161721, Isopropanol

IMG-377450

Volvo Car Corporation Gothenburg, Sweden


Remove the protective film.

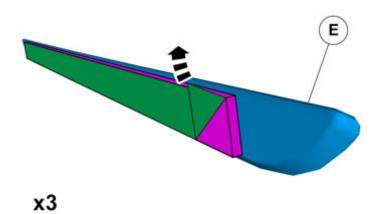

IMG-377453

11110 07740

6

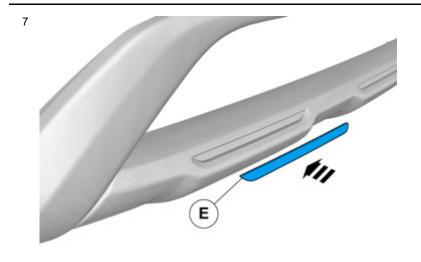

Install component that comes with the accessory kit.

IMG-377451


All vehicles

Removal


Volvo Car Corporation Gothenburg, Sweden

8

Remove the screws.

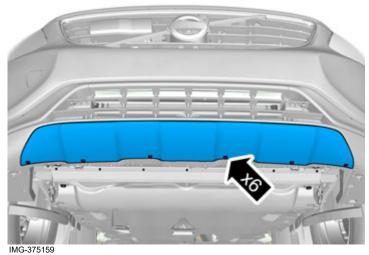

11010 07010

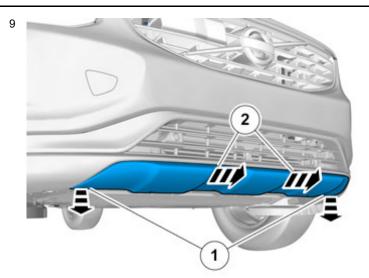


Remove the panel.

IMG-375160


Accessory installation

Volvo Car Corporation Gothenburg, Sweden

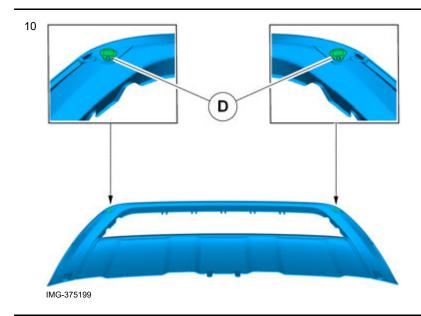


11


Remove the protective film.

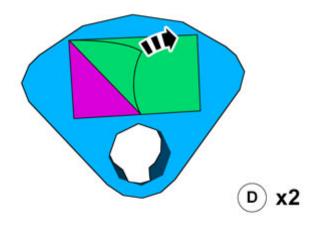


IMG-375204


Volvo Car Corporation Gothenburg, Sweden

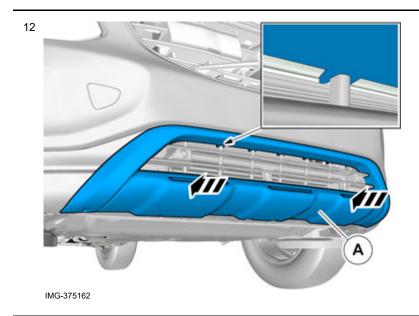

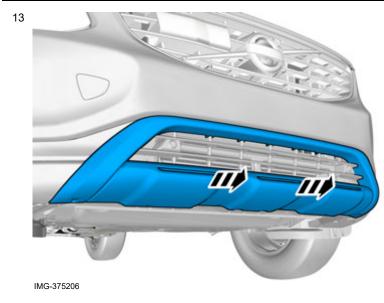

Volvo Car Corporation Gothenburg, Sweden

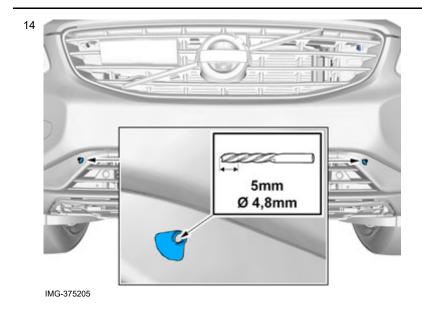

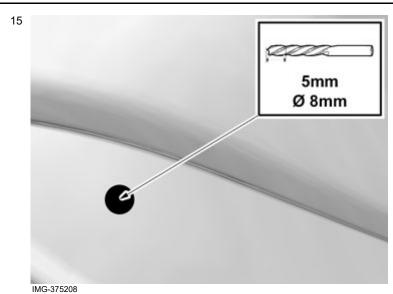


Drill the holes.


Volvo Car Corporation Gothenburg, Sweden

16


Install the clips as illustrated.

Fold the protective film forward

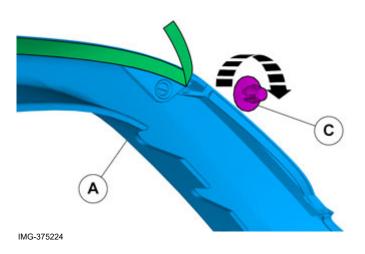

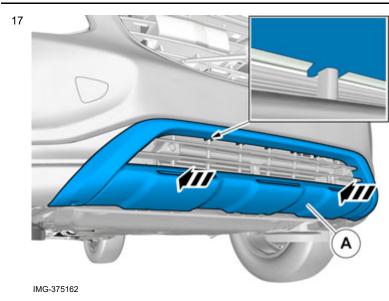


Volvo Car Corporation Gothenburg, Sweden

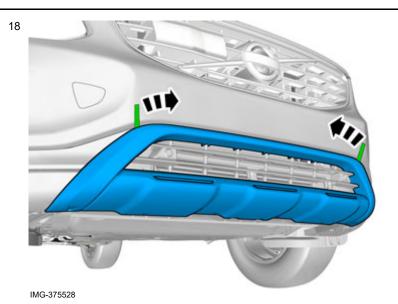

HintPress and apply pressure to the part over the tape for at least 20 seconds.

19

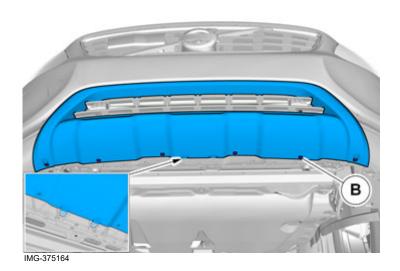

Install the screws.

Note position of components.