Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
30796656	1.2	30764294

Mudflaps, front

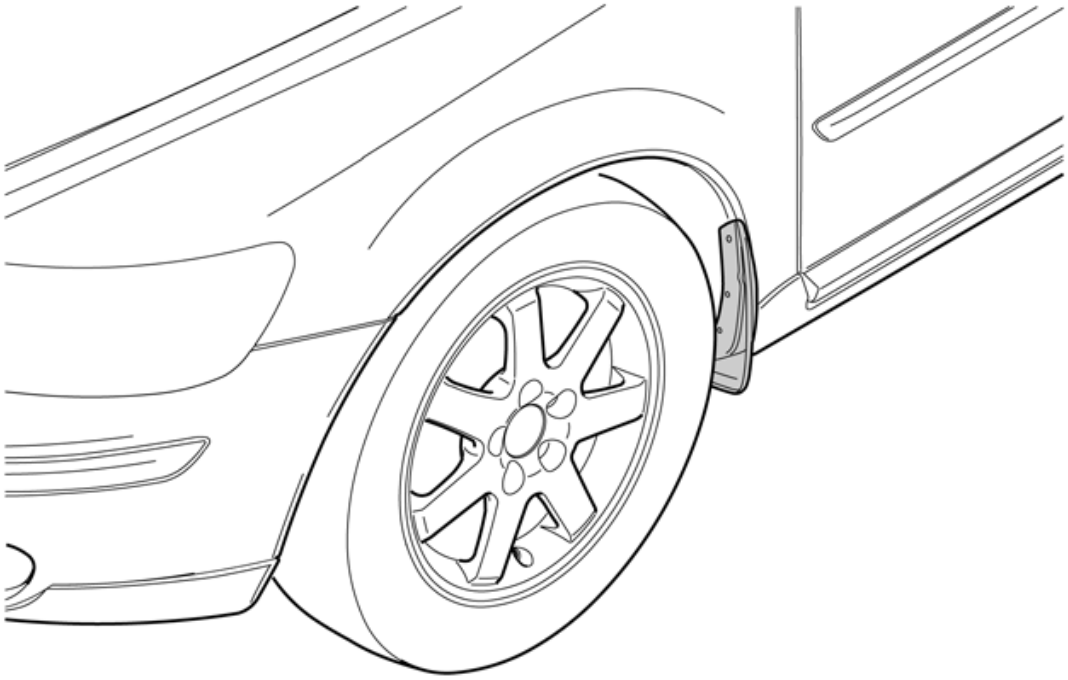

IMG-260643

Equipment

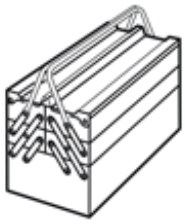

A0000162

IMG-239660

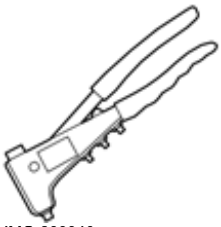

IMG-239940

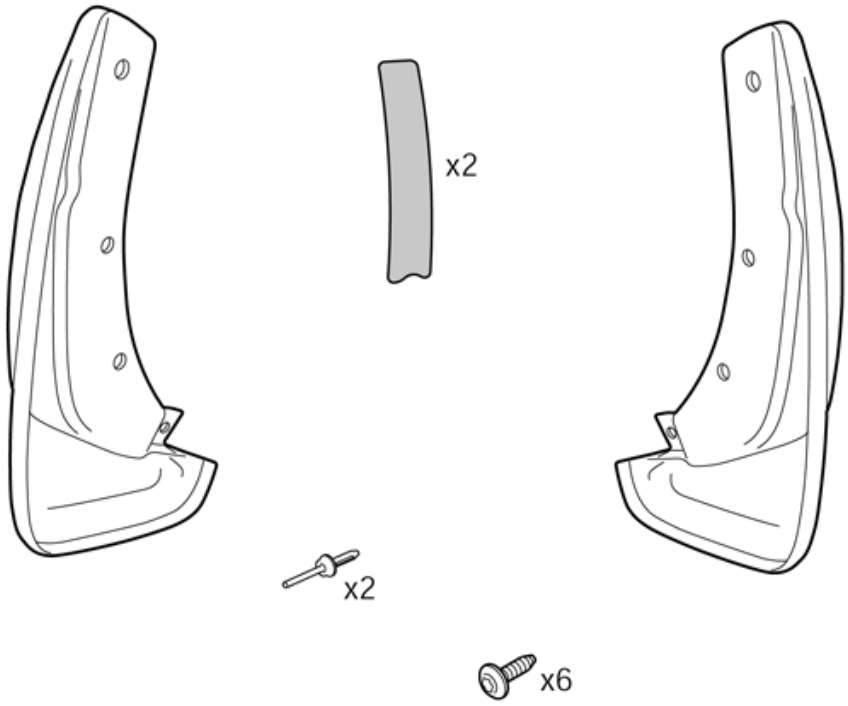

IMG-260642

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:	Issue:	Kit no:

Comments:.....

.....

.....

.....

From:	
Address:	
Telephone:	
Telefax:	

IMG-213320

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

1

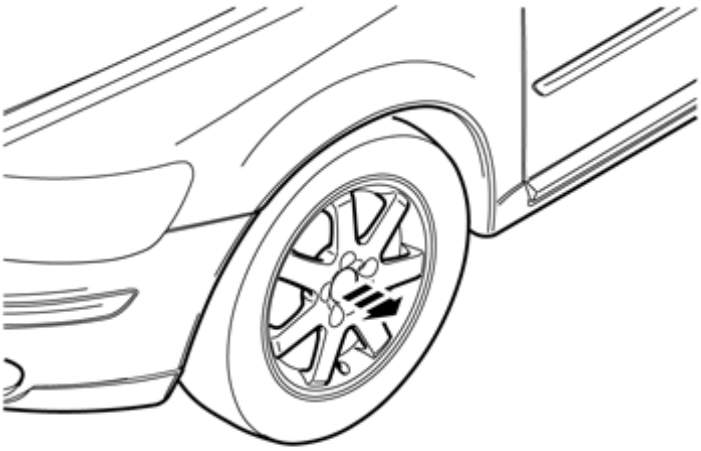

IMG-260635

Remove the front wheels.

2A

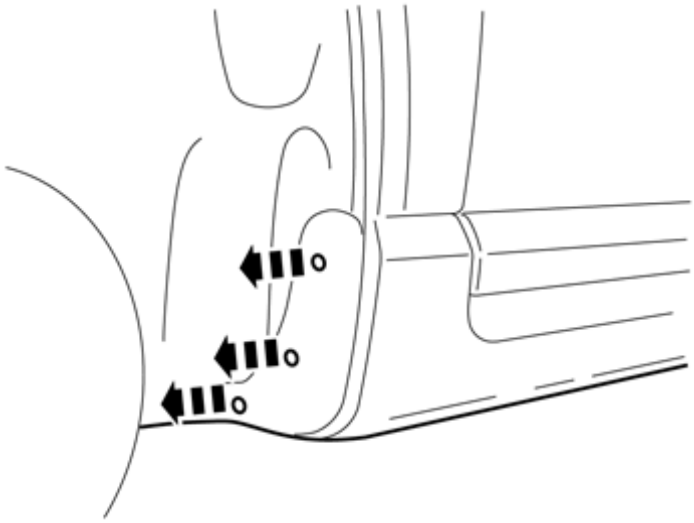

IMG-260634

Illustration A

Remove the three screws at the rear edge of the wheel arch.

Illustration B

Applies to cars with painted door sill panels

Remove the three screws at the rear edge of the wheel arch.

Remove the stone-chip protection. It shall not be re-used.

2B

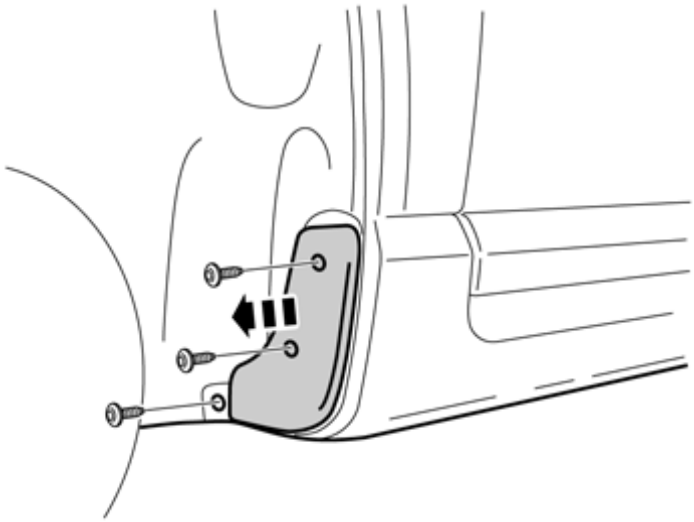

IMG-264343

3

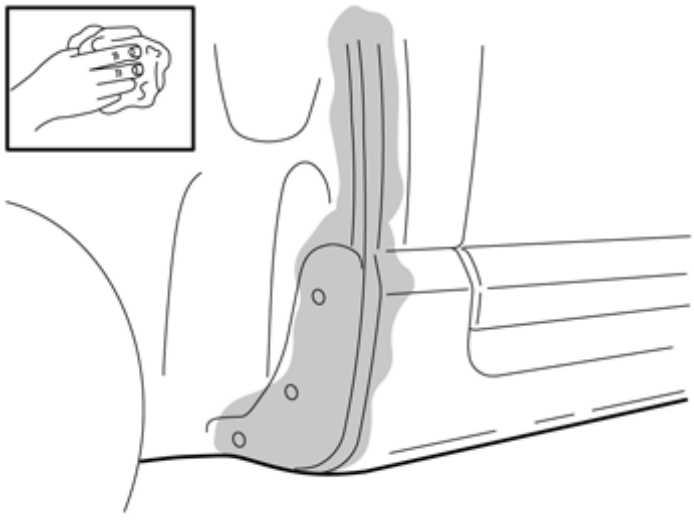

IMG-260640

Clean as illustrated.

4

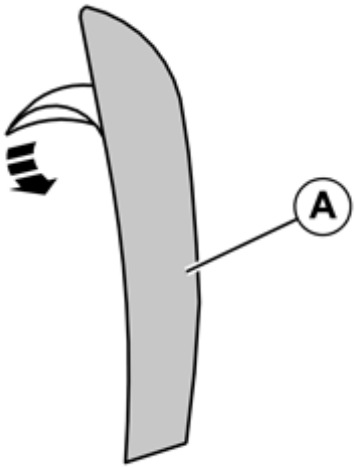

IMG-221680

Remove the backing paper from the tape (A).

5

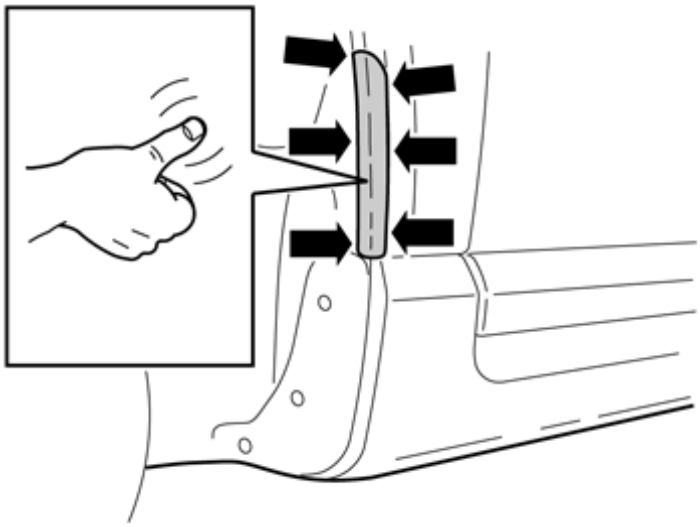

IMG-260641

Position as illustrated.

6

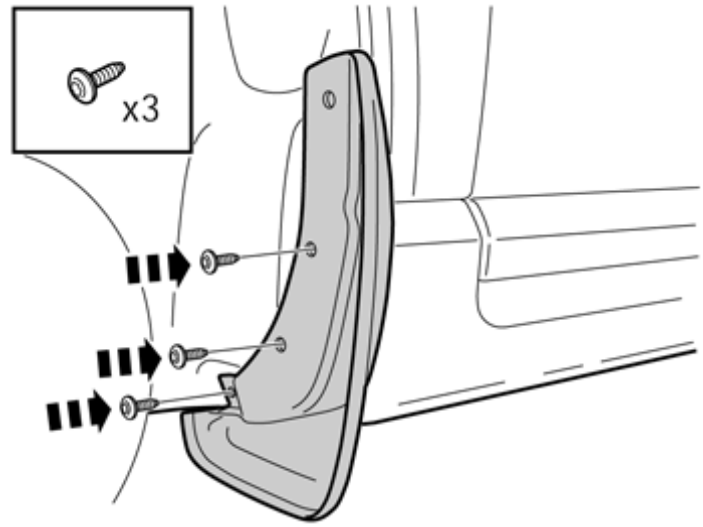

IMG-260636

Install:

the mudflap

the new screws.

Tighten the screws.

7

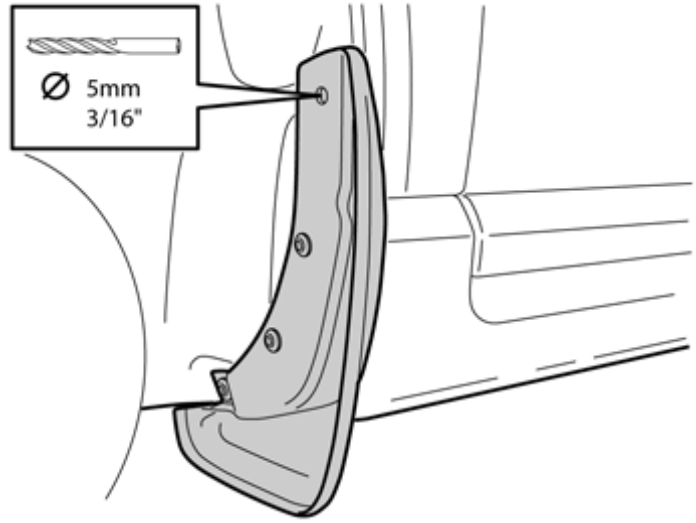

IMG-260637

Drill a new 5 mm (3/16) hole at the marking.

8

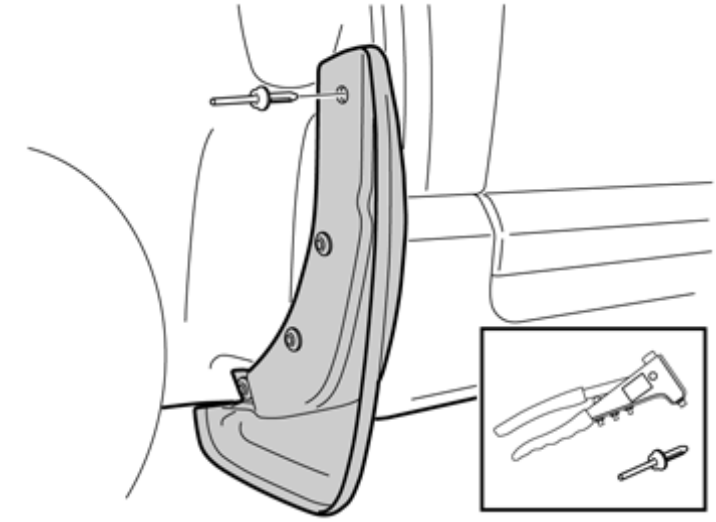

IMG-260638

Secure the pop rivet.

9

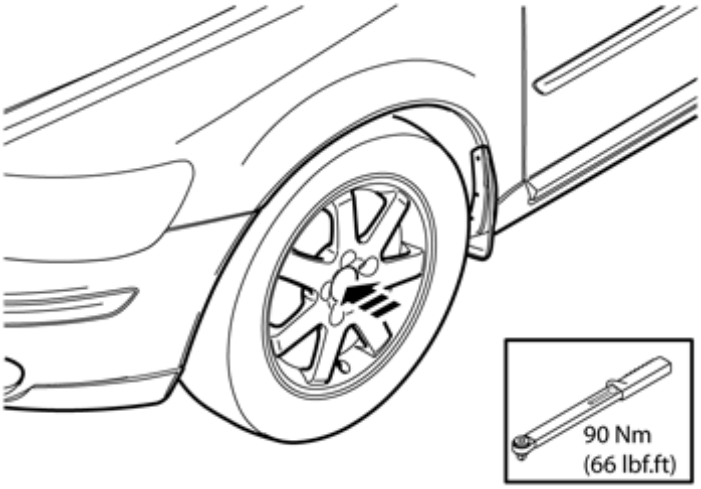

IMG-260639

Install the front wheel.

Tighten to the correct torque.