

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

**Instruction No**  
30653770

**Version**  
1.4


**Part. No.**  
30653768, 30721694

## Luggage compartment net

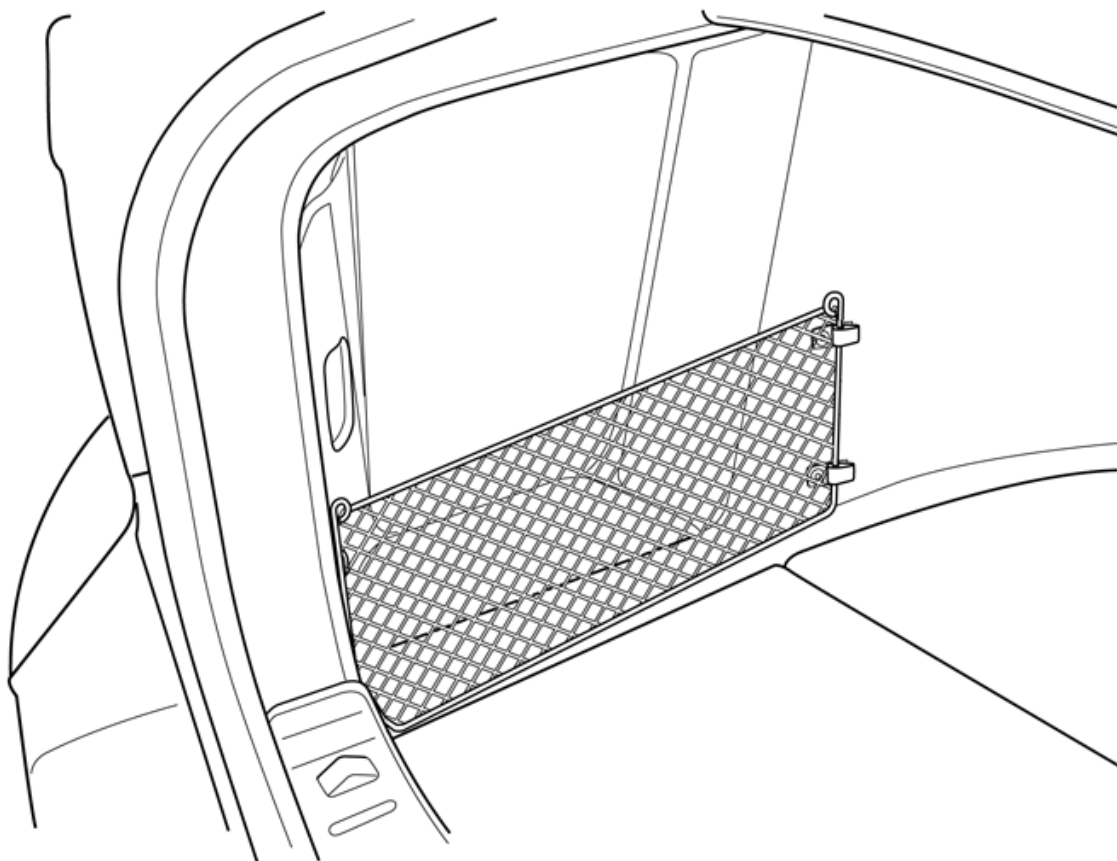

IMG-240580

### Equipment

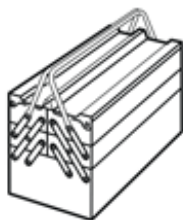

A0000162



A0000172

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden



X4



X4

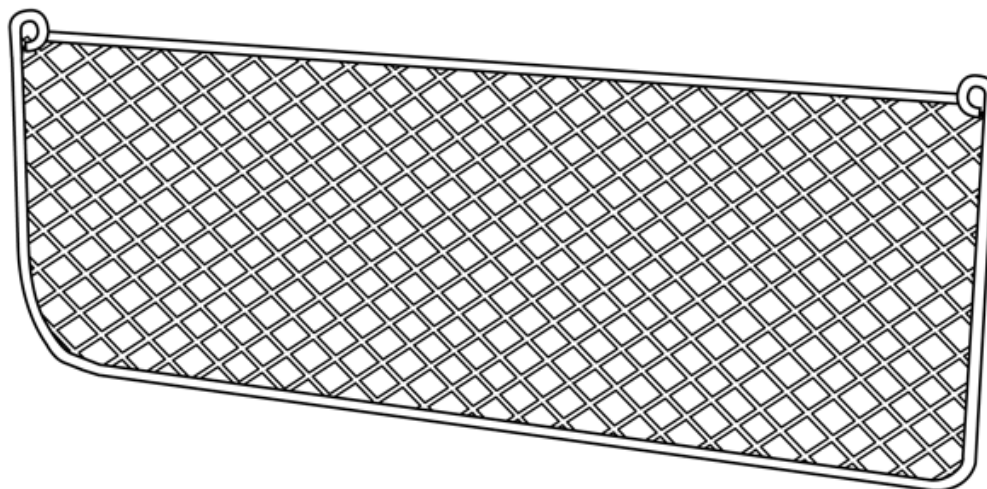

IMG-240582

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## INTRODUCTION

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.


1

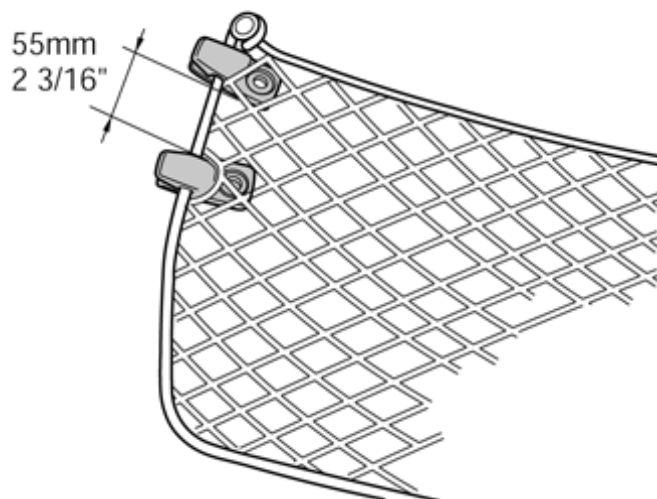

IMG-245880

Take the net from the kit and press two of the clips into the rear end panel. The upper clip should be high up on the end panel and the lower as per specified measurements.

2

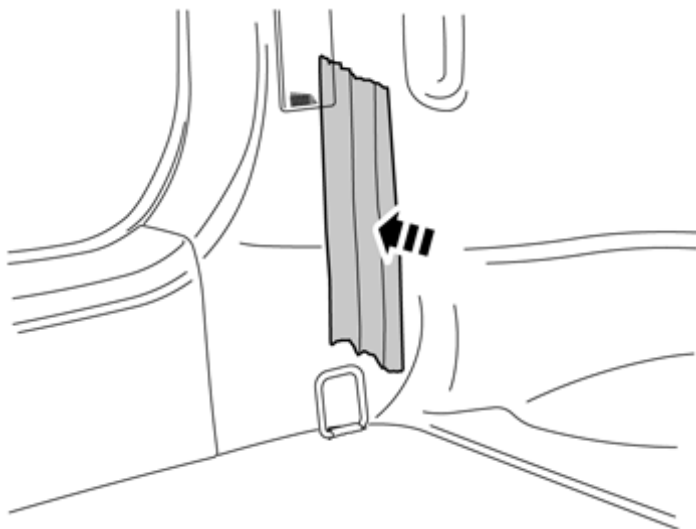


IMG-245881

Affix a strip of tape in the rear edge of the cargo compartment's left panel as illustrated.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

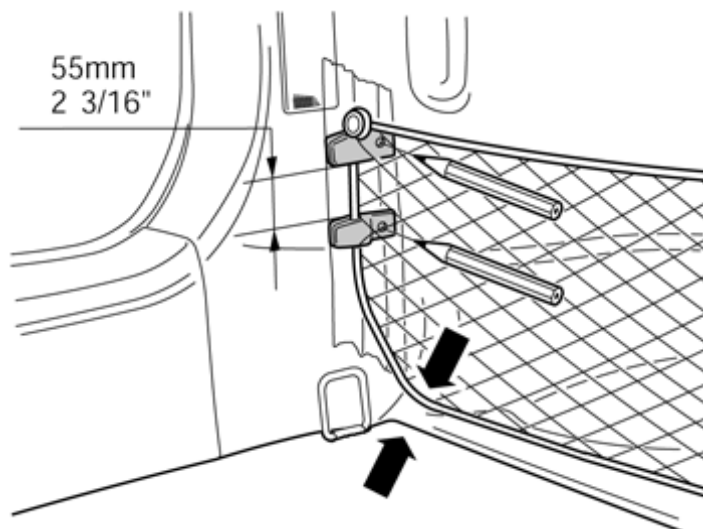


IMG-245882

Position the rear end panel of the net against the rear edge of the side panel and position the front end panel against the side of the side panel so that the moveable part of the cargo compartment mat does not catch the rear net end when it is raised.

Use a pen to make a mark on the tape strip through the holes in the clips.


4

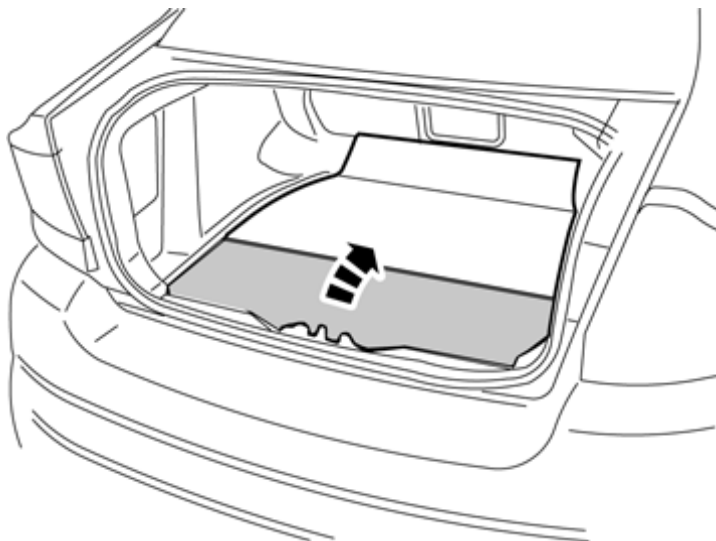


IMG-240584

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

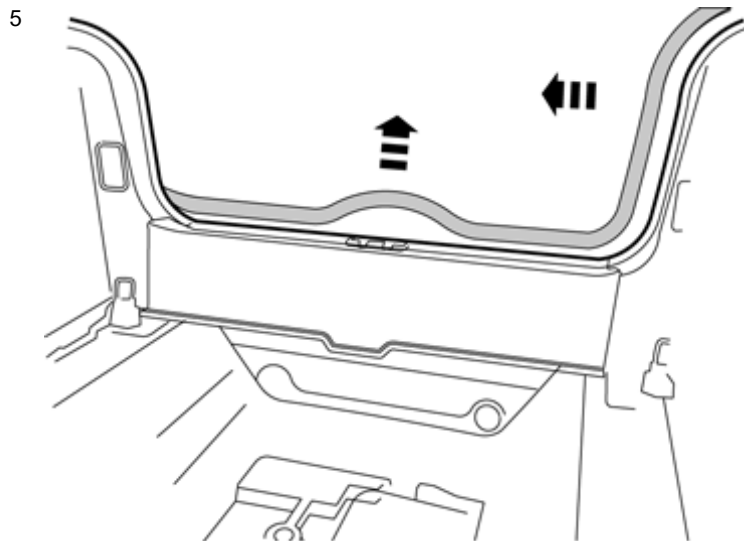

IMG-240585

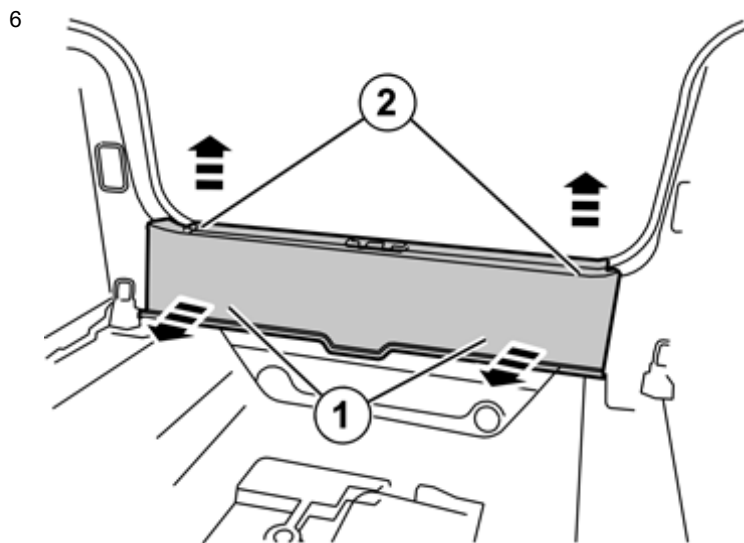


IMG-226722

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

7

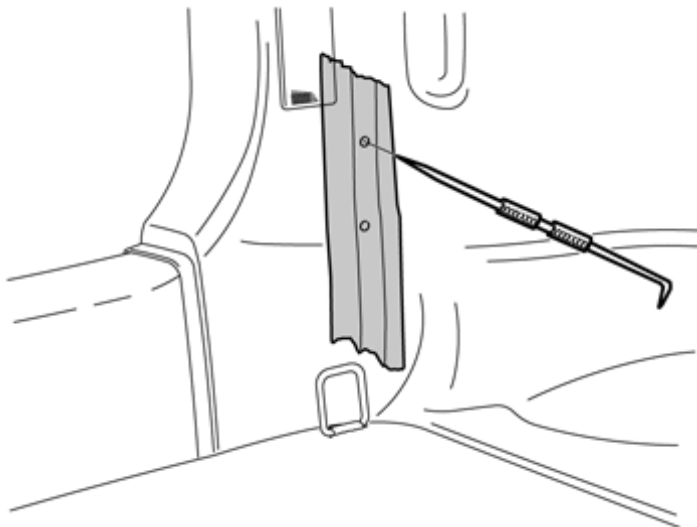

IMG-245883


Press a scribe through the markings on the tape strip and through the panel to create holes about Ø 4.8 mm (3/16") in diameter.

## Note!

Check the back of the panel to ensure that no cables could be damaged when the holes are made.

Remove the tape strip.

8

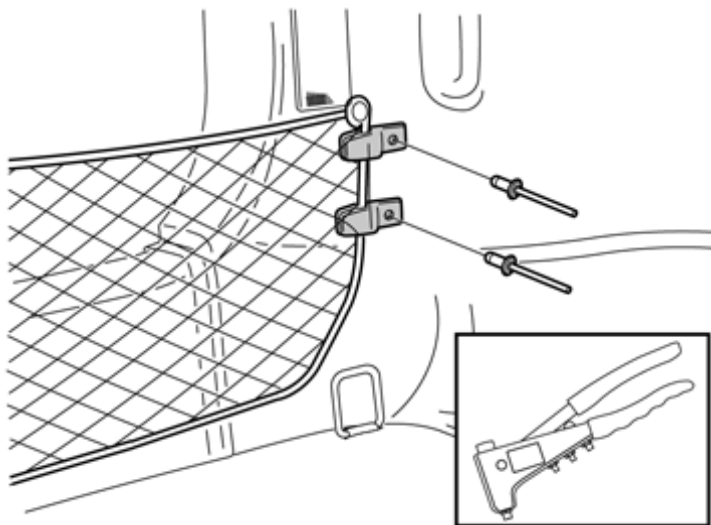


IMG-240587

Rivet the rear end panel clips in the side panel.


Bend in the front end of the net toward the side panel.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

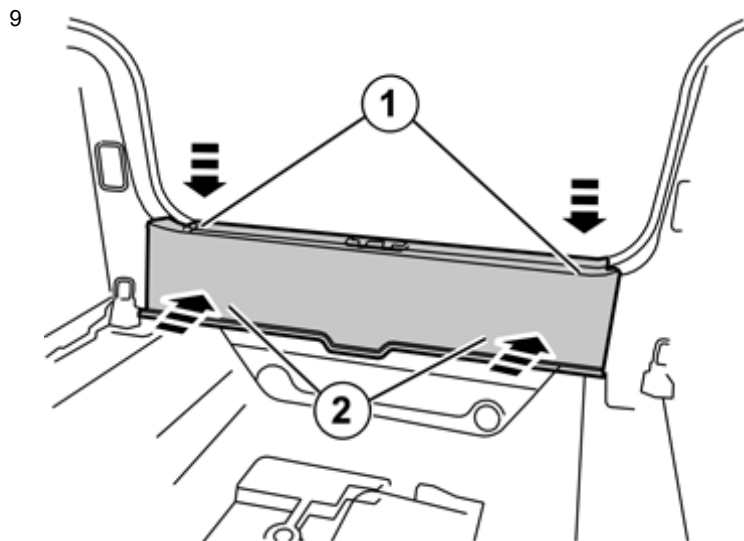

IMG-226734

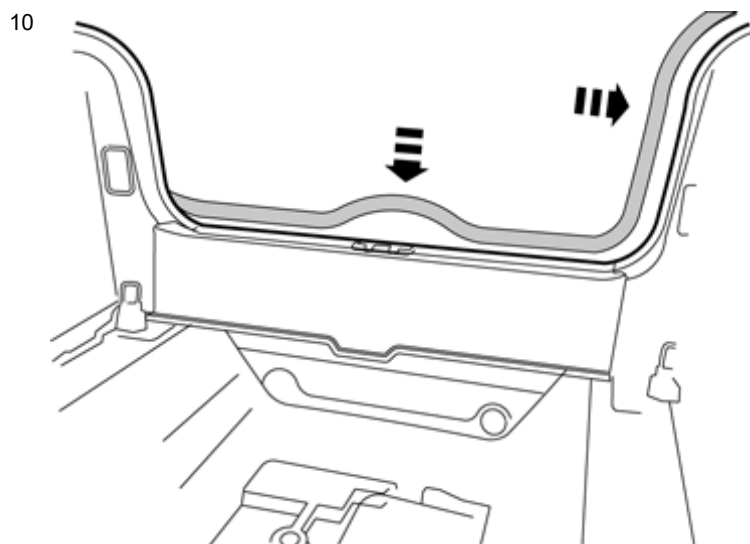


IMG-240590

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

11

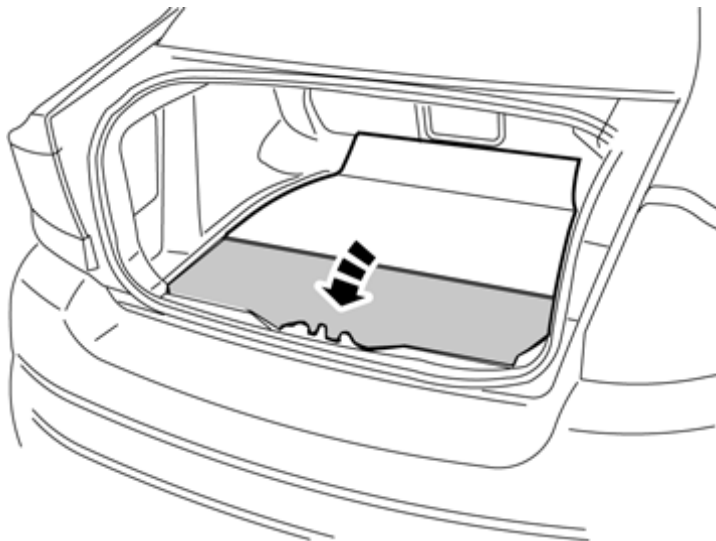

IMG-240591

12

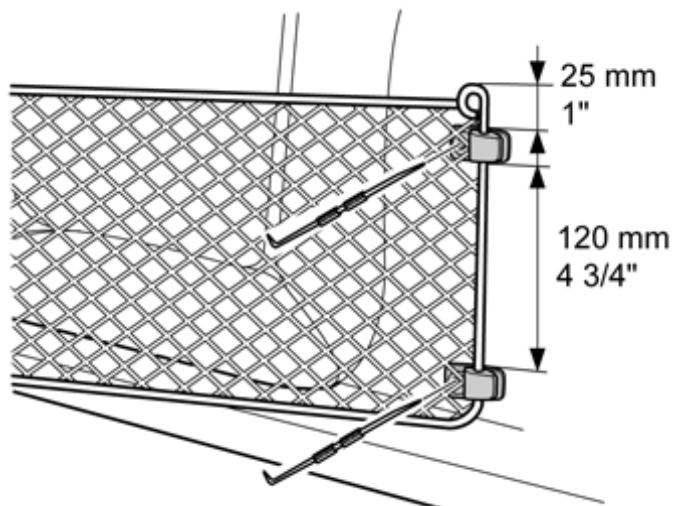

IMG-240594

Fit two clips on the net's front end panel in the positions illustrated.

Insert a scriber through the holes in the clips and press through the panel to create a hole approximately  $\varnothing 4.8$  mm ( $3/16$  ") in diameter. I

## Note!

Check the back of the panel to ensure that no cables could be damaged when the holes are made.


If necessary, remove the cover of the fuse holder/left back-up (reversing) lamp to use as a counterhold against the rear side.



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

13

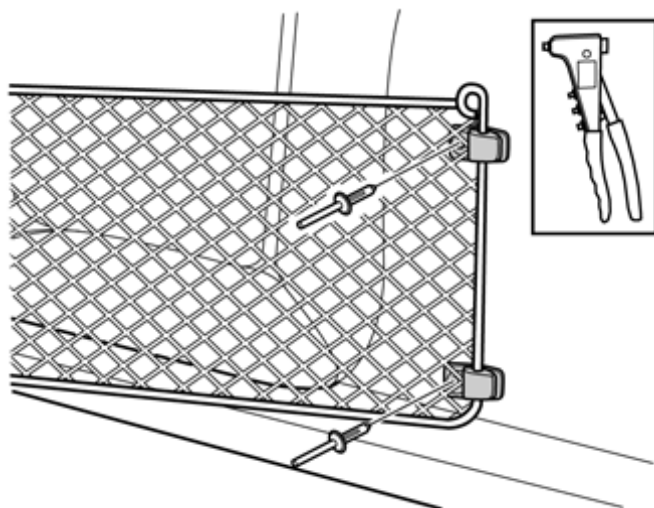**Note!**

Do not trap the net in the pop rivets when securing.

IMG-240595