

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31399623 Version 1.0 Part. No. 31399203

Sun curtain

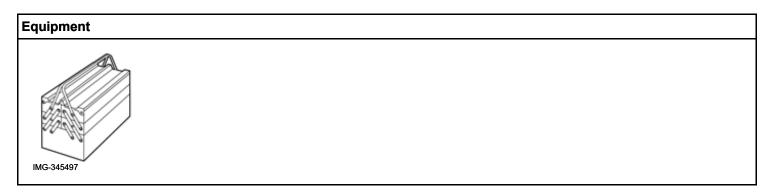

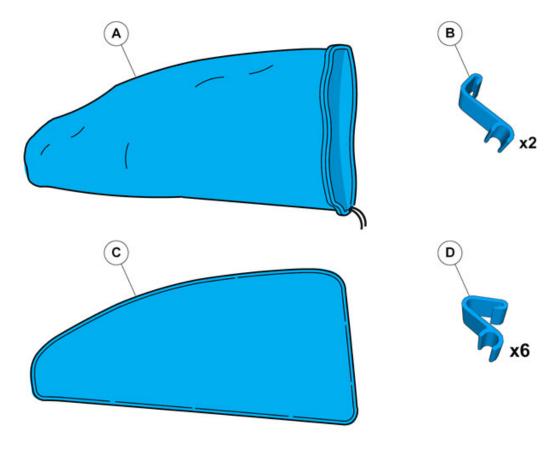


IMG-379618

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Color symbols

2

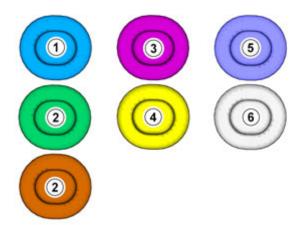

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

Accessory installation

Volvo Car Corporation Gothenburg, Sweden


3

Set the ignition key to position I.



IMG-332194


4

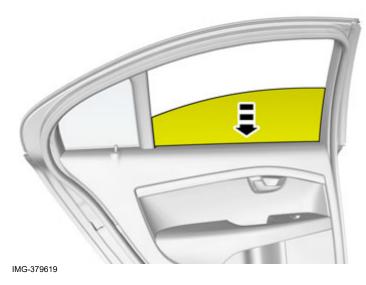

Volvo Car Corporation Gothenburg, Sweden


5

Set the ignition key to position 0.

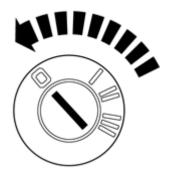

IMG-245980


6

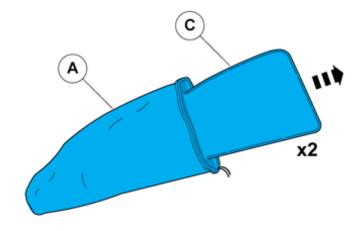


IMG-379621

Volvo Car Corporation Gothenburg, Sweden


7

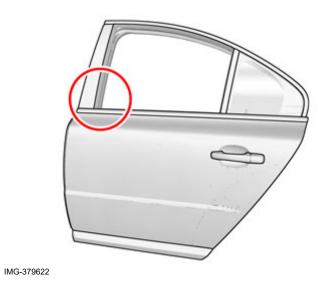


Note! Orientation view

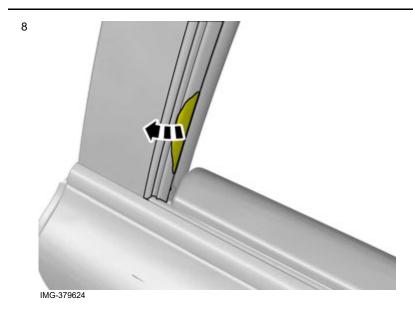

Volvo Car Corporation Gothenburg, Sweden

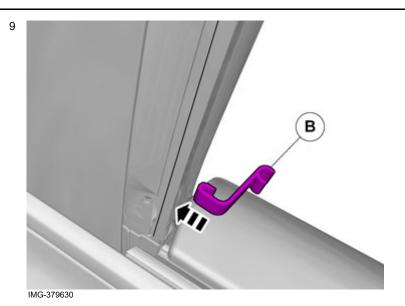


Install the clip(s).

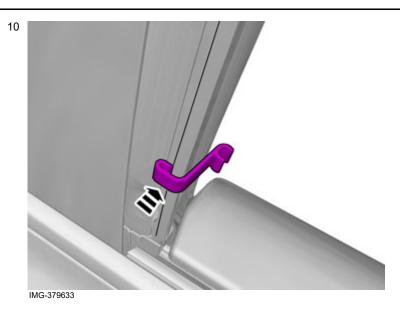

Volvo Car Corporation Gothenburg, Sweden



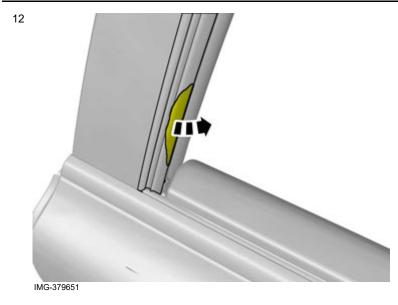

Volvo Car Corporation Gothenburg, Sweden


13




Note! Orientation view

IMG-379636

14

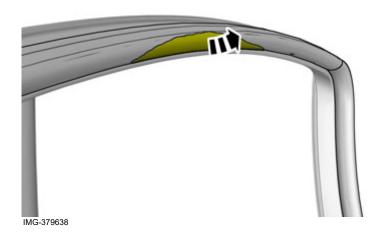


Volvo Car Corporation Gothenburg, Sweden

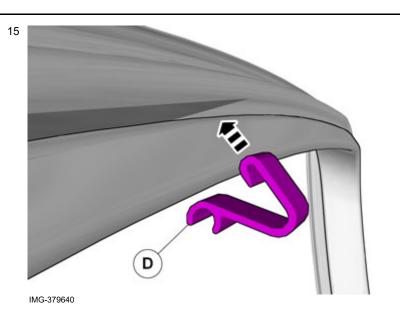

Install the clip(s).

16

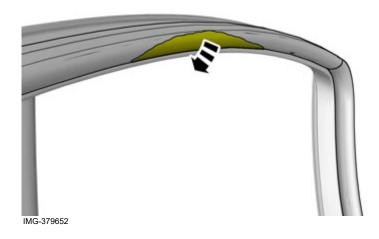

Volvo Car Corporation Gothenburg, Sweden


17

Set the ignition key to position I.



IMG-332194


18

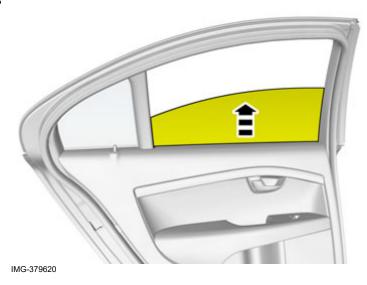

Volvo Car Corporation Gothenburg, Sweden


19

Set the ignition key to position 0.

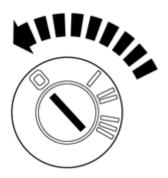

IMG-245980

20

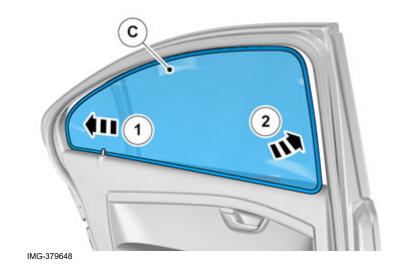

Volvo Car Corporation Gothenburg, Sweden

21

Repeat all method steps for the other side.

