

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
31261688	1.3	31261689

Mudflaps, front, unpainted sill / Mudflaps, rear



J8903264

Equipment



A0000162




IMG-239660



IMG-239940

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

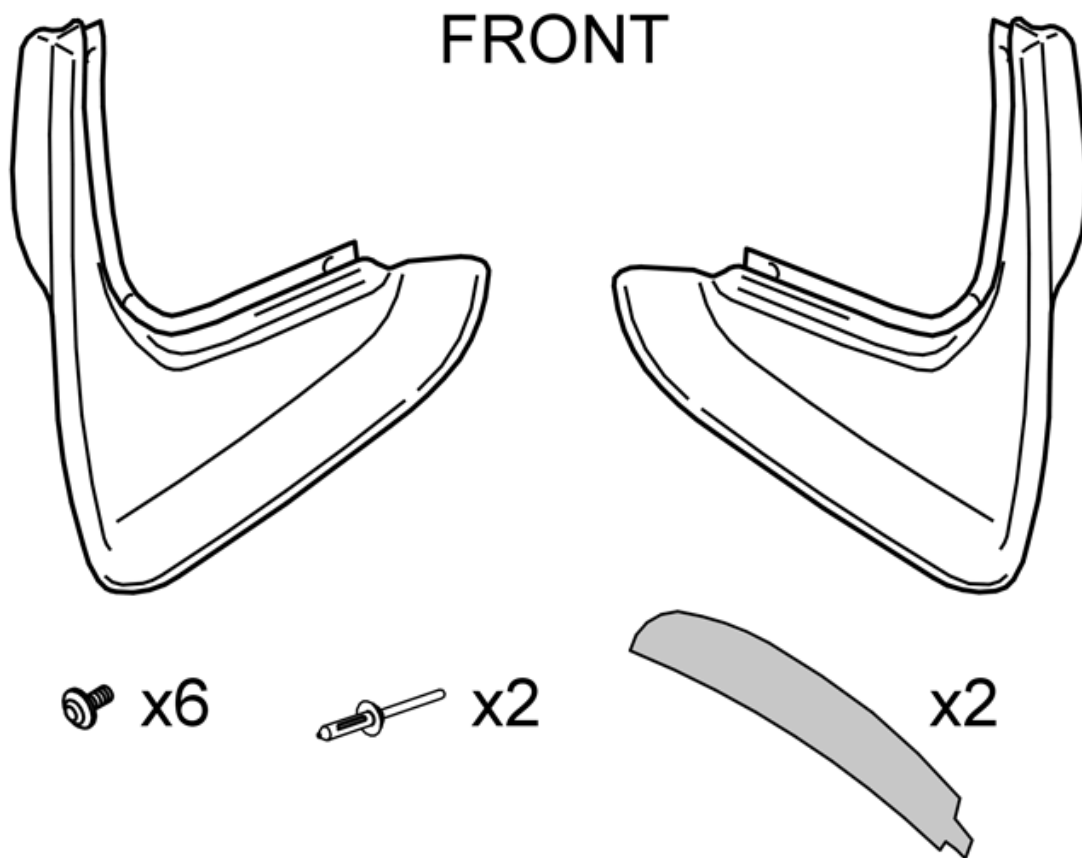


J8903486

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

REAR

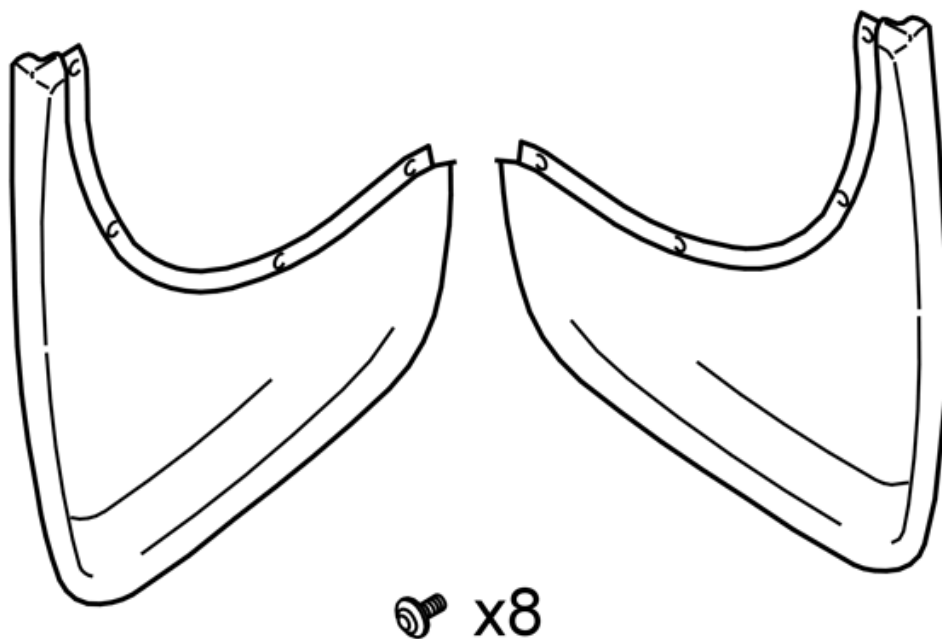

J8903487

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:	Issue:	Kit no:
Comments:.....		
.....		
.....		
.....		

From:	
Address:	
Telephone:	
Telefax:	

IMG-213320

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Installing front mudguard

1

FRONT

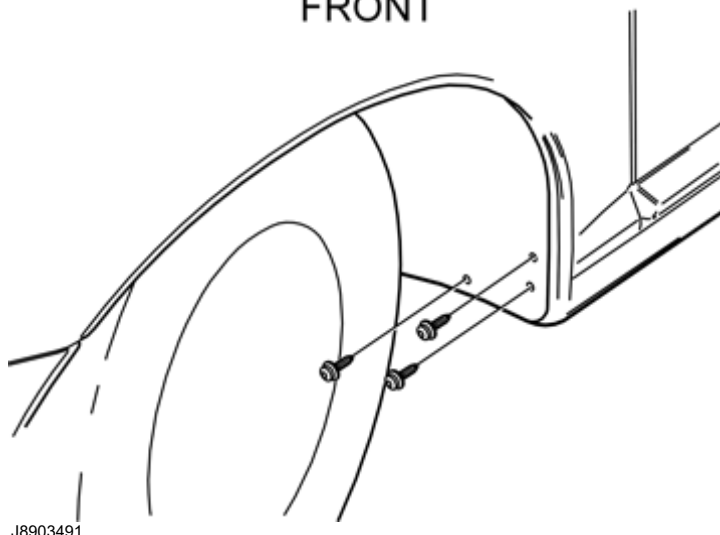

Installing front mudguard

Turn the wheels to the left


Clean the area at the rear edge of the wing liner where the mudguard will be positioned

Remove the three screws holding the wing liner to the body. Place the screws to one side. New screws are supplied in the kit.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


2

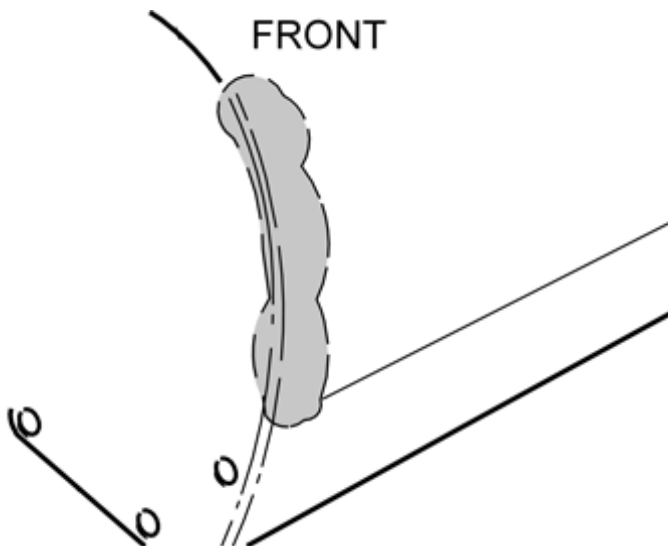

J8903492

Clean the marked surface at the rear edge of the front wing. Use a mixture of 30% windscreen washer fluid and 70% water. Wipe dry.

3

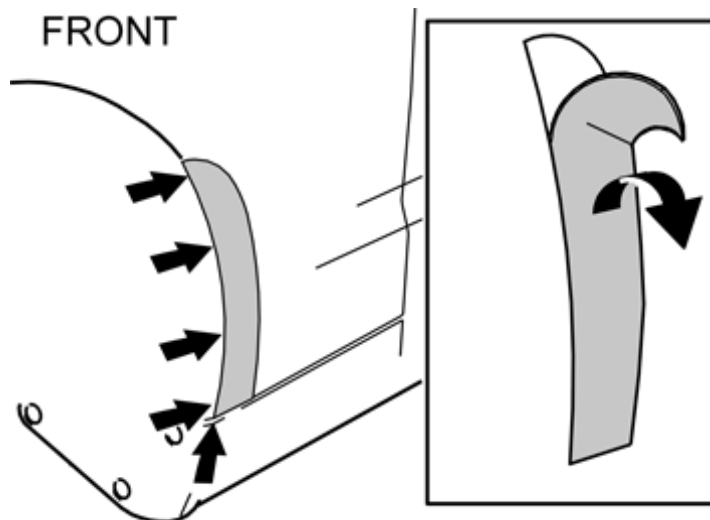

J8601115

Remove the backing from the masking tape


Secure the masking tape at the front edge on the front wing. Position the tape just inside the curve of the front wing as illustrated

Secure along the entire front edge first. Then securely press backwards. Puncture any air bubbles using a needle


Press the masking tape into place firmly.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

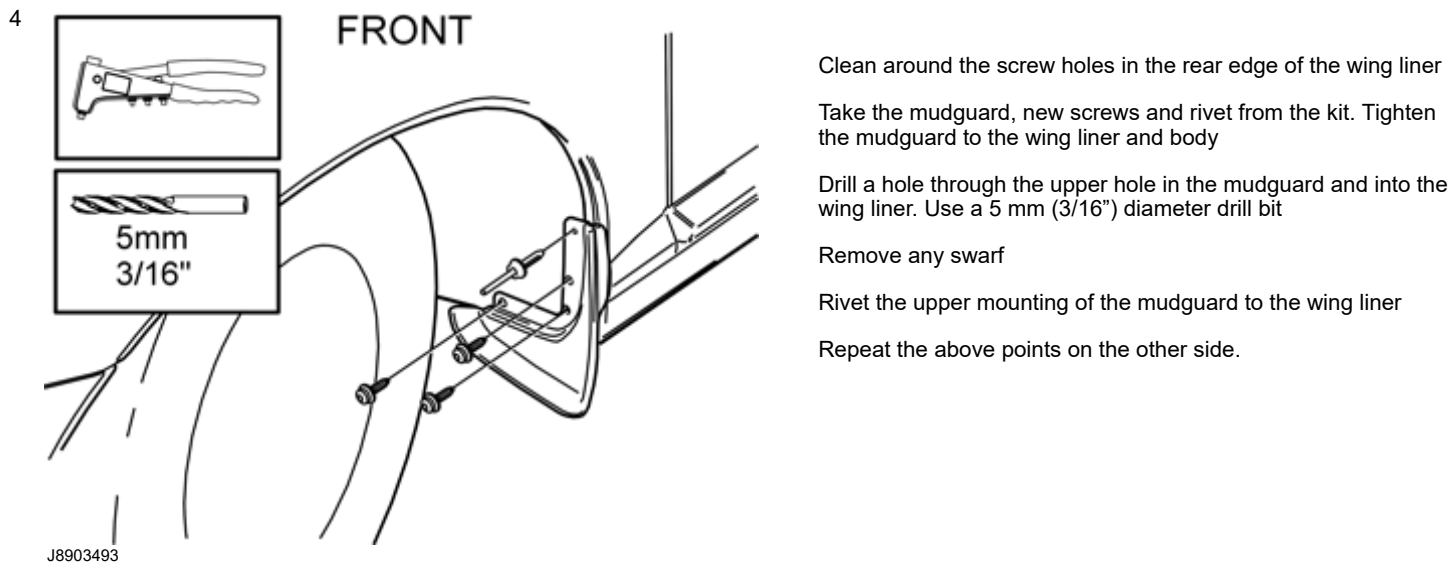

Installing rear mudguard

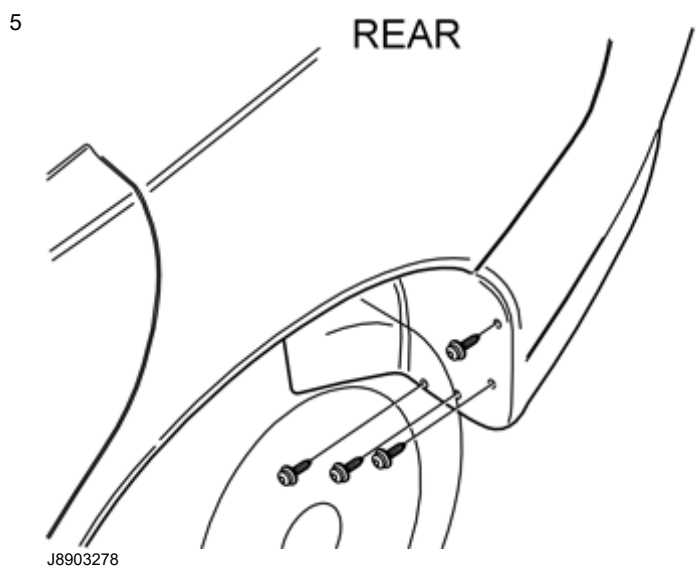

Installing rear mudguard


Clean the area at the rear edge of the wing liner where the mudguard will be positioned

Remove the four screws holding the wing liner to the bumper cover. Place the screws to one side. New screws are supplied in the kit.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6

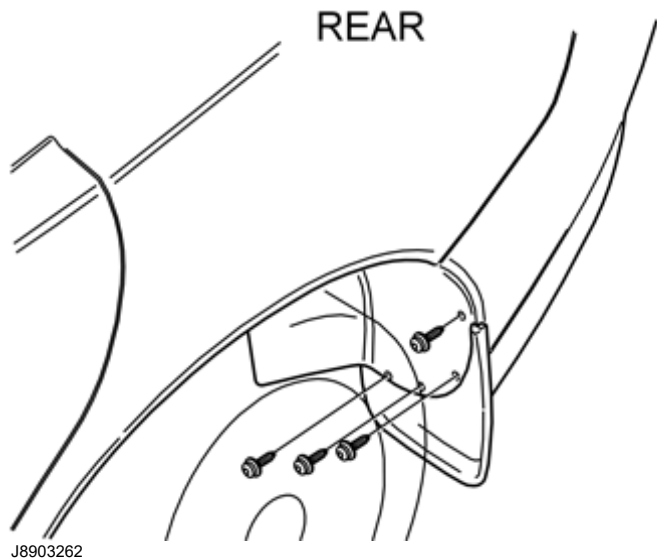

Clean around the screw holes in the rear edge of the wing liner

Take the mudguard and the new screws from the kit. Tighten the mudguard to the wing liner and the bumper cover

Repeat the above points on the other side.