

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31439014 Version 1.0 Part. No. 31373978

# Sun curtain, rear window

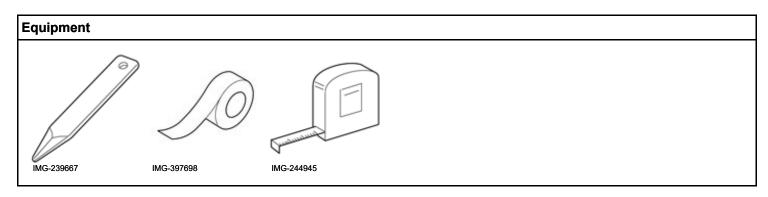

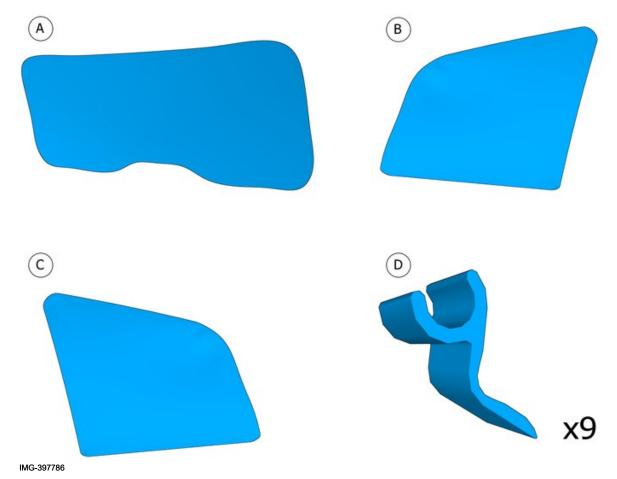

Volvo Car Corporation Gothenburg, Sweden

#### Information

1

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

#### **Accessory installation**

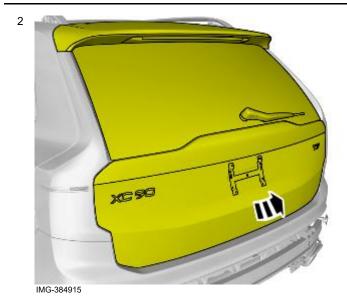

3




Note!

Orientation view

Volvo Car Corporation Gothenburg, Sweden




Use tape

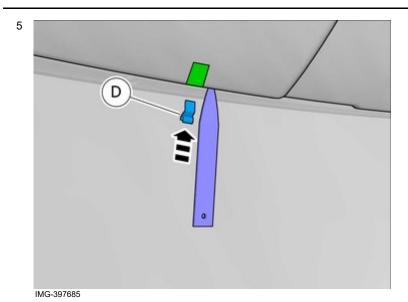

Install component that comes with the accessory kit.


Use: Interior trim remover

Volvo Car Corporation Gothenburg, Sweden

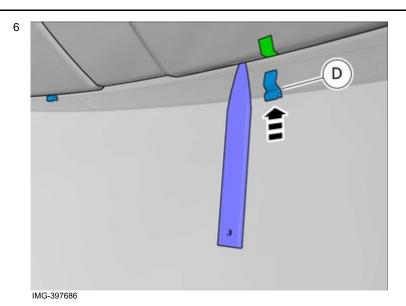


Install component that comes with the accessory kit.


Use: Interior trim remover

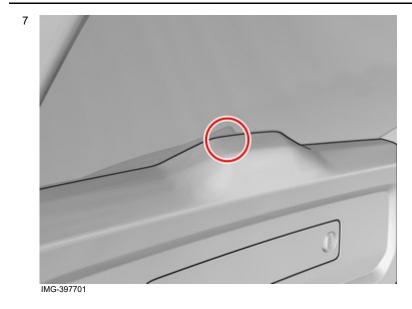

Volvo Car Corporation Gothenburg, Sweden

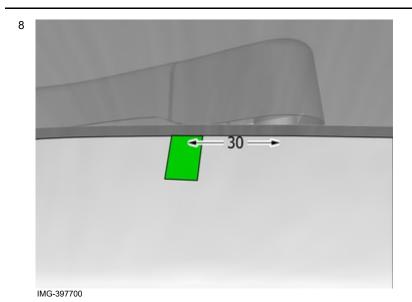


Use tape

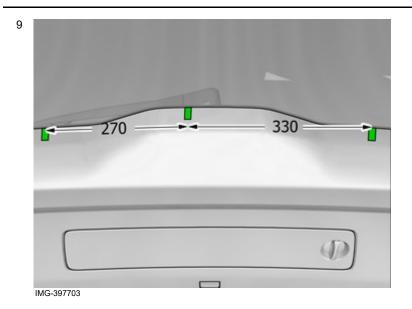


Use tape

Volvo Car Corporation Gothenburg, Sweden

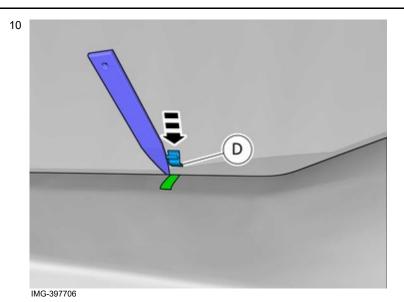


Install component that comes with the accessory kit.

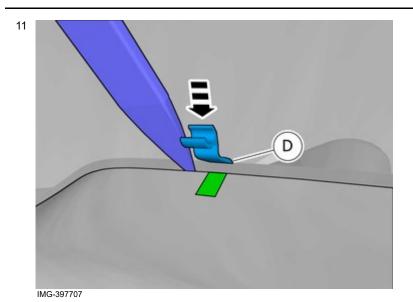


Volvo Car Corporation Gothenburg, Sweden


IMG-397708

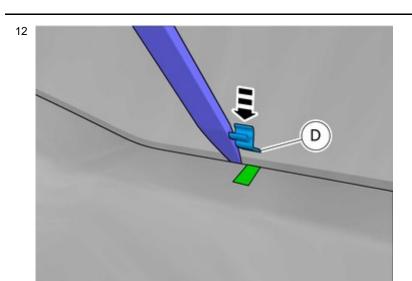


Install component that comes with the accessory kit.

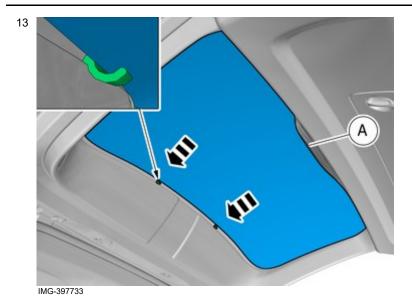

Volvo Car Corporation Gothenburg, Sweden

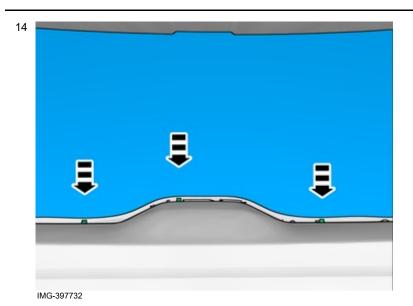


Ensure that all clips engage.

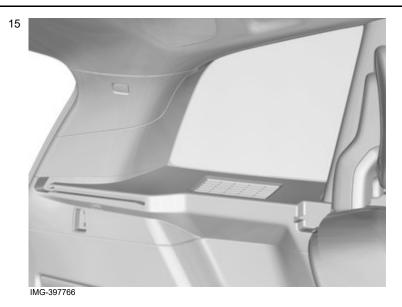


Note! Orientation view


Volvo Car Corporation Gothenburg, Sweden

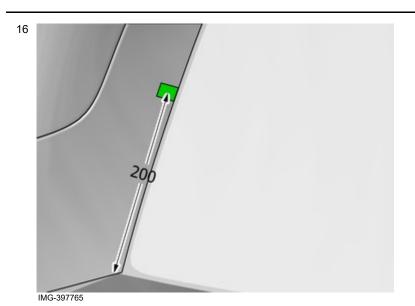


Use tape

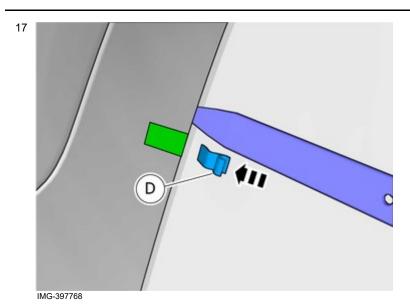


Volvo Car Corporation Gothenburg, Sweden

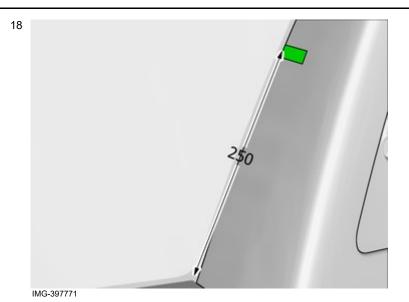


Use tape

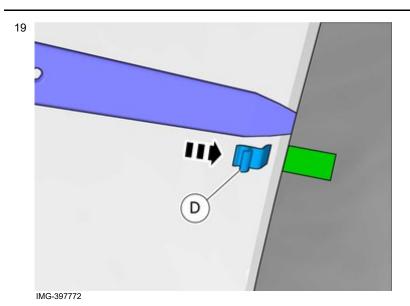

Volvo Car Corporation Gothenburg, Sweden

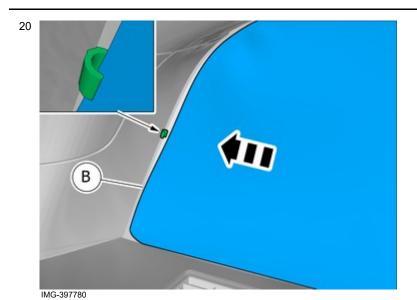

Install component that comes with the accessory kit.

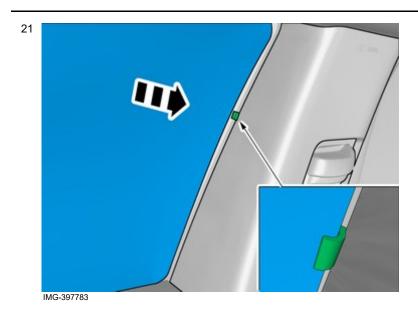

22

Repeat the steps when installing accessories on opposite side.