

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden



**Istruzioni No**  
31214536

**Versione**  
1.2

**Part. No.**  
30744142, 30744133

## Paraspruzzi

### Attrezzatura

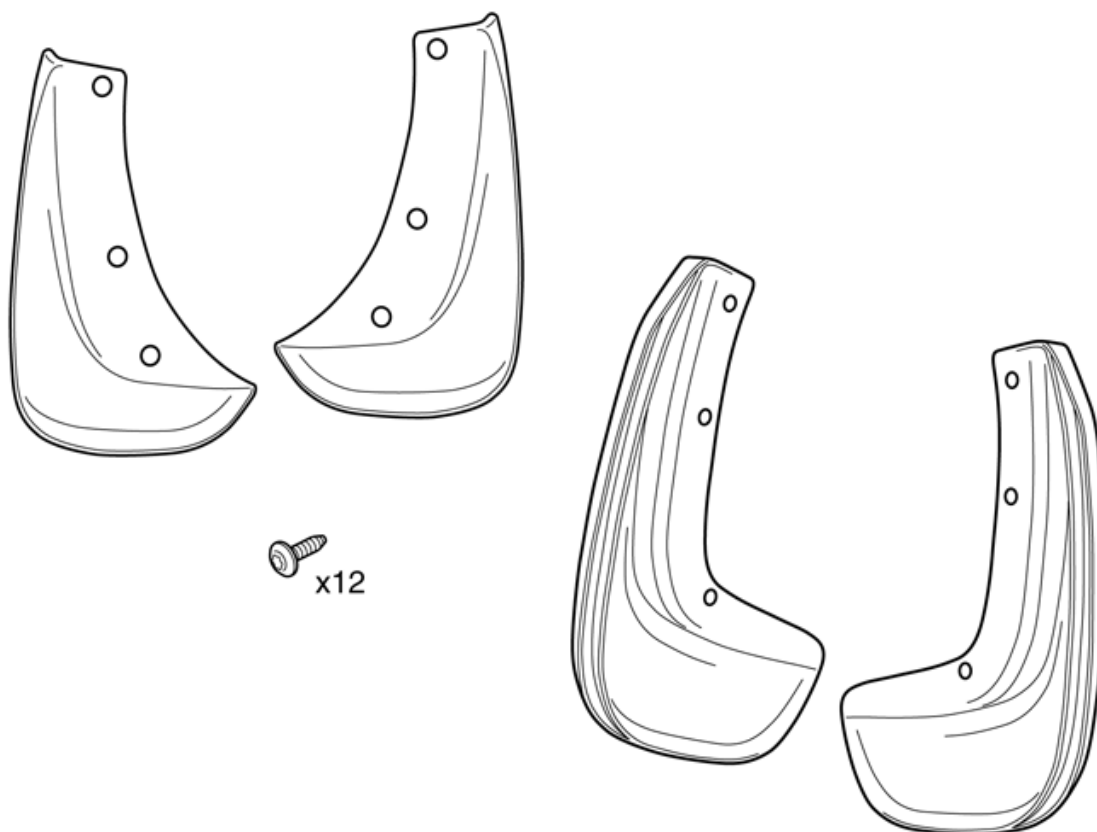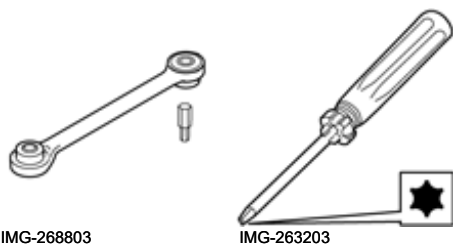

IMG-262234

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication?    Please contact your nearest retailer.    Thank You!

|                |        |         |
|----------------|--------|---------|
| Publ.no:       | Issue: | Kit no: |
| Comments:..... |        |         |
| .....          |        |         |
| .....          |        |         |
| .....          |        |         |

|            |  |
|------------|--|
| From:      |  |
| Address:   |  |
| Telephone: |  |
| Telefax:   |  |

IMG-213320

## INTRODUZIONE

Leggere attentamente tutte le istruzioni prima di iniziare l'installazione.

Le note e i testi di avvertenza sono forniti per la vostra sicurezza e per ridurre al minimo il rischio di rotture in occasione dell'installazione.

Verificare che tutti gli attrezzi specificati nelle istruzioni siano presenti prima di iniziare l'installazione.

Alcune fasi nelle istruzioni sono spiegate solo con le illustrazioni. Per i passaggi più complicati è usato anche un testo esplicativo.


In caso di problemi con le istruzioni o l'accessorio, mettersi in contatto con il concessionario Volvo locale.

### Nota!

I passaggi sono eseguiti su entrambi i lati del veicolo.

## Alette parafango, anteriore

1

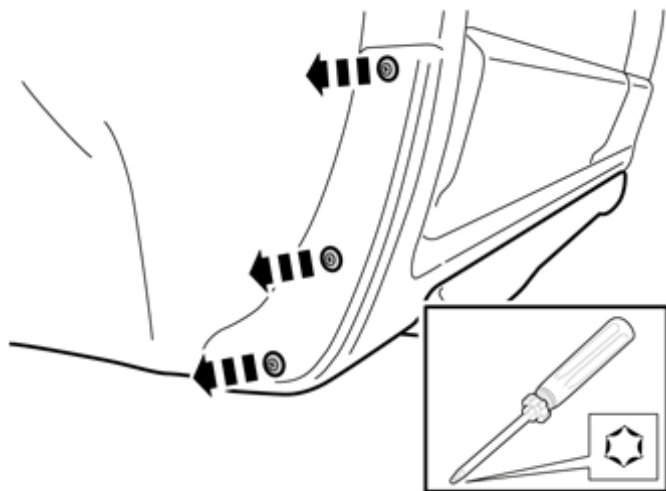

IMG-262224


### Alette parafango, anteriore

Rimuovere le tre viti.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

2

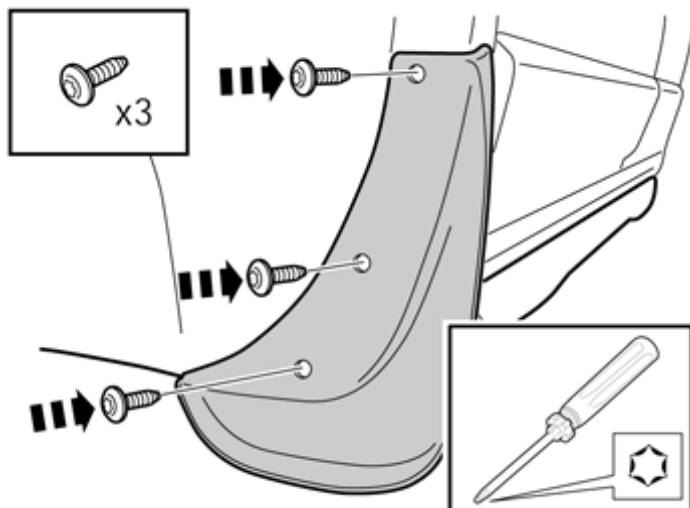

IMG-262225

## Montare:


aletta parafango

prendere tre viti dal kit.

Serrare.

## Alette parafango, posteriore

3

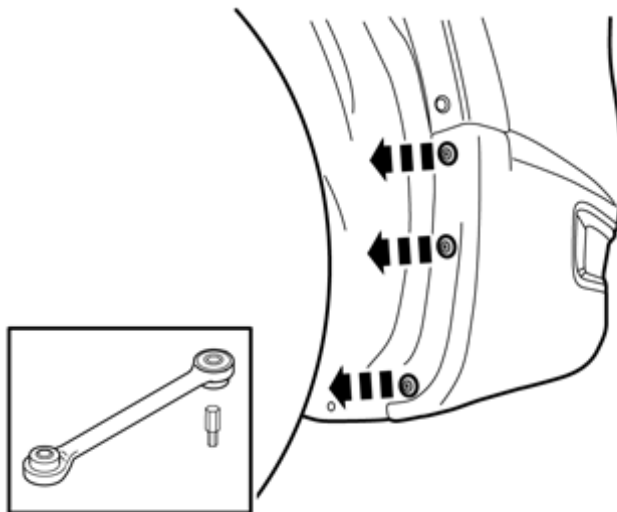

IMG-262229


## Alette parafango, posteriore

Rimuovere le tre viti.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4

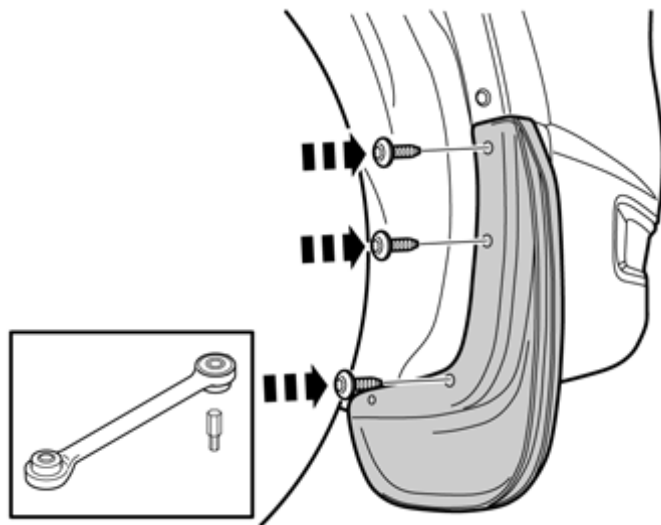

IMG-262230

## Montare:

aletta parafango

prendere tre viti dal kit.

Serrare.