

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
		39823006, 39818009, 39822314, 31352530, 39818912, 39818007, 39817982, 39818006, 39818005, 39817991,
31330285	1.5	39817984, 39817983, 39817981, 39817980, 39817978, 39818920, 39814361, 39814363, 39822310, 39822311,
		39822312, 39822313, 39818941, 39822315


# Deflector, side

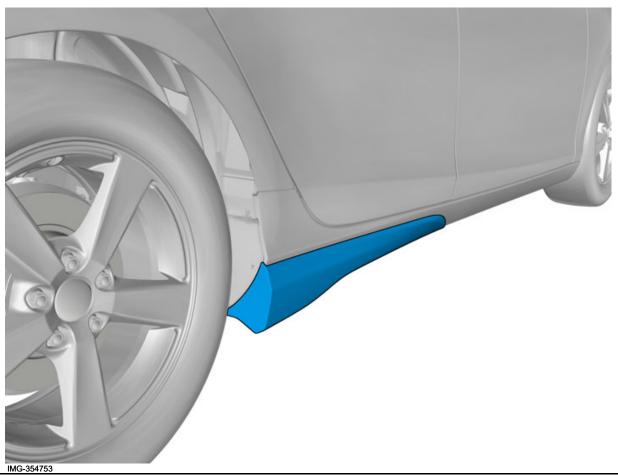

Materials			
Designation	Part number		
Isopropanol	1161721		

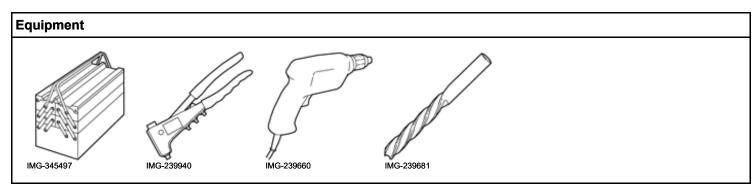


Volvo Car Corporation Gothenburg, Sweden

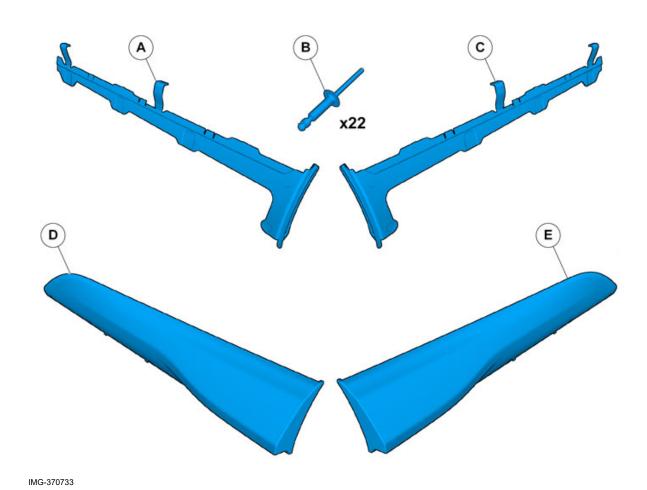

Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

2

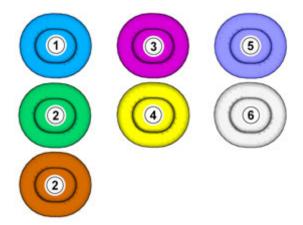

IMG-363036

#### Note!


Color symbols

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- ${\bf 6.} \ {\bf Used} \ {\bf as} \ {\bf background} \ {\bf color} \ {\bf for} \ {\bf vehicle} \ {\bf components}.$


#### Removal

Volvo Car Corporation Gothenburg, Sweden

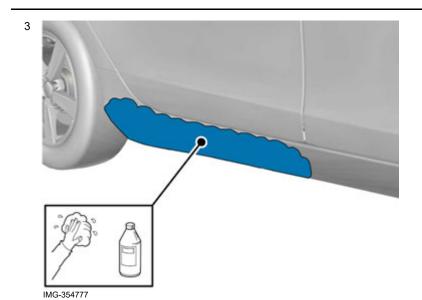

Clean the surface.

Use: 1161721, Isopropanol

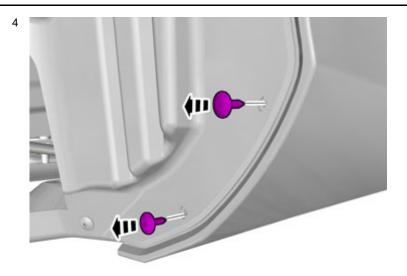

Remove the screws.


IMG-354778

5


Repeat the steps when removing on opposite side.

**Accessory installation** 

Volvo Car Corporation Gothenburg, Sweden

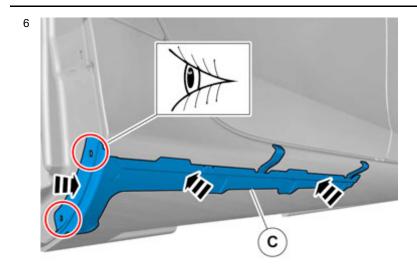


IMG-354801

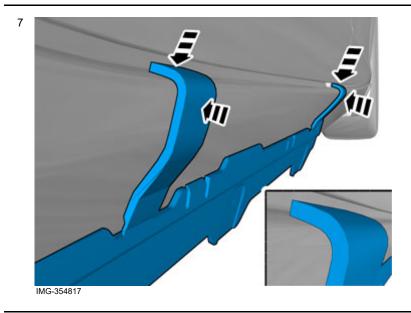

Volvo Car Corporation Gothenburg, Sweden

Reinstall the screws.




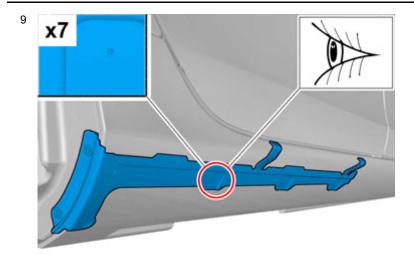


Locate the markings for the positions.

IMG-354803


Volvo Car Corporation Gothenburg, Sweden

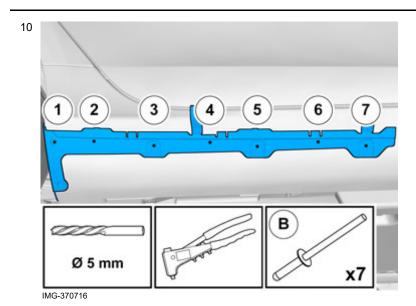


Drill one hole and fit one pop rivet at a time, in accordance with the sequence illustrated.

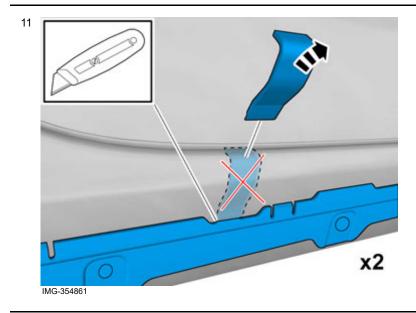


Volvo Car Corporation Gothenburg, Sweden

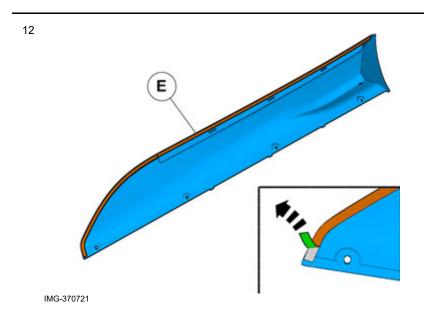


Fold the protective film forward

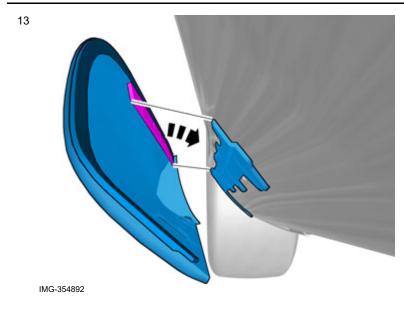


Volvo Car Corporation Gothenburg, Sweden

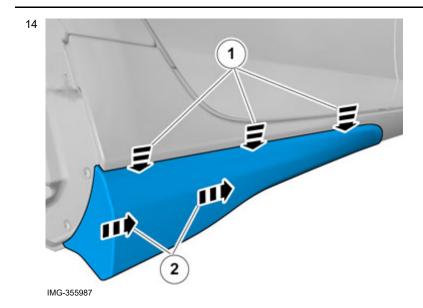


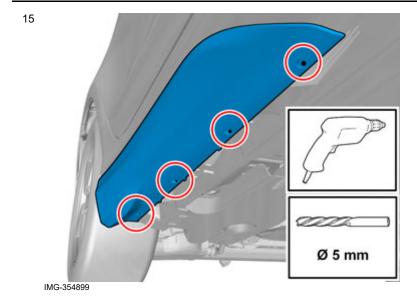

Drill the holes.

Volvo Car Corporation Gothenburg, Sweden

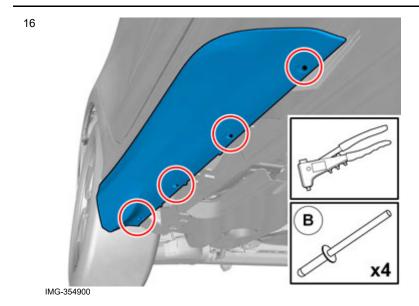

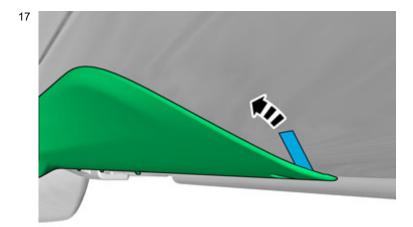


Caution! Pull carefully.

Remove the protective film.

IMG-370722

Volvo Car Corporation Gothenburg, Sweden

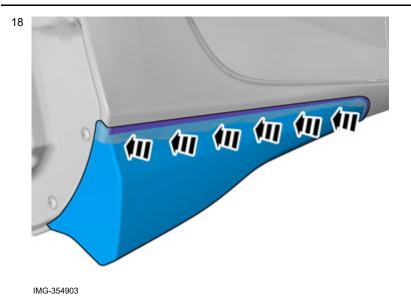

#### Caution!

Make sure that equal pressure is applied to the full length of the component.

#### Note!

Ensure that the tape is fixed to the surface.

19

Repeat the steps when installing accessories on opposite side.