

Volvo Car Corporation Gothenburg, Sweden

Instruction No 30796654 Version 1.1 Part. No. 30796077

Mudflaps, rear

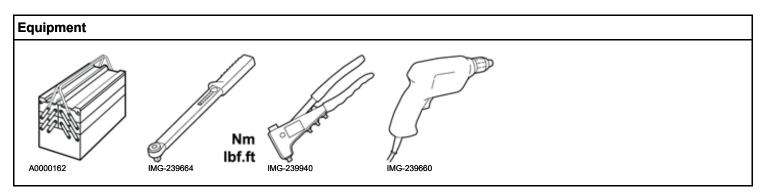

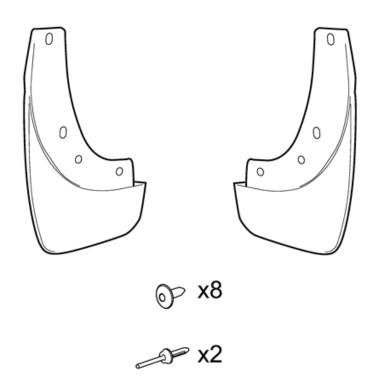

IMG-257743

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!		
Publ.no:	Issue:	Kit no:
Comments:		
From:		
Address:		
Telephone:		
Telefax:		

IMG-213320

© Volvo Car Corporation Mudflaps, rear- 30796654 - V1.1

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Note!

Points 1-6 are carried out on both sides.


1

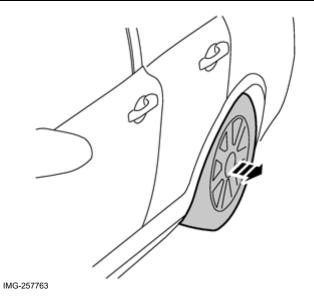

Remove the rear wheel.


Volvo Car Corporation Gothenburg, Sweden

2

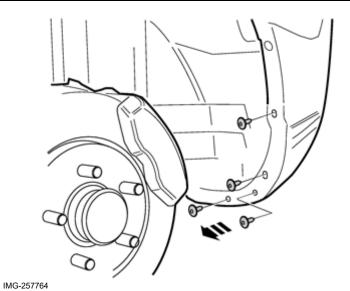

Remove the four screws.

3

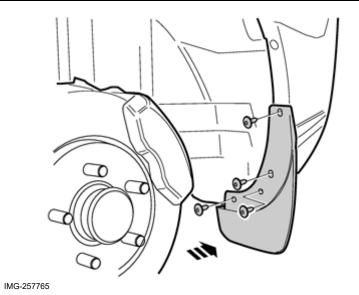


Install:

the mudflap


the four new screws from the kit, and tighten.

© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

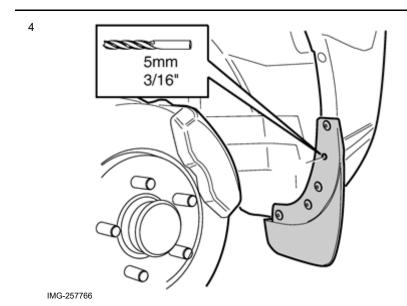


Drill a Ø5 mm (3/16") hole for the pop rivet.

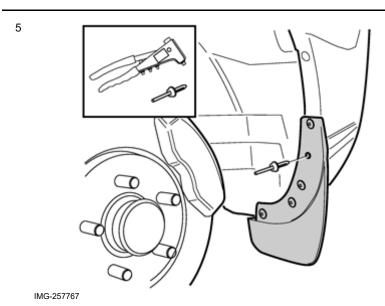

Install the pop rivet.

© Volvo Car Corporation Mudflaps, rear- 30796654 - V1.1

Volvo Car Corporation Gothenburg, Sweden

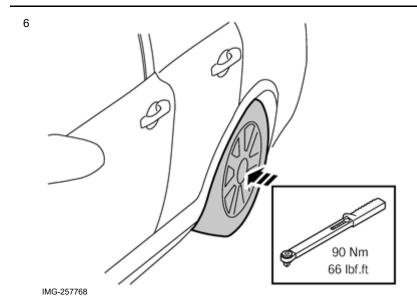

Reinstall the rear wheel, tightening torque 90 Nm (66 lbf.ft).

© Volvo Car Corporation Mudflaps, rear- 30796654 - V1.1