



Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
31664618	1.2	31373742

Protective tape, rear bumper

Materials	
Designation	Part number
Isopropanol	1161721

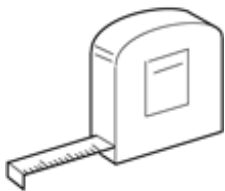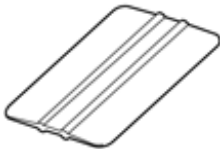Equipment	
 IMG-244945	 IMG-221380

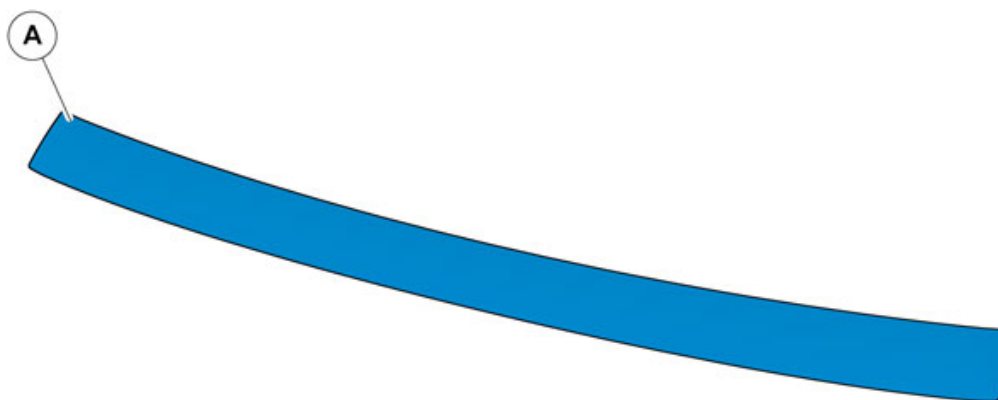

IMG-374018

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Information

- 1
- Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.


Conditions

- 2
- When installing, the car must retain a temperature of 20 degrees C.

After installation, the car must not be washed for 48 hours

After installation, the car must not be driven for 2 hours

Color symbols

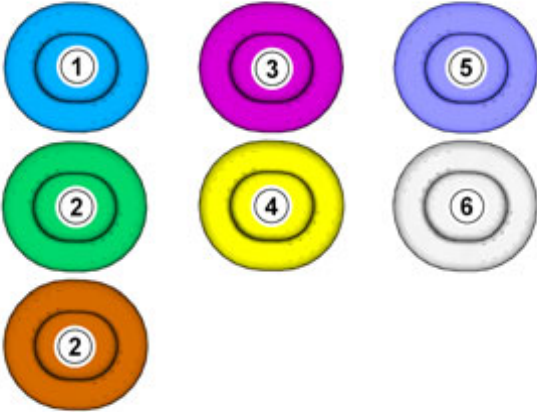- 3
- 
- Note!**
This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

 - 1. Used for focused component, the component with which you will do something.
 - 2. Used as extra colors when you need to show or differentiate additional parts.
 - 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
 - 4. Used when the component is not fully removed from the vehicle but only hung to the side.
 - 5. Used for standard tools and special tools.
 - 6. Used as background color for vehicle components.


IMG-363036

Accessory installation

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4

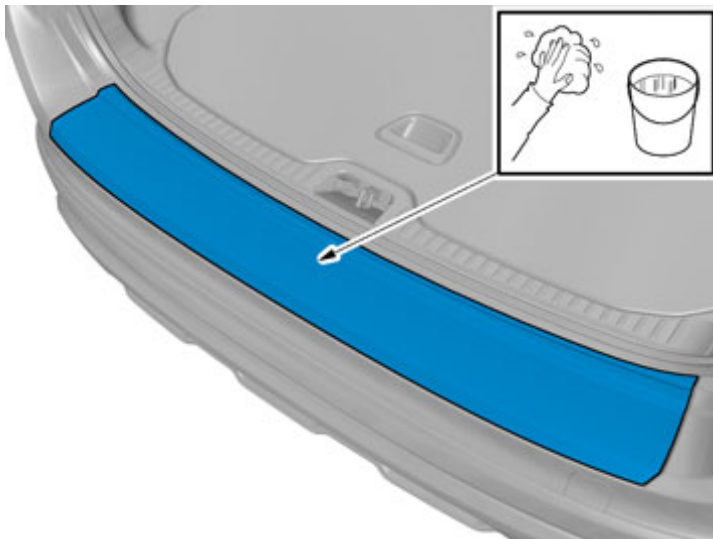


IMG-374184

Clean the Bumper Cover surface.

Allow to dry.

5

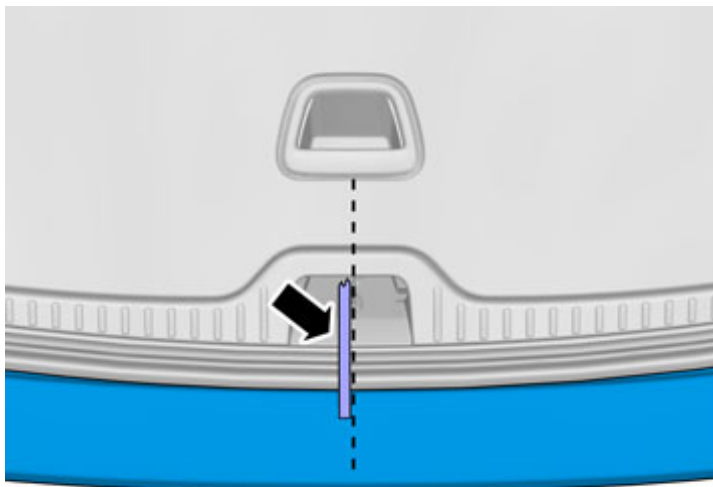

IMG-374185


Use suitable tape to indicate the center.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6


Use suitable tape to indicate the center.

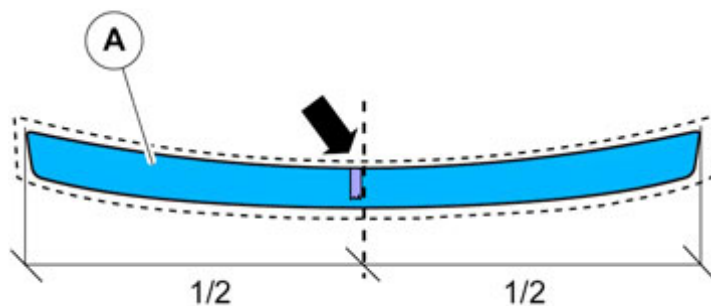

IMG-374121

7

Cut off a piece of the transparent foil, as indicated.

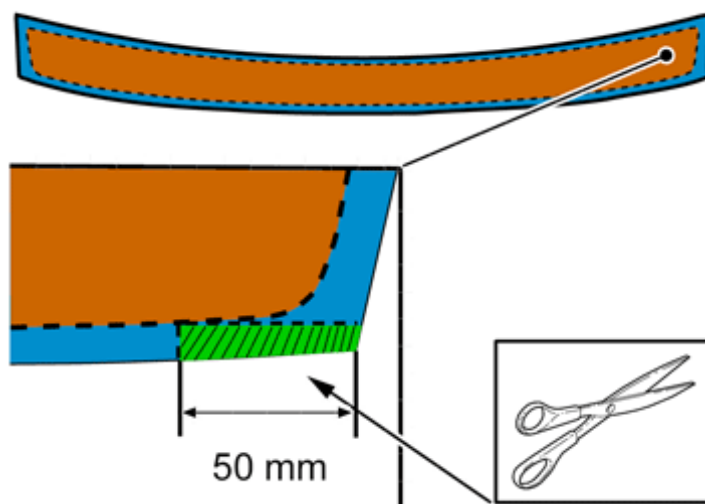


IMG-345624

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

8


Cut off a piece of the transparent foil, as indicated.

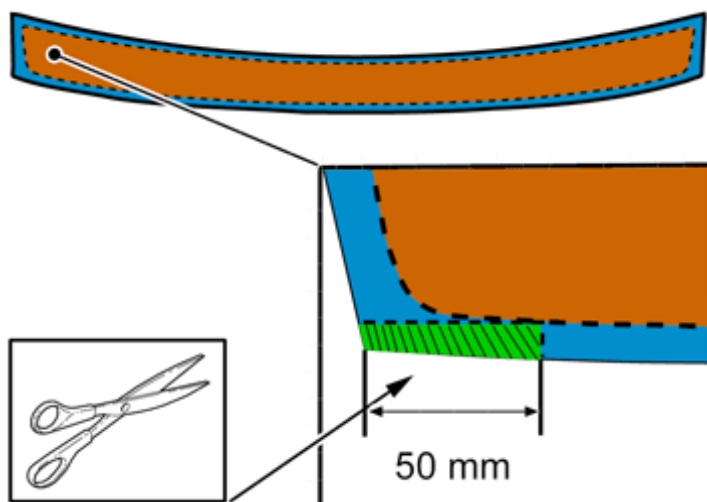

IMG-345997

9

Center the Bumper Cover, using the tape marks and the values in the graphic.

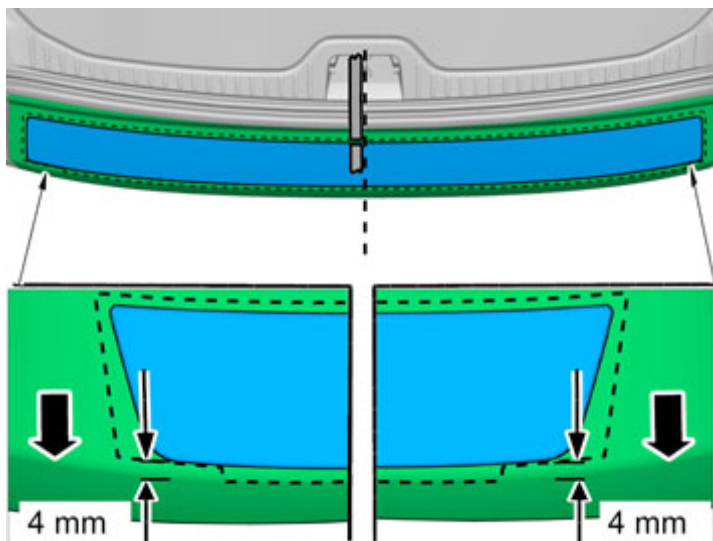


IMG-374197

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

10

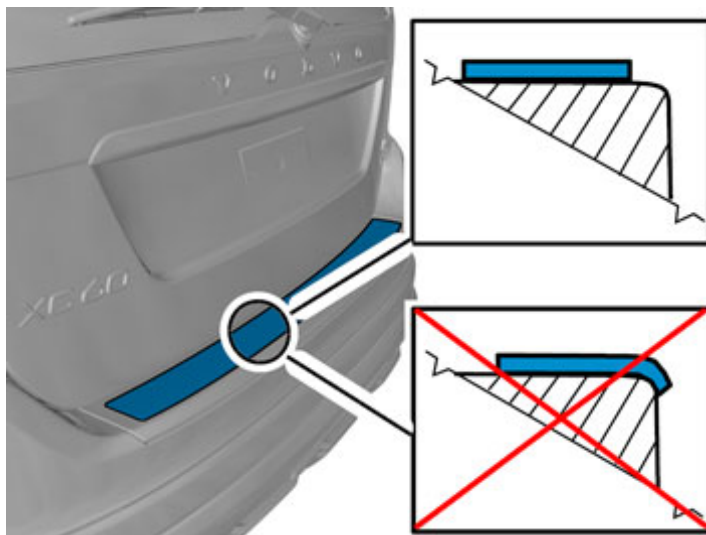


IMG-374196

Note!

Make sure that the Bumper Protection is installed on the flat bumper surface only, not covering any sharp radius.

11

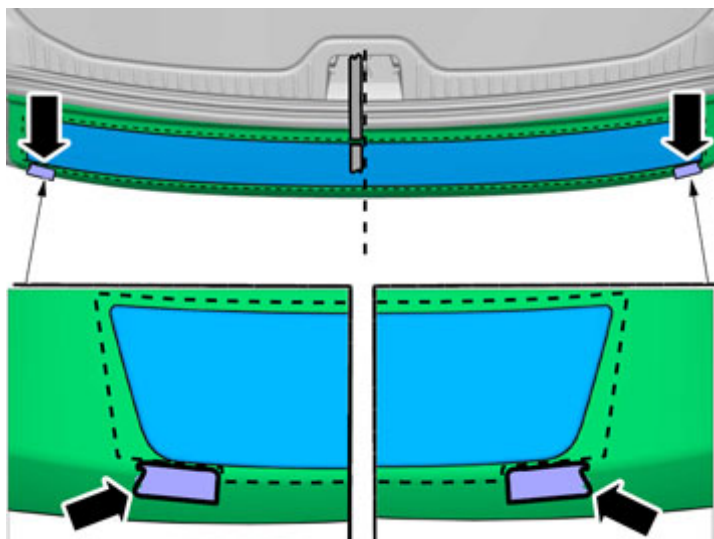


IMG-374202

Use appropriate tape to mark the position.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

12

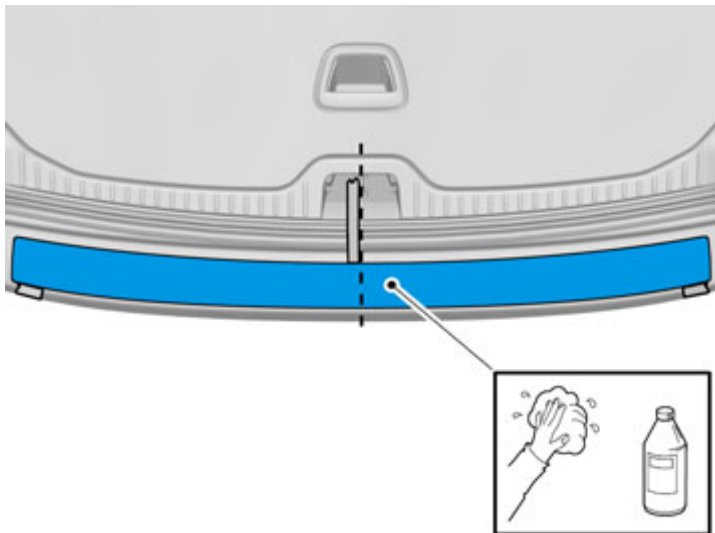


IMG-374199

Clean the Bumper Cover surface.

Allow to dry.

Use: 1161721, Isopropanol

13

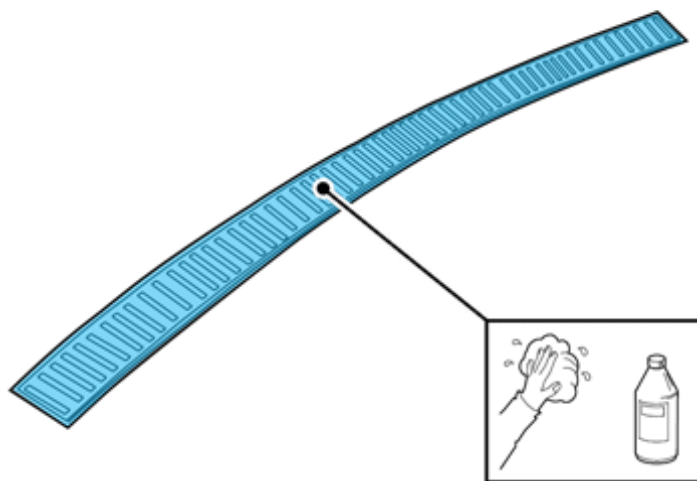

IMG-378893

Clean the lower transparent foil.

Allow to dry.


Use: 1161721, Isopropanol

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

14


Cut in the lower transparent foil in the middle.

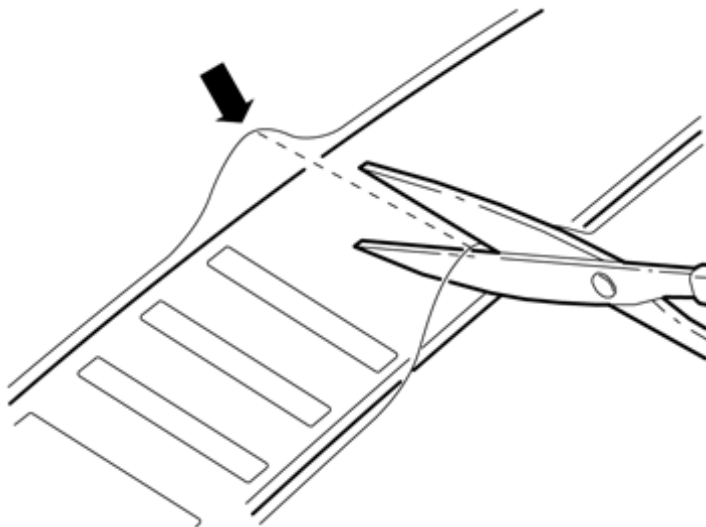

IMG-345623

15

Pull off the top protection foil, if applicable.

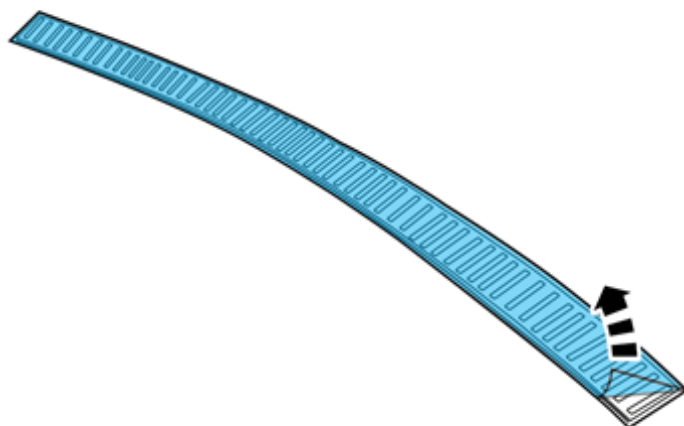


IMG-378604

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

16

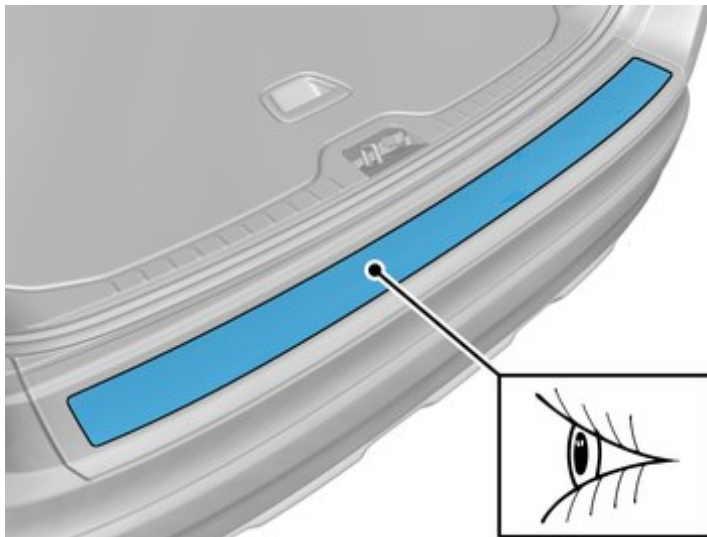


IMG-423761

Caution!

Make sure that the surface is clean and free of foreign material.

17

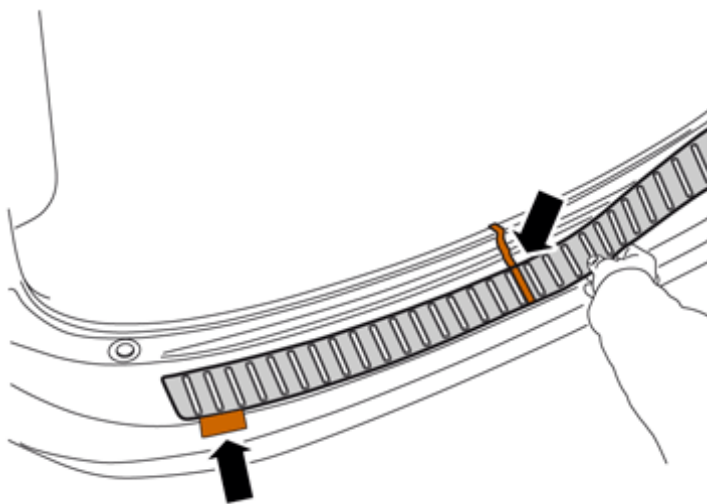


IMG-345942

Adjust the position of the Bumper Protection using the tape marks.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

18

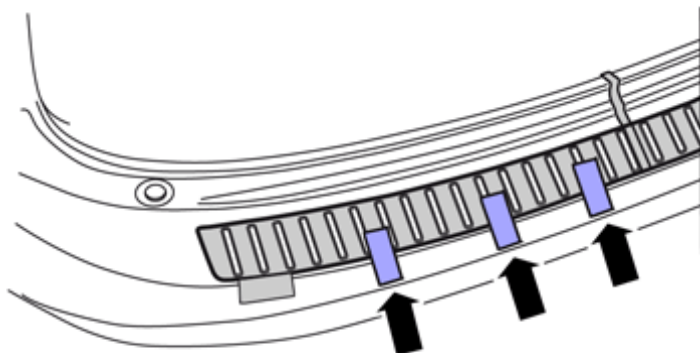


IMG-347431

Note!

Use tape to temporarily fix the bumper cover in the correct position.

19

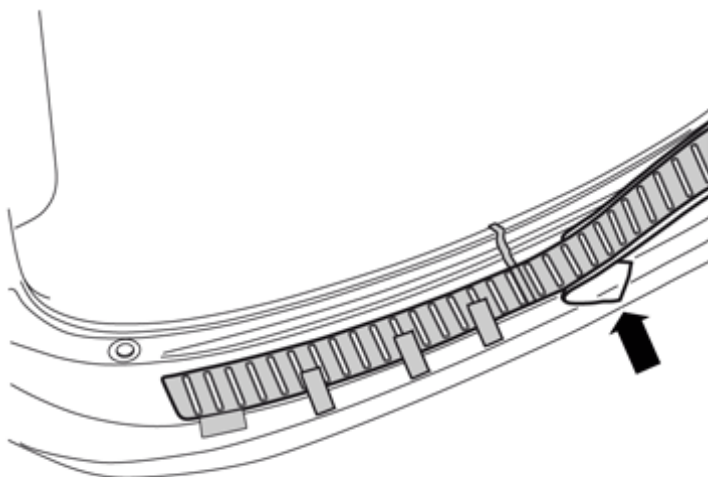

IMG-347451

Note!


Touching the adhesive surface will impair rebonding.

Partly fold back the transparent foil to expose the sticky surface.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


20

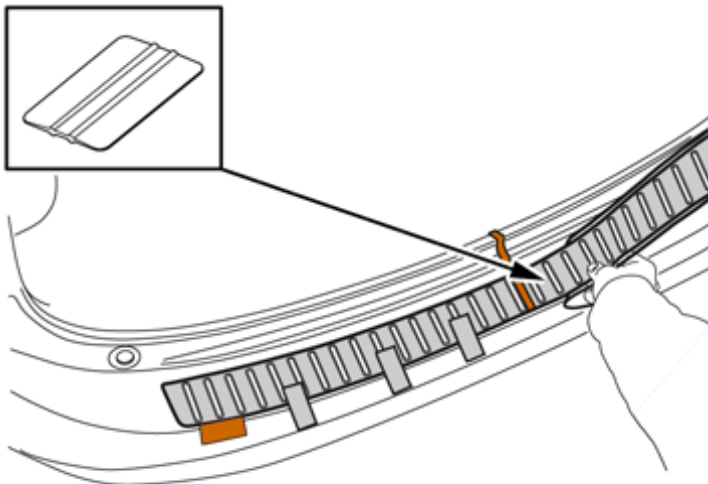

IMG-378667

Use suitable tool to squeeze out any trapped air bubbles.

21

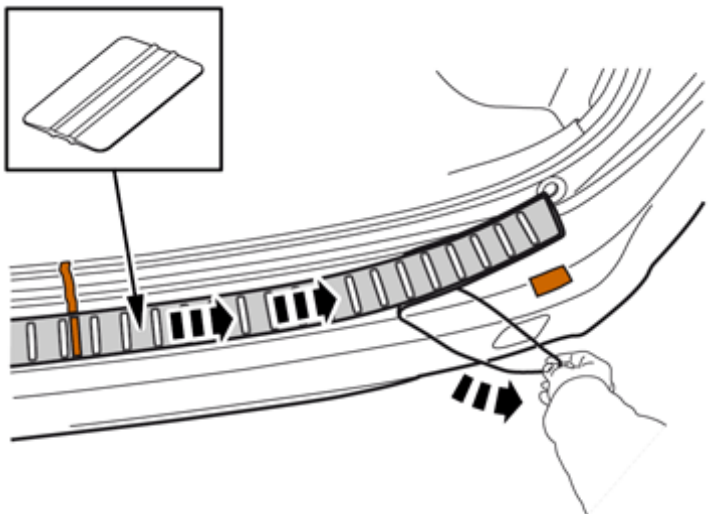

IMG-378668


Pull off the rest of the transparent foil and press by hand on the Bumper protection to make it cling to the Bumper Cover.

Use suitable tool to squeeze out any trapped air bubbles.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

22

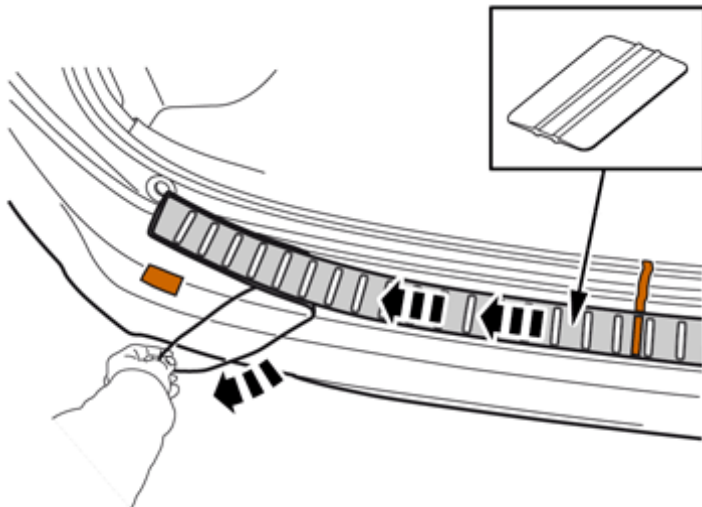


IMG-378669

Pull off the rest of the transparent foil and press by hand on the Bumper protection to make it cling to the Bumper Cover.

Use suitable tool to squeeze out any trapped air bubbles.

23

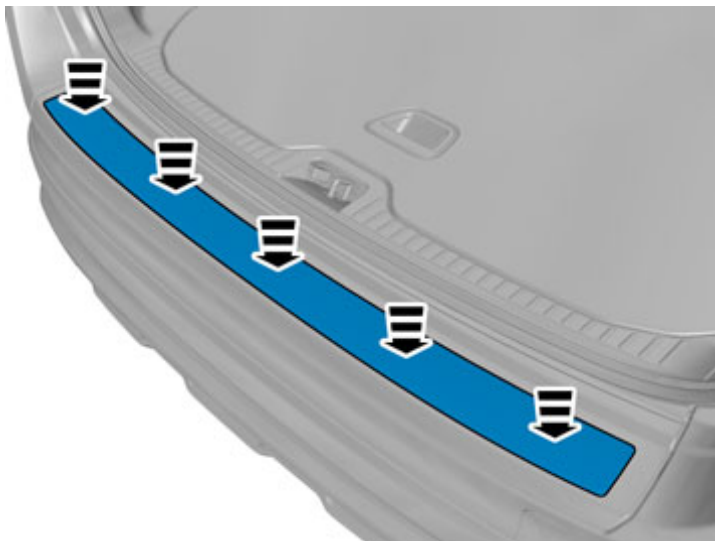

IMG-374200

Thoroughly press, by hand, all over the Bumper Protection to make it cling properly.

Use suitable tool to squeeze out any trapped air bubbles.