
Volvo Car Corporation Gothenburg, Sweden

Instruction No 31399122 Version 1.0

Part. No. 31399121

Diffuser, R-design



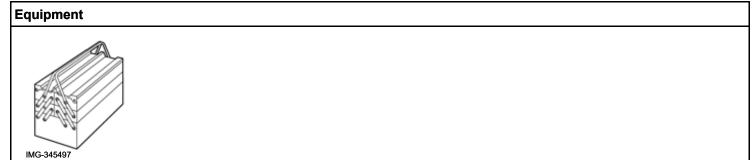

Volvo Car Corporation Gothenburg, Sweden




	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Further information
2	When installing, the car must retain a temperature of 20 degrees C.
	Color symbols
3	Used for focused component, the component with which you will do something.
	Used as extra colors when you need to show or differentiate additional parts.
	Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
	 Used when the component is not fully removed from the vehicle but only hung to the side.
	5. Used for standard tools and special tools.
	Used as background color for vehicle components.
IMG-363036	

4 Turn off the ignition.




IMG-245980


Removal

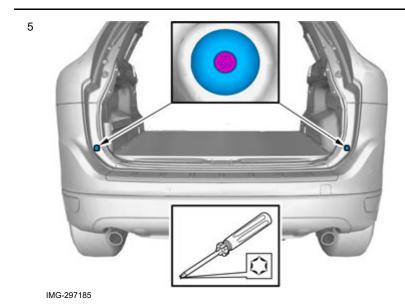

Volvo Car Corporation Gothenburg, Sweden

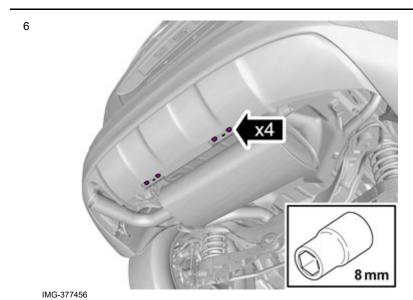

Remove the screws.

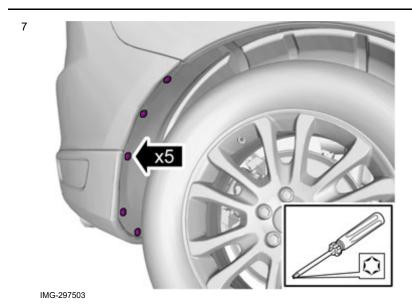

Remove the screws.


On both sides.

Volvo Car Corporation Gothenburg, Sweden

8

Note!
This step is easier with two people.

IMG-297504

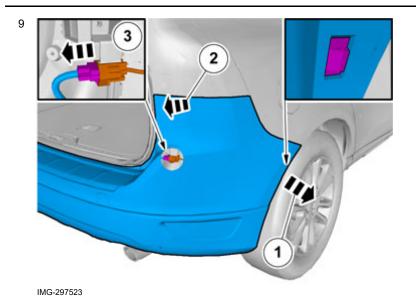


Note!

This step is easier with two people.

Disconnect the connector.


Volvo Car Corporation Gothenburg, Sweden

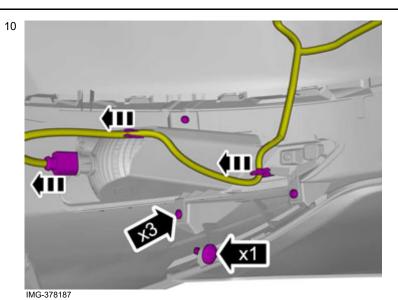


On both sides.

Remove the cable harness clips.

Remove the screws.

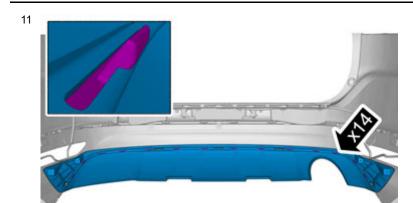

Volvo Car Corporation Gothenburg, Sweden

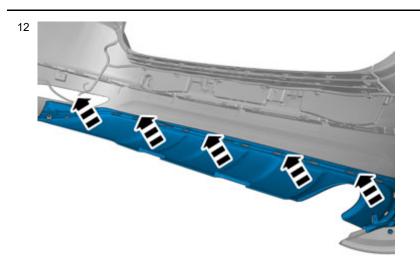


Remove the panel.

IMG-378186

Accessory installation

13

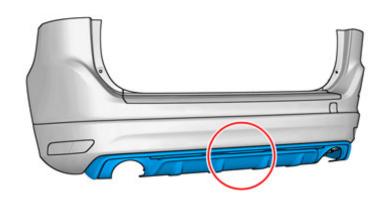


Note! Orientation view

IMG-377381

Vehicles with detachable towbar


14

Locate relevant marking.

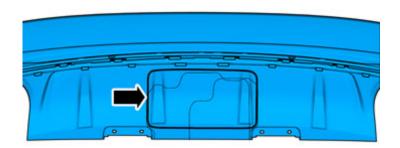

IMG-377732

15

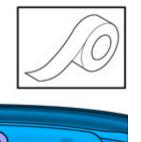


Apply tape to the other side, opposite the marking lines.

IMG-377740

© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

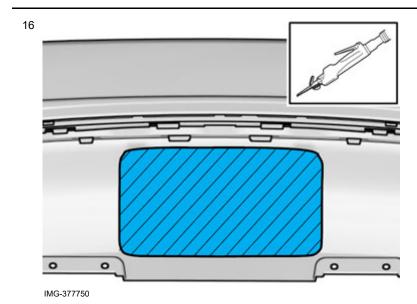


Deburr edges

IMG-377752

Vehicles with fixed towbar

18

Locate relevant marking.

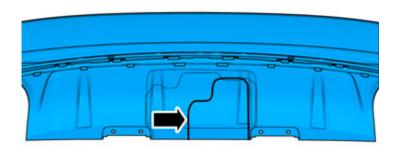


IMG-378000

19




Apply tape to the other side, opposite the marking lines.

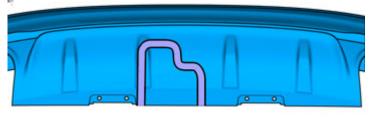

IMG-378001

© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

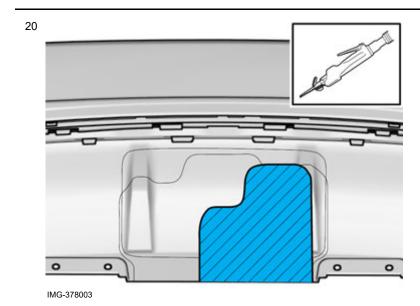


21

Deburr edges


IMG-378004

All vehicles


Volvo Car Corporation Gothenburg, Sweden

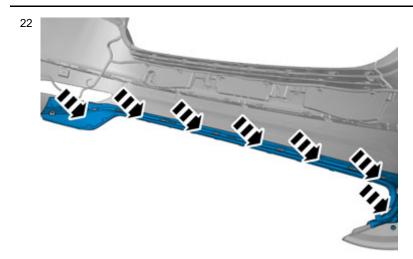

IMG-378188

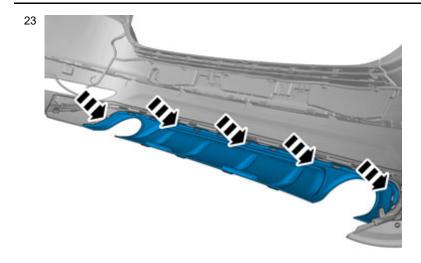

Volvo Car Corporation Gothenburg, Sweden

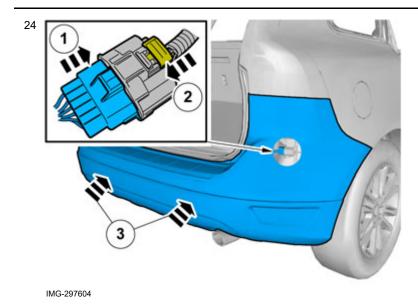

25

Reinstall the removed parts in reverse order.

© Volvo Car Corporation