

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

Instruction No
31359358

Version
1.0

Part. No.
31359362, 31359359, 31359364, 31373462, 31338931, 31338930, 31338929

Skid plate, front bumper

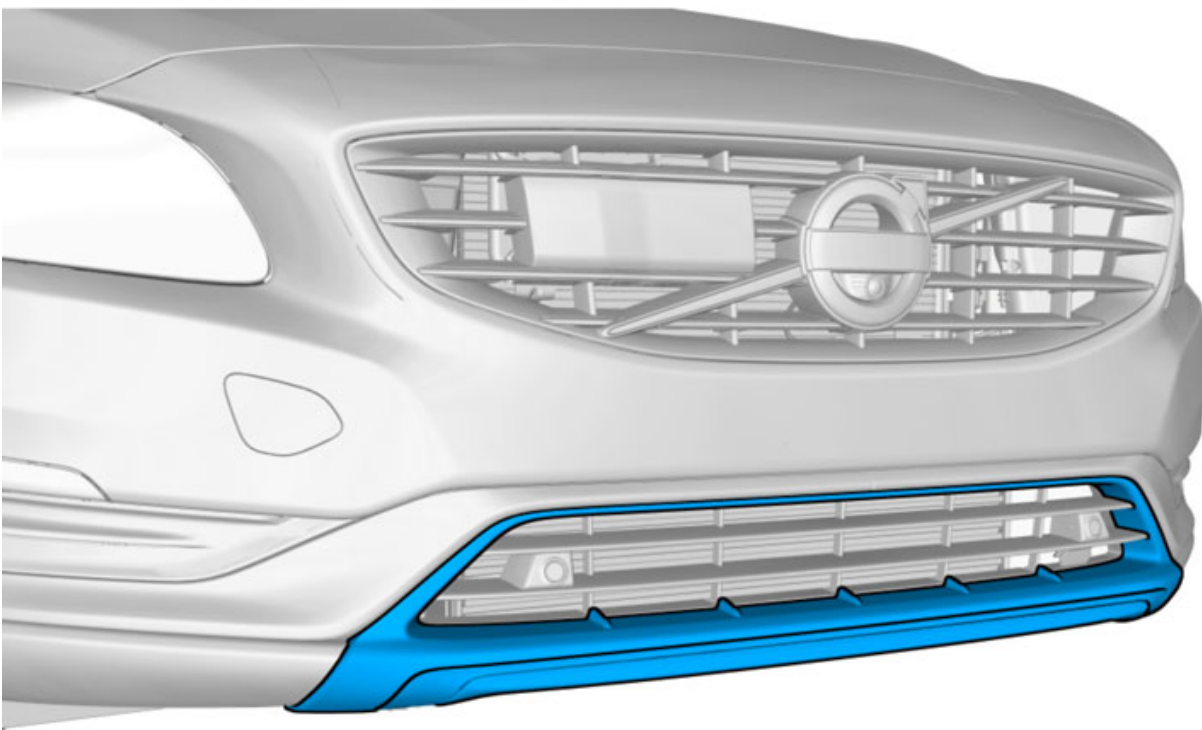


IMG-374908

Materials

Designation	Part number
Isopropanol	1161721
Primer	1161765


Equipment

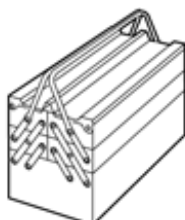

IMG-345497

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

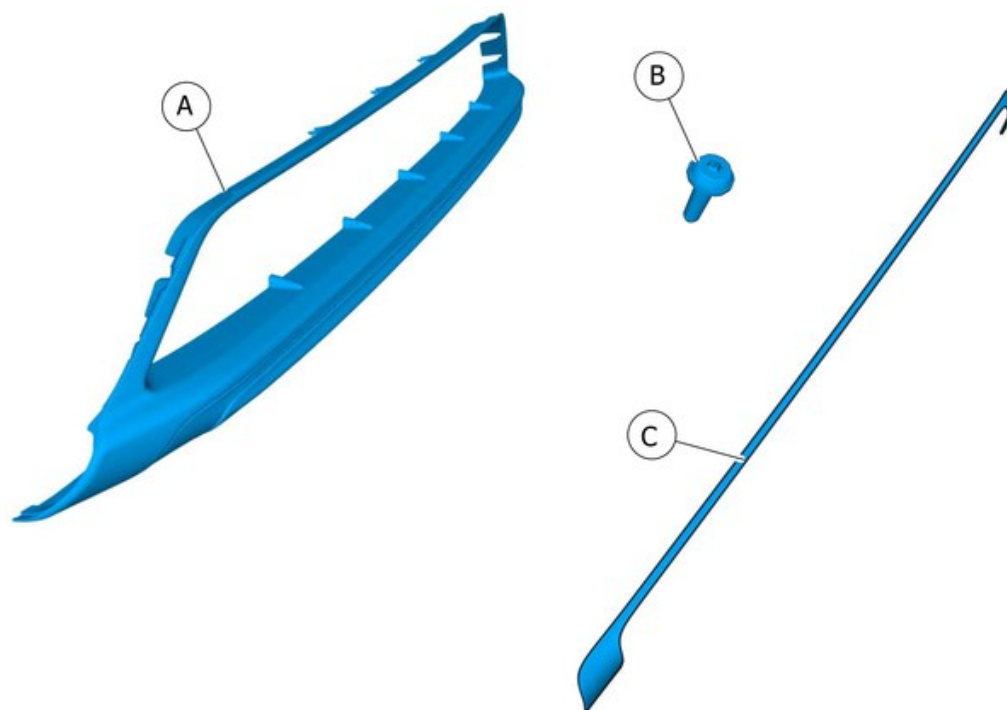

IMG-374925

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

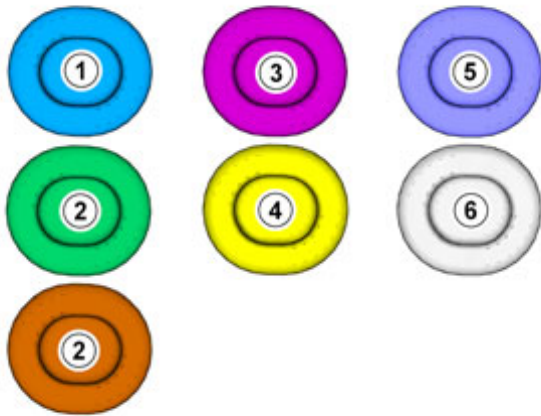

IMG-363036

- Note!**
This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.
1. Used for focused component, the component with which you will do something.
 2. Used as extra colors when you need to show or differentiate additional parts.
 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
 4. Used when the component is not fully removed from the vehicle but only hung to the side.
 5. Used for standard tools and special tools.
 6. Used as background color for vehicle components.

Further information

3

When installing, the car must retain a temperature of 20 degrees C.


After installation, the car must not be washed for 48 hours

Applies to unpainted component

Installation instructions, accessories



Volvo Car Corporation Gothenburg, Sweden

4

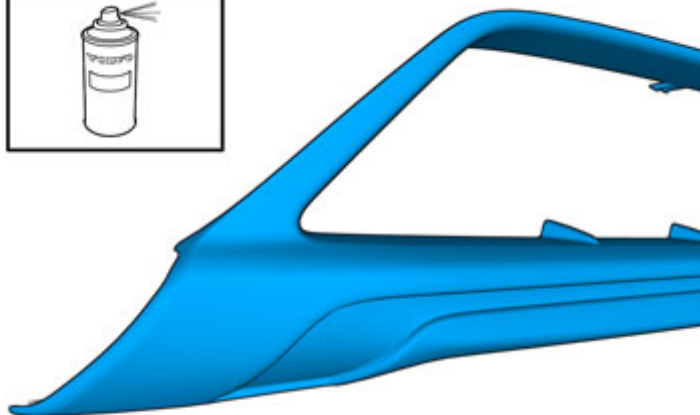

IMG-377423

5

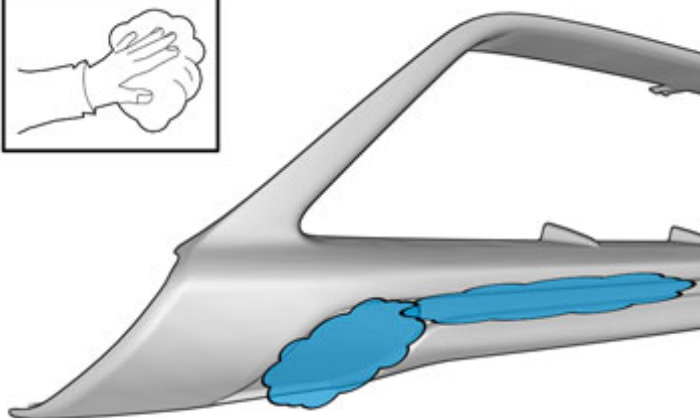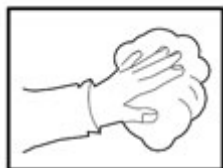

Caution!

First the paint must dry after painting.

Clean the surface.

Use: 1161721, Isopropanol


IMG-377422

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6


Remove the protective film.

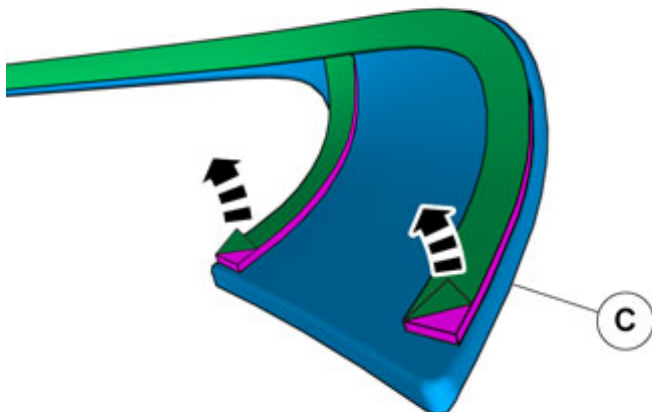

IMG-377419

7

Install component that comes with the accessory kit.

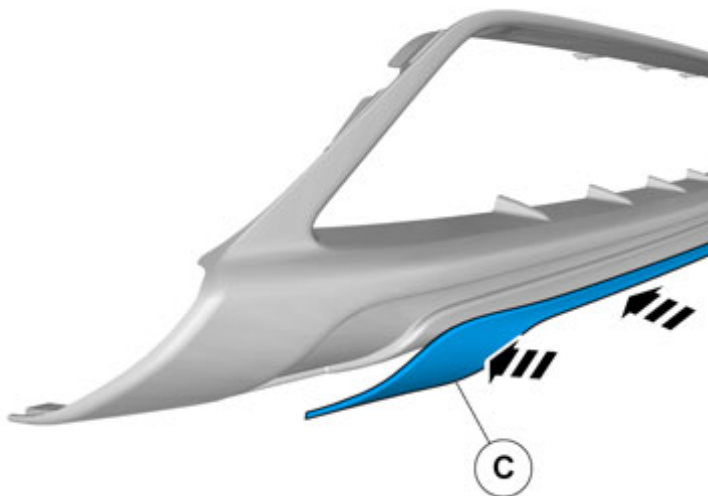

IMG-377424


Removal

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

8

Remove the screws.

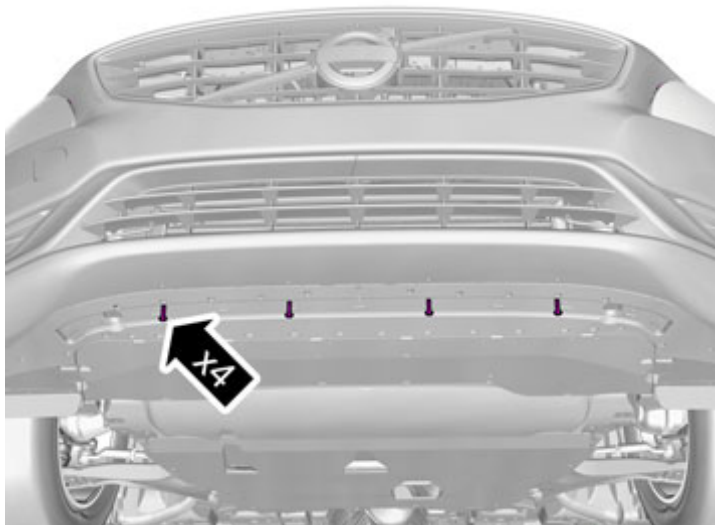


IMG-374940

Accessory installation

9

Use: 1161721, Isopropanol

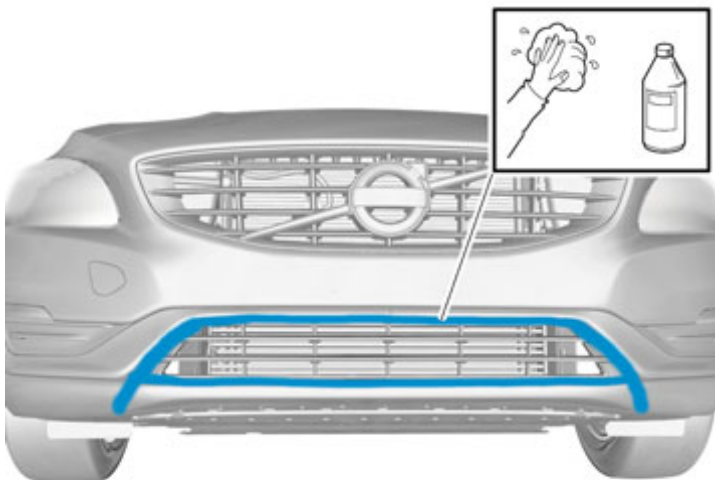


IMG-374941

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


10

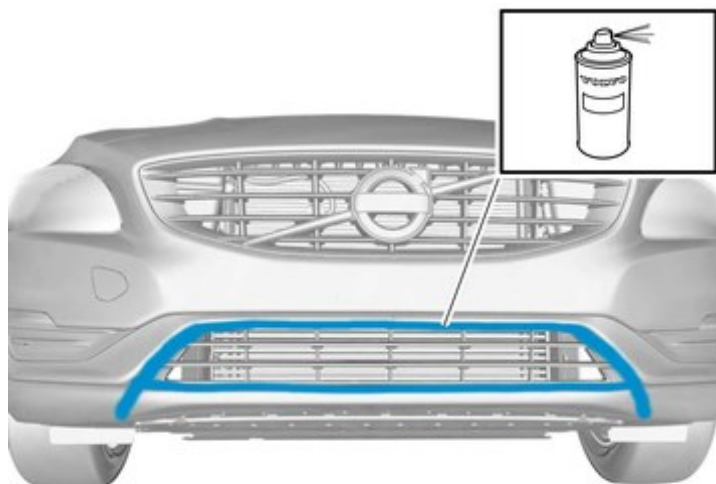

Use: 1161765, Primer

IMG-401250

11

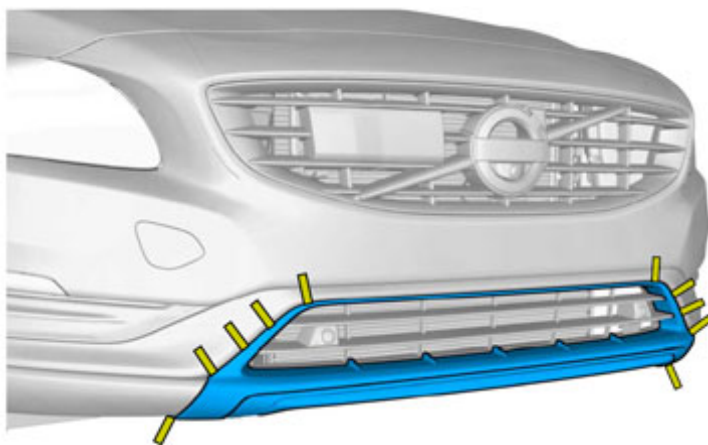


Fold the protective film forward

IMG-375481

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

12

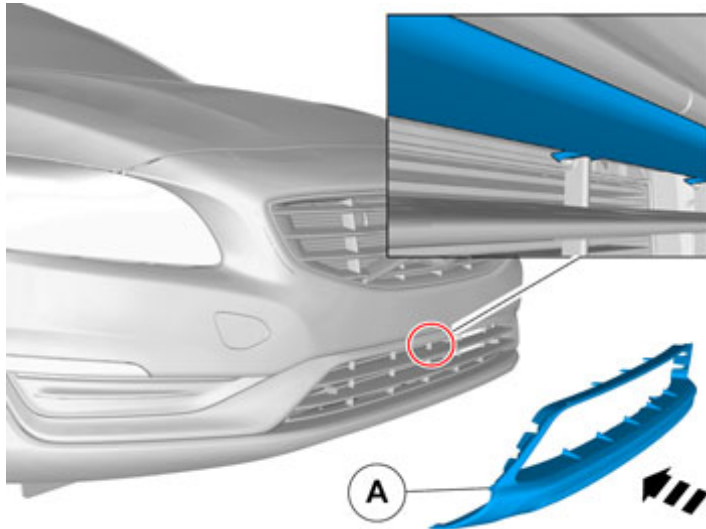

IMG-374942

13

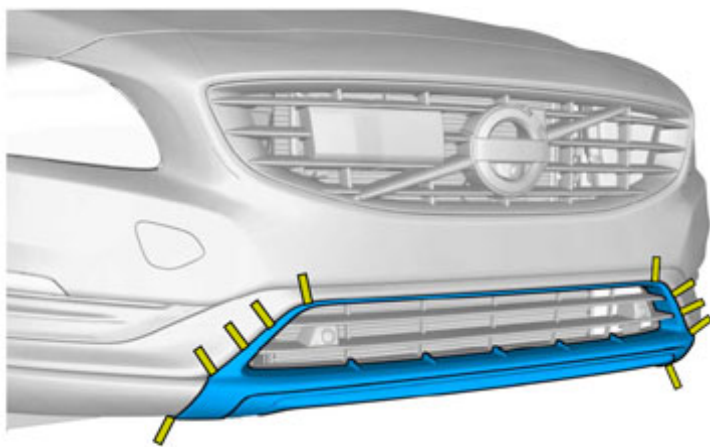

IMG-375481

Remove the protective film.


Hint

Press and apply pressure to the part over the tape for at least 20 seconds.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

14

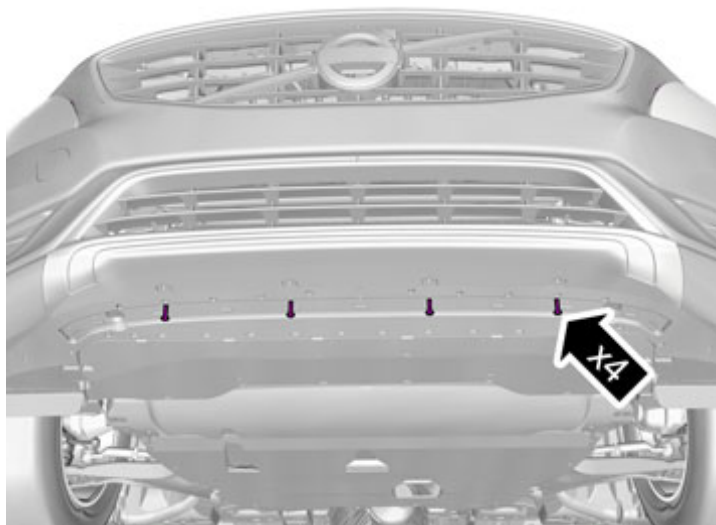

IMG-375483