


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
31370020	1.1	31399426, 31399425, 39822331, 39824091, 39824078, 39822422, 39822415, 39822408, 39822394, 39822387, 39822380, 39822373, 39822359, 39822352, 39822345, 39822338, 39822324

## Running board

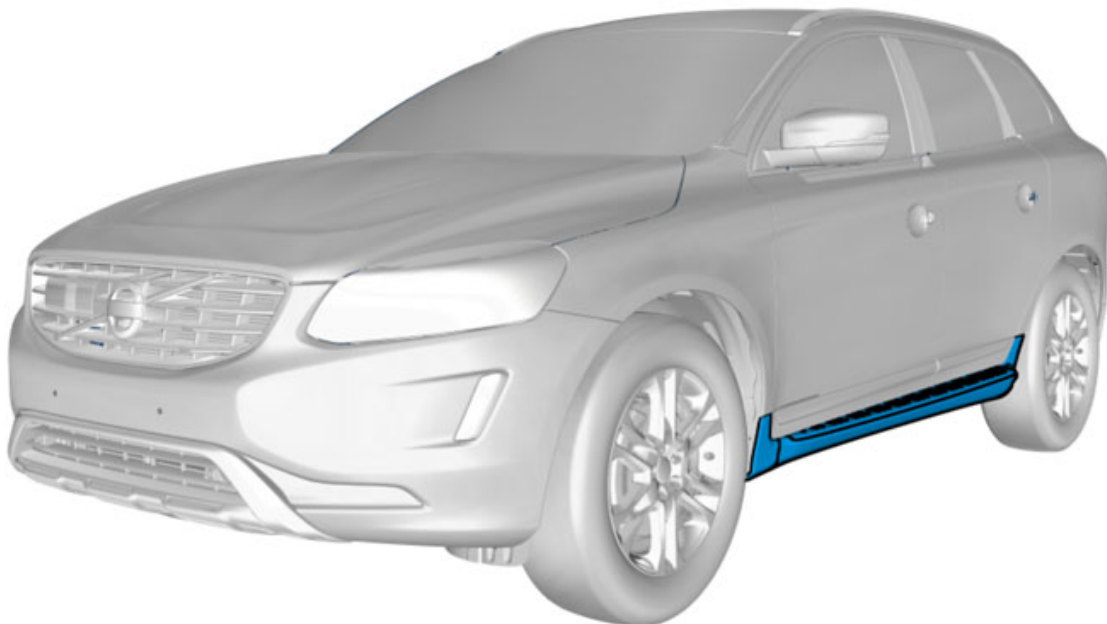

IMG-375551

### Special tools


951 2782 Rivet nut tool

Tool number:951 2782

Tool description:Rivet nut tool

Tool boards:08

### Equipment

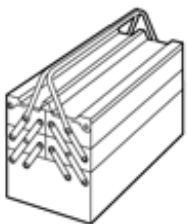


**Nm**  
**lbf.ft**

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

IMG-345497

IMG-239664

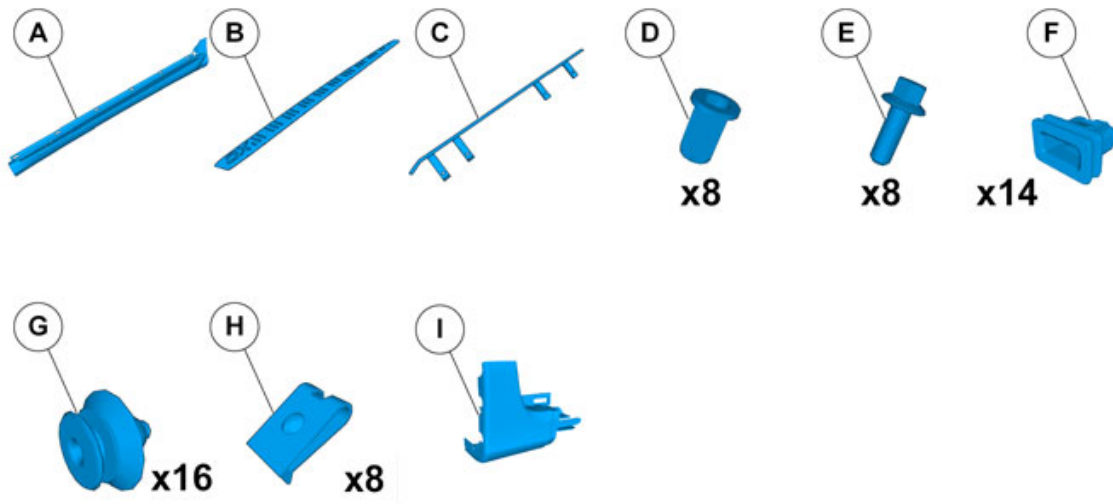

IMG-376095

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

## Information

---

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.


In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

---

## Color symbols

---

2

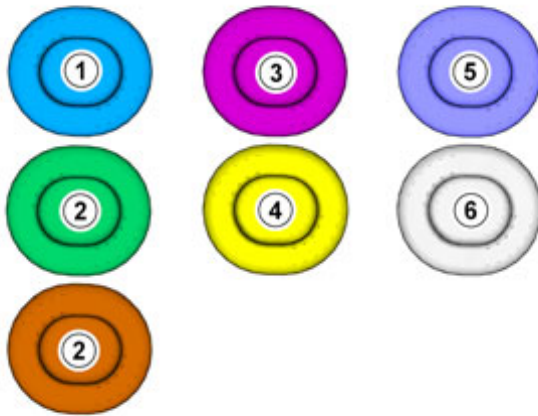

IMG-363036

### Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

1. Used for focused component, the component with which you will do something.
  2. Used as extra colors when you need to show or differentiate additional parts.
  3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
  4. Used when the component is not fully removed from the vehicle but only hung to the side.
  5. Used for standard tools and special tools.
  6. Used as background color for vehicle components.
- 

## Preparation

---


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

Set the ignition key to position 0.

Wait for about 2 minutes until the vehicle has gone to sleep-mode.

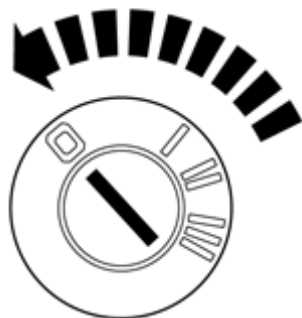


IMG-245980

## Removal

4

Remove the screws.

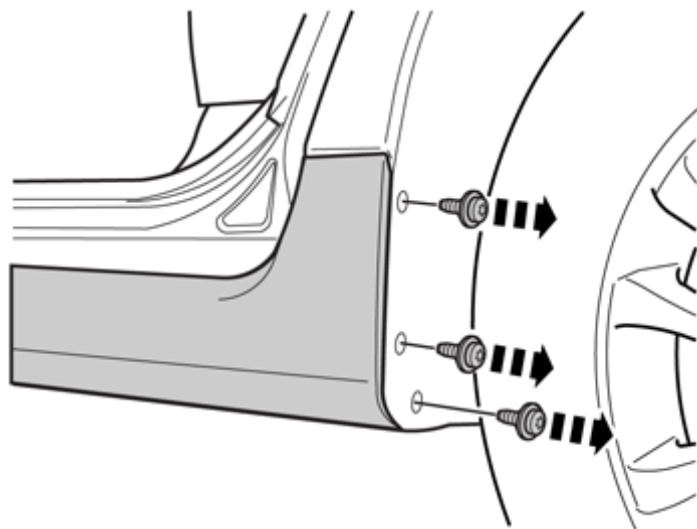


IMG-287287

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


5

Remove the screws.

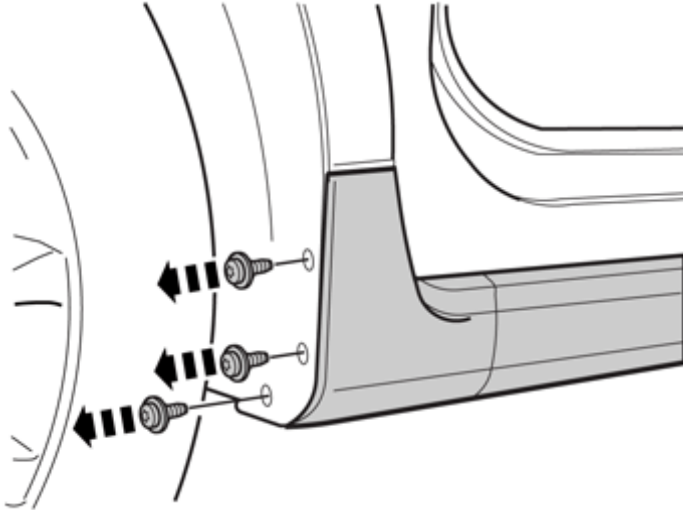

IMG-285505

6

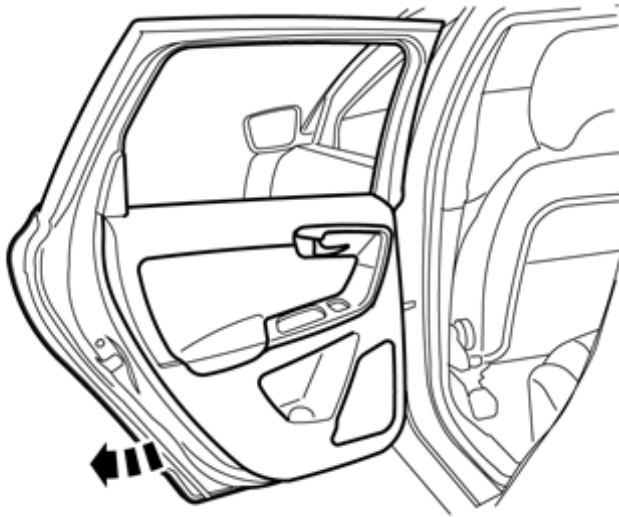


IMG-296643

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


7

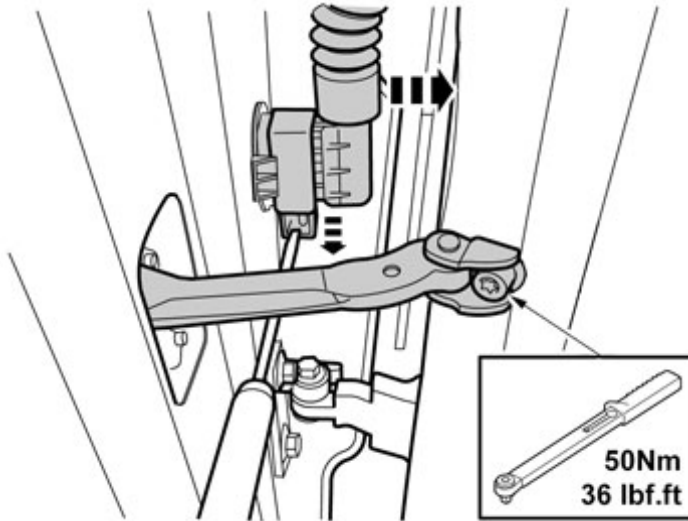

IMG-376181

1. Release the connector's catch.
2. Disconnect the connector.
3. Remove the screw.

8

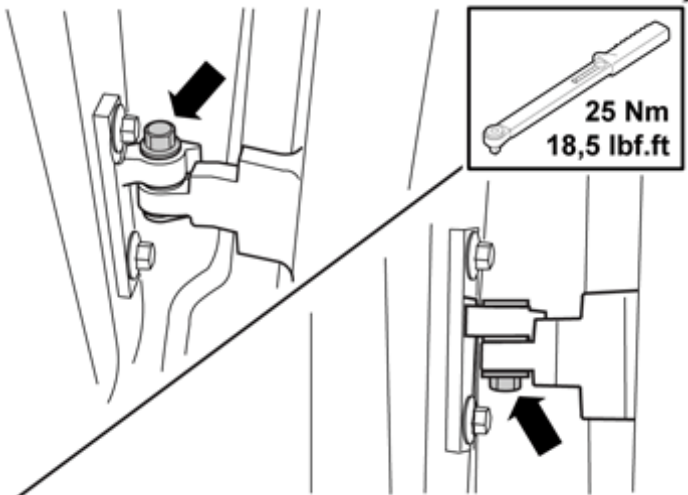


IMG-296684

Remove the screws.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

9

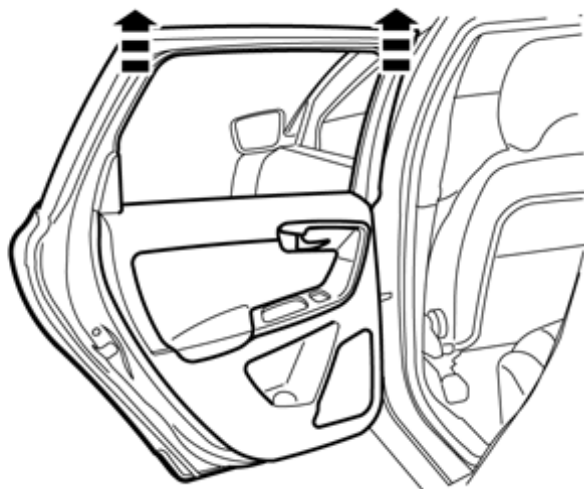


**Note!**

This step is easier with two people.

IMG-296646

10

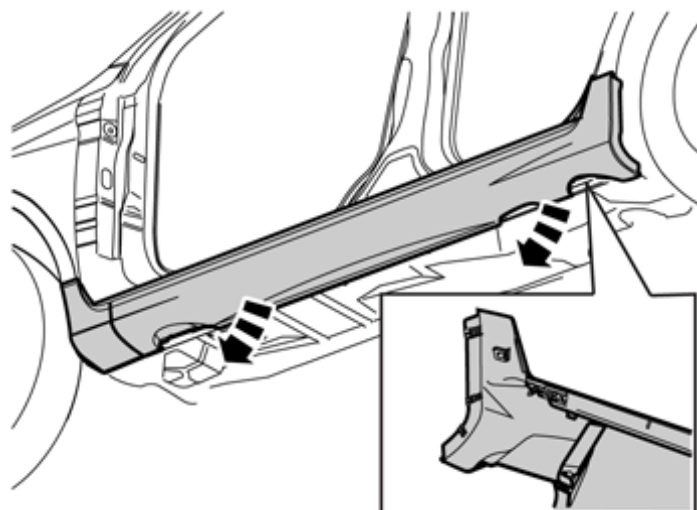


IMG-287303

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

11

Remove the rubber strip.

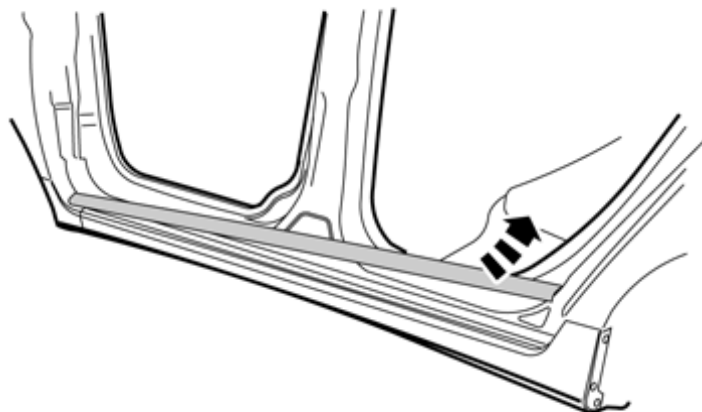


IMG-287304

12

Release the catches.

Detach the panel.

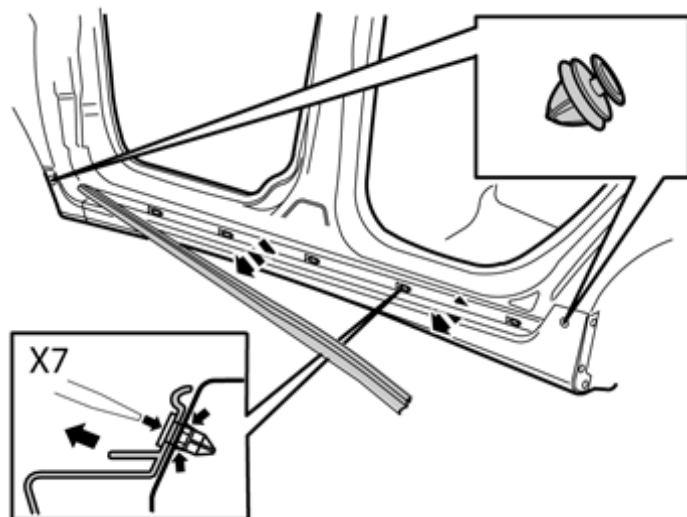


IMG-287306



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

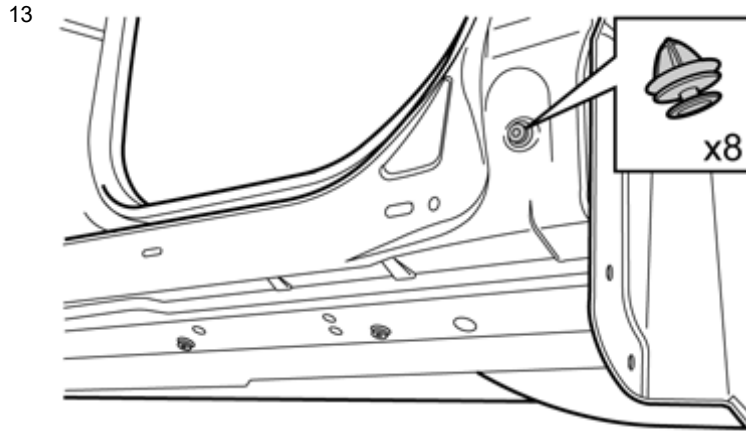


Remove all clips (8 pcs on each side) from the door sill, and in the front and rear wings, and replace them with new ones.

IMG-296663

## Accessory installation

14

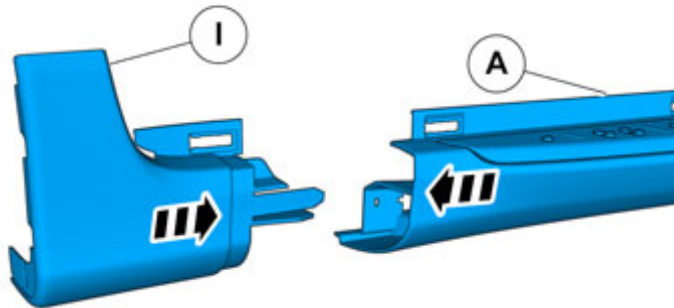


IMG-381534

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


15

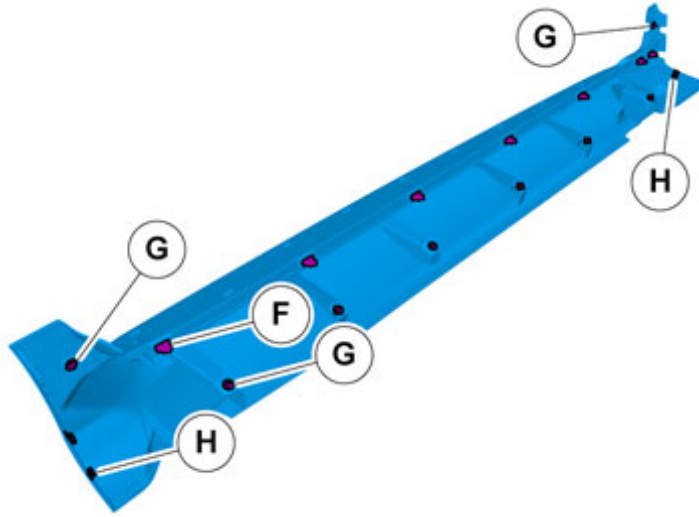

Install the clips as illustrated.

IMG-376097

16

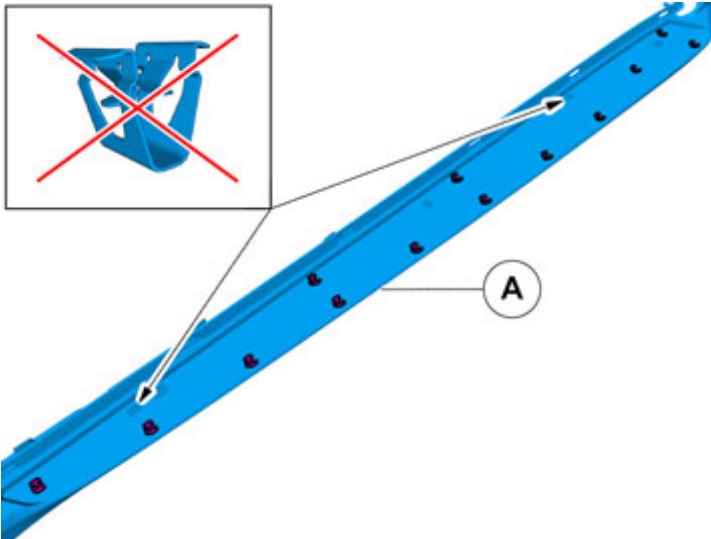

**Note!**  
Orientation view


Note position of components.

IMG-376108

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

17

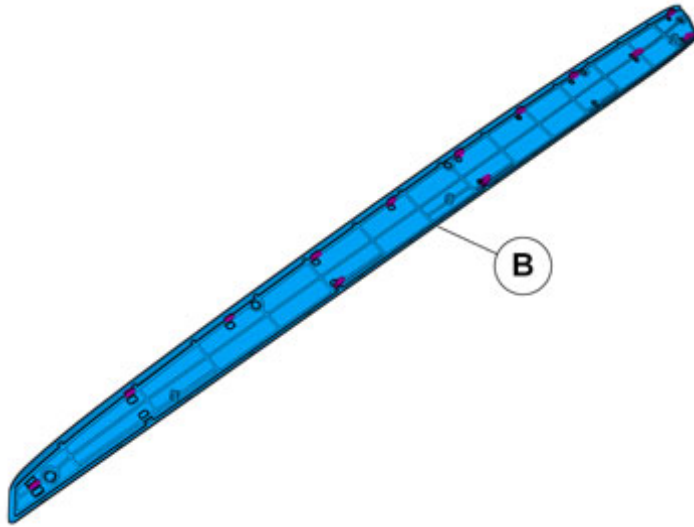


IMG-376113

**Note!**  
Orientation view

Note the position.

18

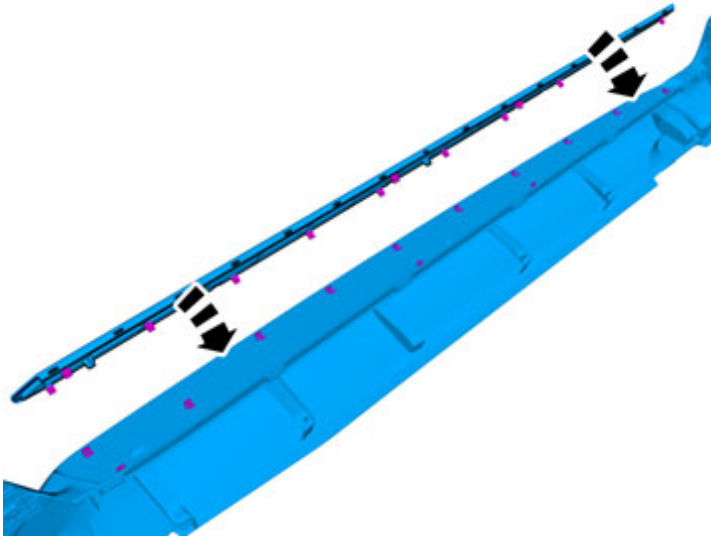


IMG-376167

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

19

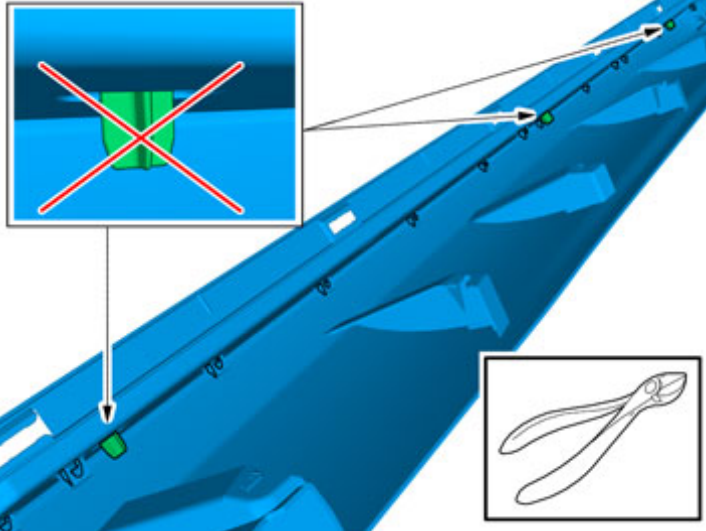

IMG-376136

20

Reinstall the rubber weatherstrip.




IMG-287346

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

21

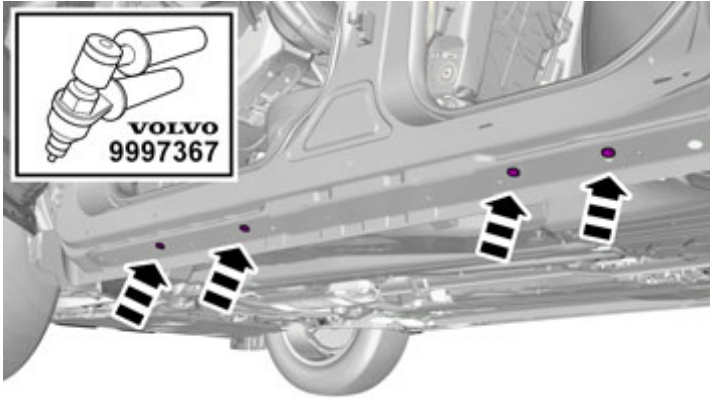


Install the nut.

Note the position.

**Use special tool:** T9512782, Rivet nut tool

IMG-376305

22

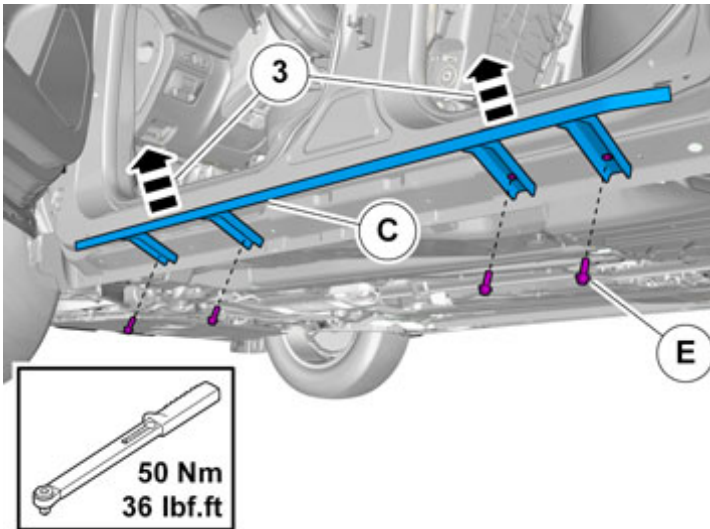

1. Install component that comes with the accessory kit.

2. Install the screws.

3.

**Note!**  
Keep the part stretched during installation.

4.

**Tightening torque:** M10 , 50 Nm


IMG-376324

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

23

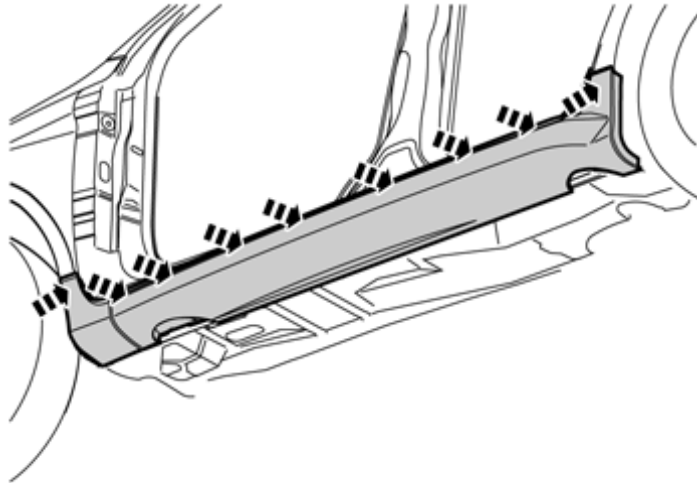

Ensure that all clips engage.

IMG-287349

---

24

Reinstall the removed parts in reverse order.

---