

Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.


 31213819
 1.2
 31378095, 31213816

Sill decor

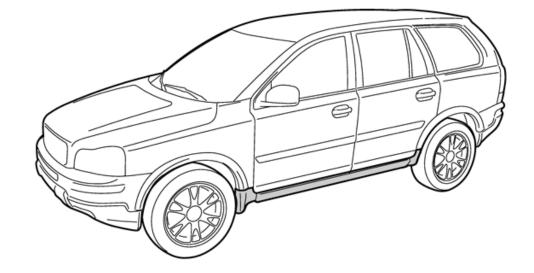

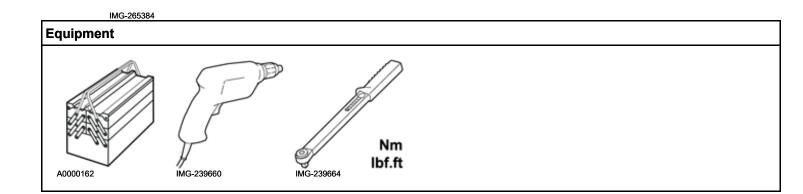

Volvo Car Corporation Gothenburg, Sweden

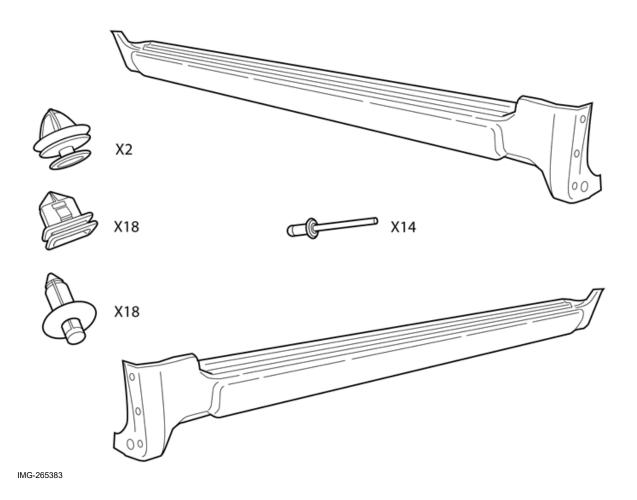

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Preparations

Preparations


Remove the front and rear wheels on one side.

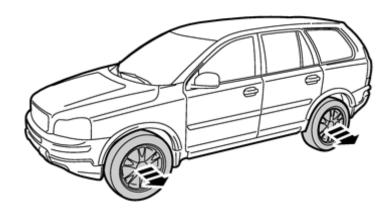

IMG-265385

1


Volvo Car Corporation Gothenburg, Sweden

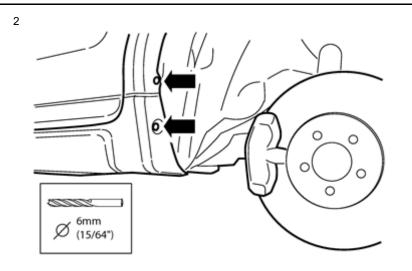

Drill out the pop rivet at the rear edge of the door sill panel and the rear pop rivet in the wing extender. Use a Ø6 mm (15/64") drill bit.

Remove any swarf and rivet residue.

IMG-265386

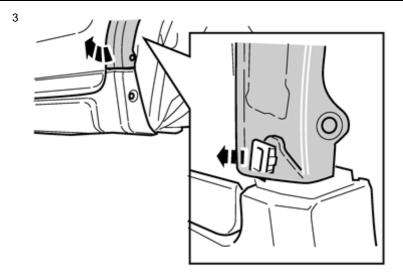


Carefully turn out the lower edge/rear edge of the front end of the wing extender.

Note!

Do not turn excessively so that the tape at the front edge detaches.

Remove the clip holding the rear end of the door sill panel.

Volvo Car Corporation Gothenburg, Sweden

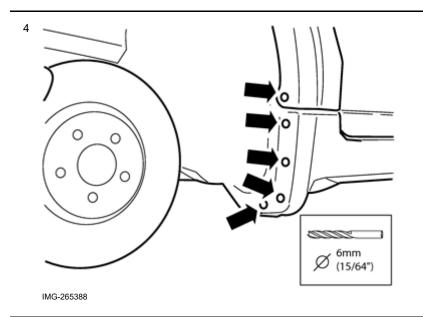

Drill out the pop rivets at the front edge of the door sill panel and in the rear edge of the wing extender. Use a Ø6 mm (15/64") drill bit.

Remove any swarf and rivet residue.

Carefully turn out the lower edge/rear edge of the wing extender to make room to saw off the pin in the lower edge of the panel on the inside.

Note!

Do not turn excessively so that the tape at the front edge detaches.


Carefully cut off the pin on the panel. Use part of a hacksaw blade.



5

Volvo Car Corporation Gothenburg, Sweden


6

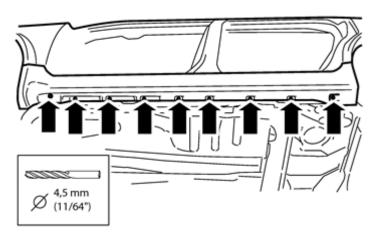


Drill out the central pins in the clips at the lower edge of the door sill panel and remove them. Use a Ø4.5 mm (11/64")

Remove the rubber strip.

IMG-265390

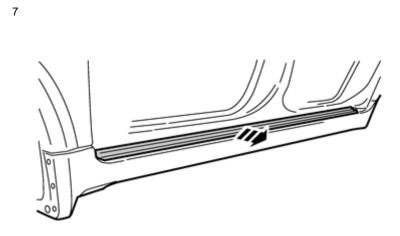


Volvo Car Corporation Gothenburg, Sweden

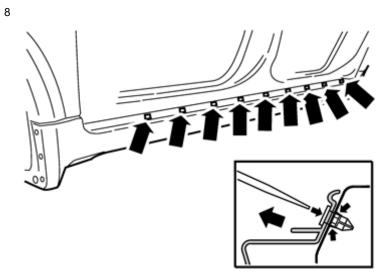

Insert a large flat-bladed screwdriver, press the bottom of the clips and pull off the door sill panel with the clips.


IMG-265392

9

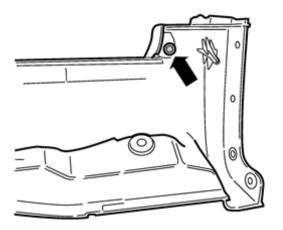


Detach the door sill panel's front end. It is secured by a clip.

Volvo Car Corporation Gothenburg, Sweden

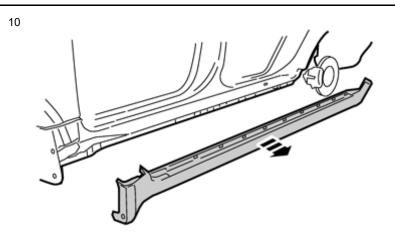

Remove the panel from the body. It will not be reused.

IMG-265394

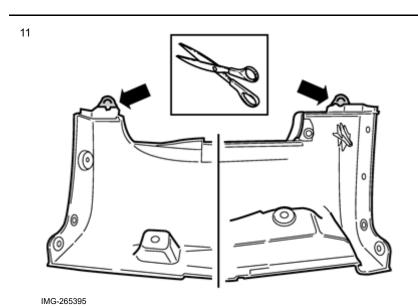


Installation

Installation

Take a new panel from the kit. Cut off the mounting eyelets on top of the upper sides.


Volvo Car Corporation Gothenburg, Sweden

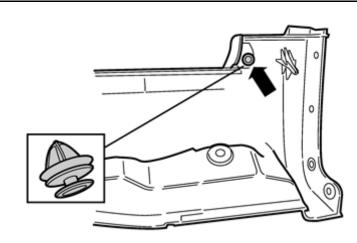

Install a new clip.


IMG-265396

12

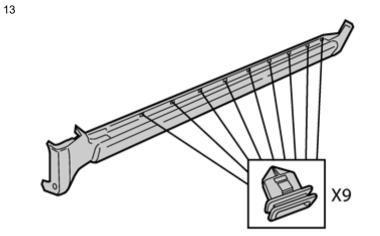

Install new clips.


Volvo Car Corporation Gothenburg, Sweden

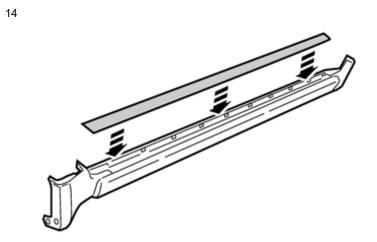

Press the rubber strip onto the new panel.

IMG-265398



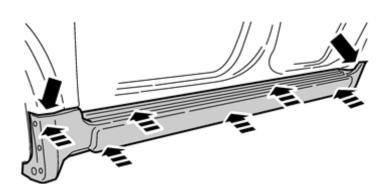


Align the door sill panel ends under the wing extenders.

Press the front section clips into place.

Press the panel with the rubber strip along the body side. Ensure that all clips engage and that the rubber strip is correctly positioned.


Volvo Car Corporation Gothenburg, Sweden

16

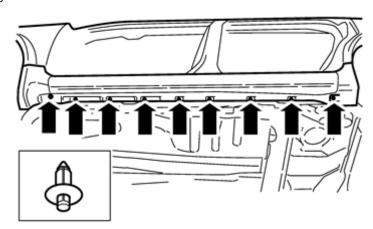


Press the panel into place in the lower edge using new clips.

IMG-265400

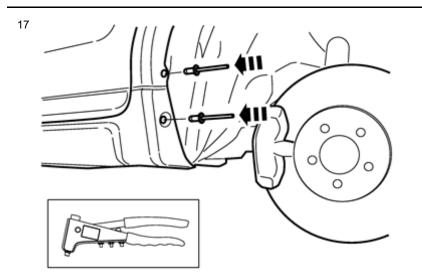


Pop rivet the panels into place.

Volvo Car Corporation Gothenburg, Sweden

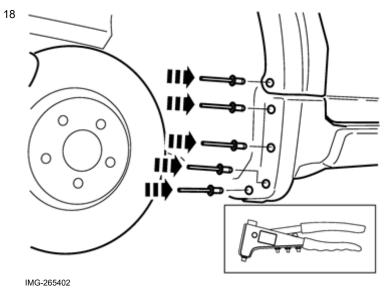

Pop rivet the panels into place.

19

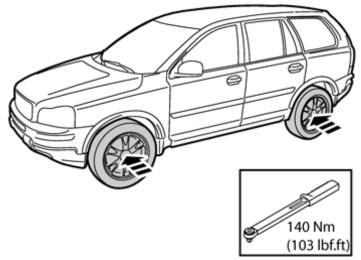

Reinstall the front and rear wheels. Repeat all steps for the other side.