


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 31213819    **Version** 1.2    **Part. No.** 31378095, 31213816

## Sill decor

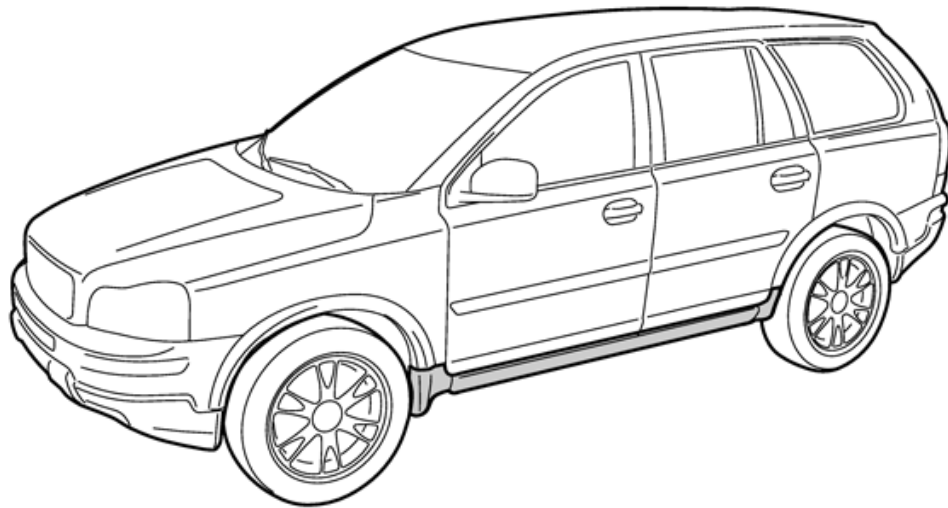

IMG-265384

### Equipment

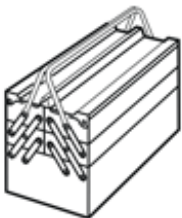

A0000162



IMG-239660




IMG-239664

**Nm**  
**lbf.ft**

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

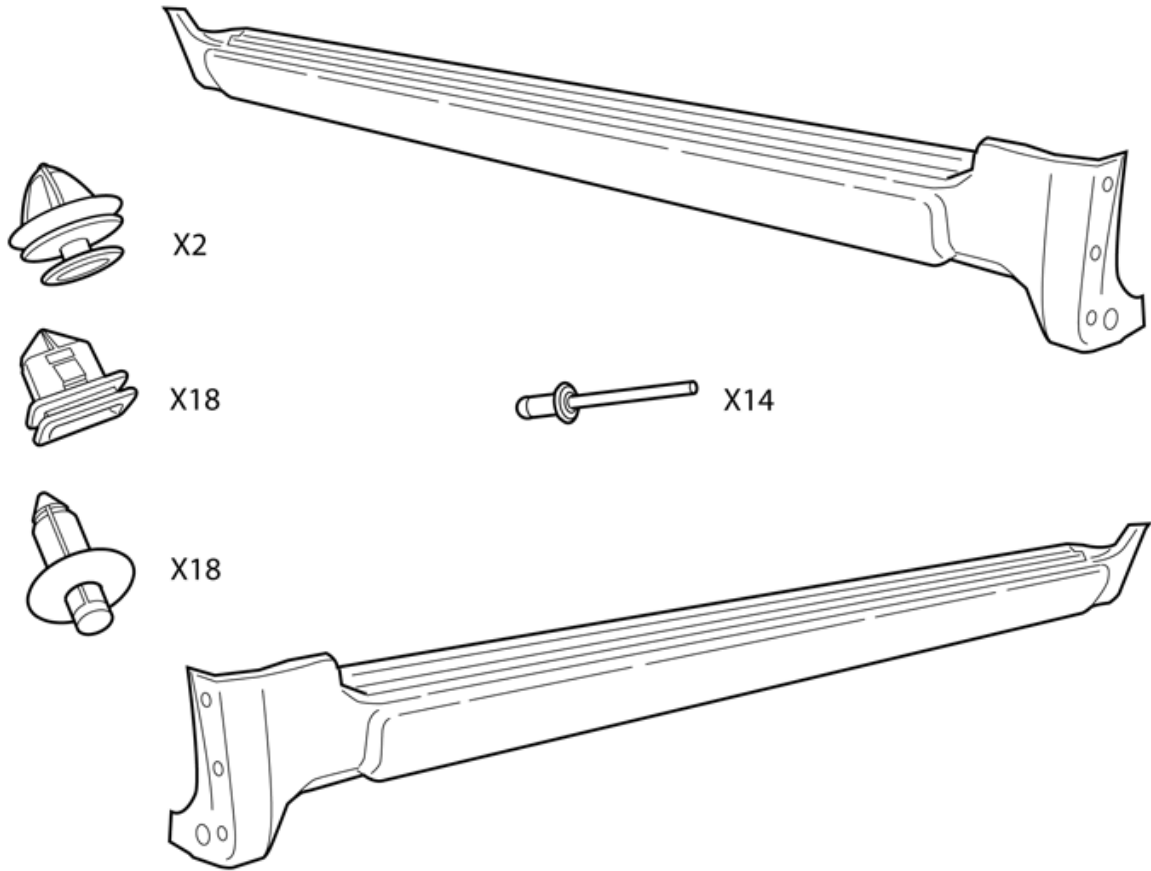

IMG-265383

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

## INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

---

## Preparations

1

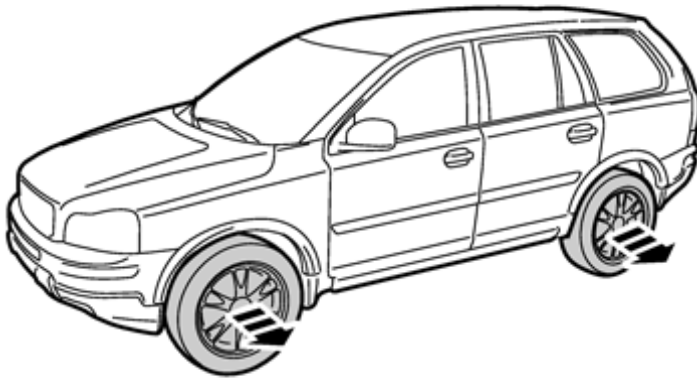

IMG-265385

## Preparations


Remove the front and rear wheels on one side.

---

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

2

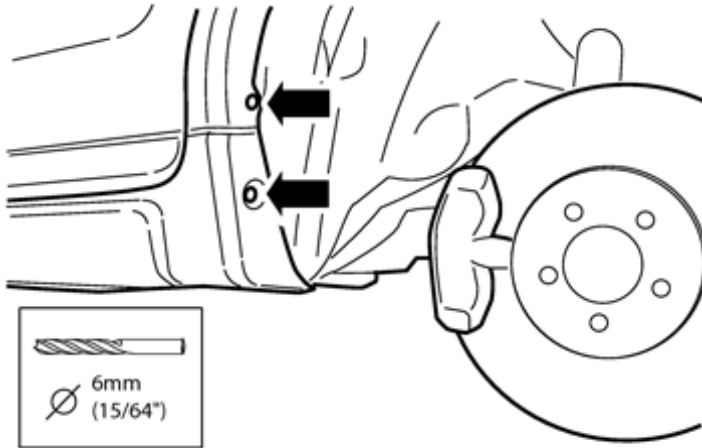


Drill out the pop rivet at the rear edge of the door sill panel and the rear pop rivet in the wing extender. Use a  $\varnothing 6$  mm (15/64") drill bit.

Remove any swarf and rivet residue.

IMG-265386

3

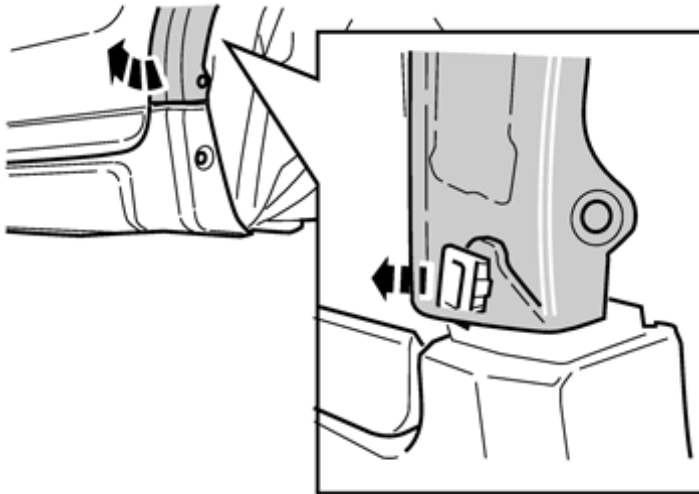

Carefully turn out the lower edge/rear edge of the front end of the wing extender.

**Note!**


Do not turn excessively so that the tape at the front edge detaches.

Remove the clip holding the rear end of the door sill panel.

IMG-265387

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

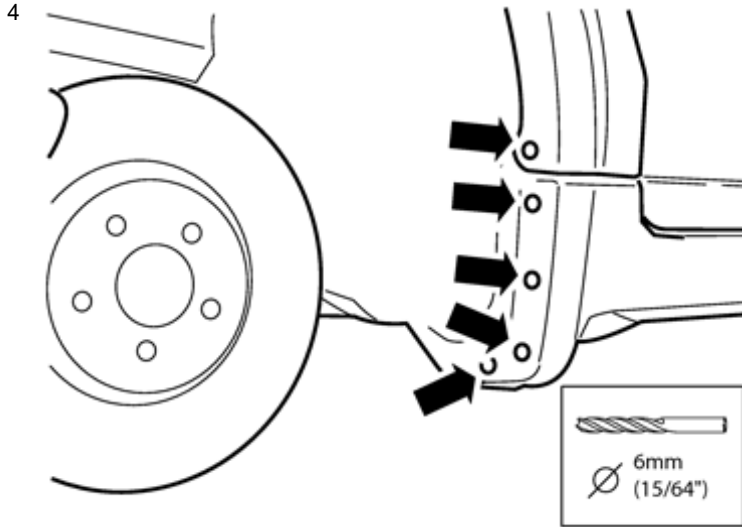

IMG-265388

Drill out the pop rivets at the front edge of the door sill panel and in the rear edge of the wing extender. Use a  $\varnothing$ 6 mm (15/64") drill bit.

Remove any swarf and rivet residue.

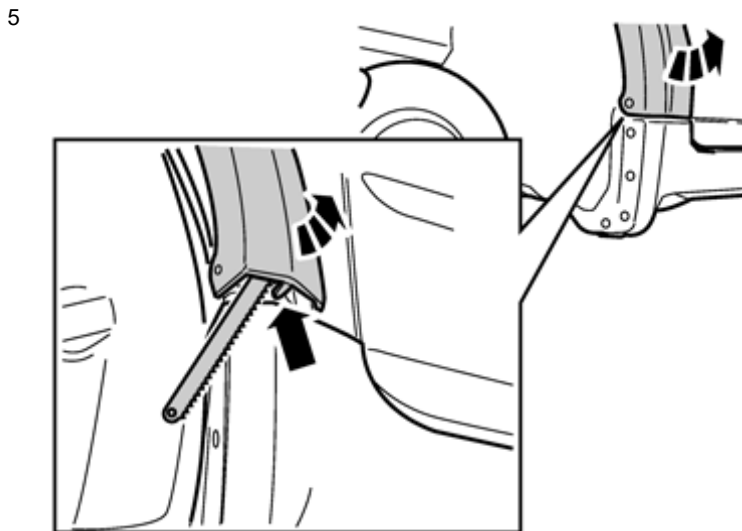

IMG-265389

Carefully turn out the lower edge/rear edge of the wing extender to make room to saw off the pin in the lower edge of the panel on the inside.

**Note!**


Do not turn excessively so that the tape at the front edge detaches.

Carefully cut off the pin on the panel. Use part of a hacksaw blade.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


6

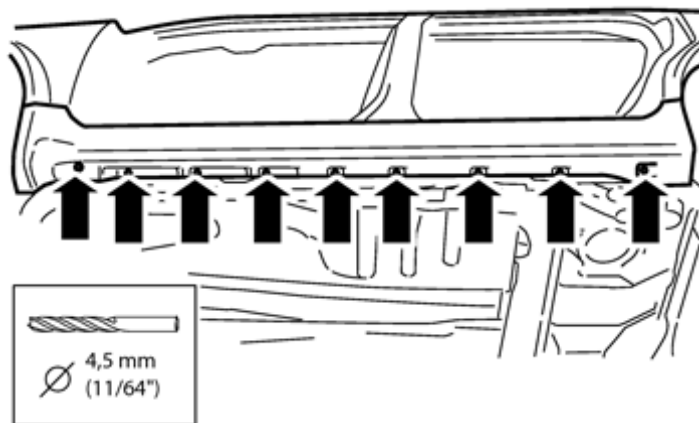

Drill out the central pins in the clips at the lower edge of the door sill panel and remove them. Use a  $\varnothing$ 4.5 mm (11/64")

IMG-265390

7

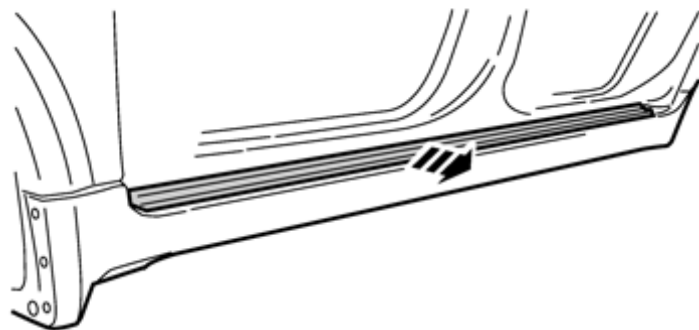


Remove the rubber strip.

IMG-265391

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


8

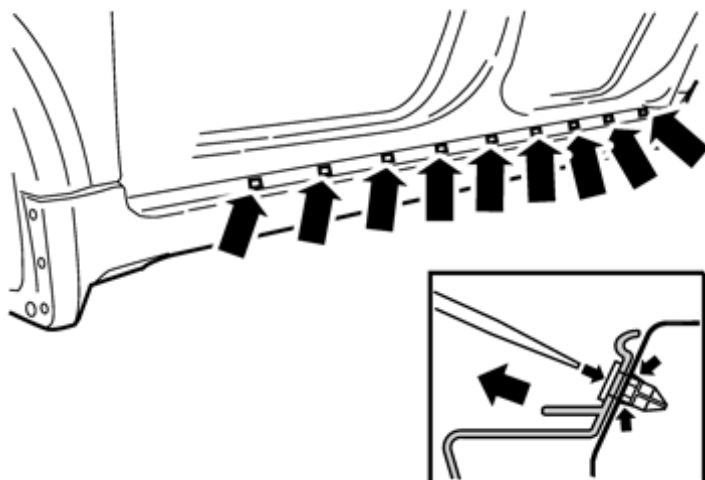

IMG-265392

Insert a large flat-bladed screwdriver, press the bottom of the clips and pull off the door sill panel with the clips.

9

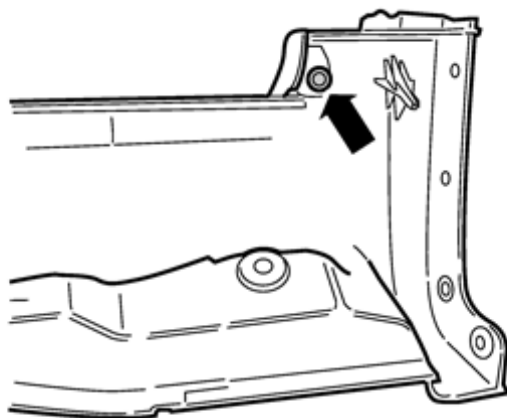


IMG-265393

Detach the door sill panel's front end. It is secured by a clip.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

10

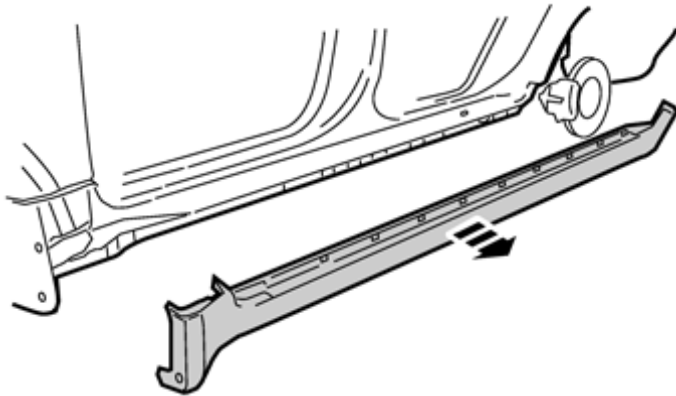


Remove the panel from the body. It will not be reused.

IMG-265394

## Installation

11

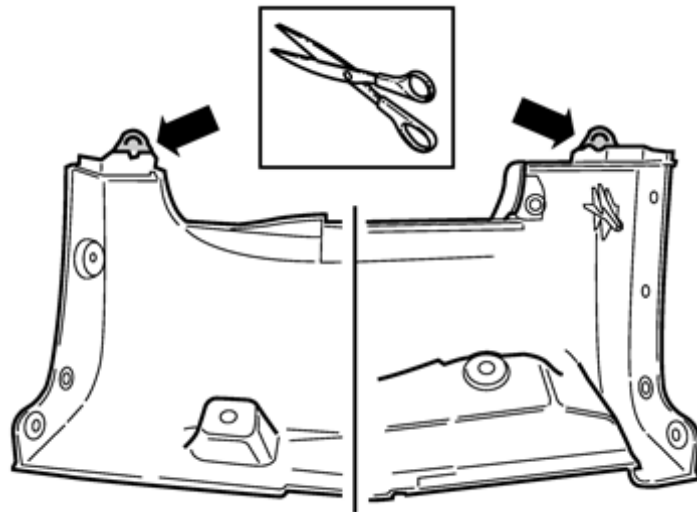

## Installation

Take a new panel from the kit. Cut off the mounting eyelets on top of the upper sides.


IMG-265395



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


12

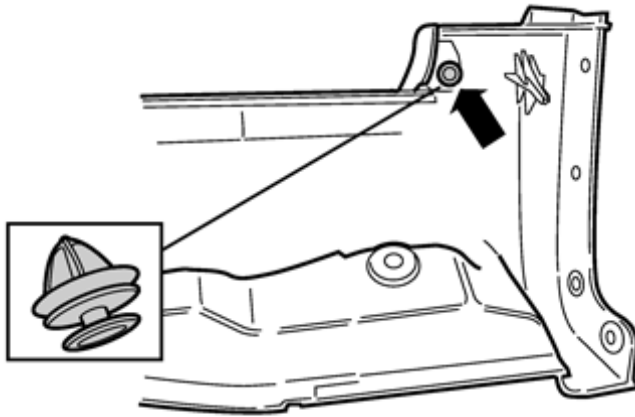

Install a new clip.

IMG-265396

13

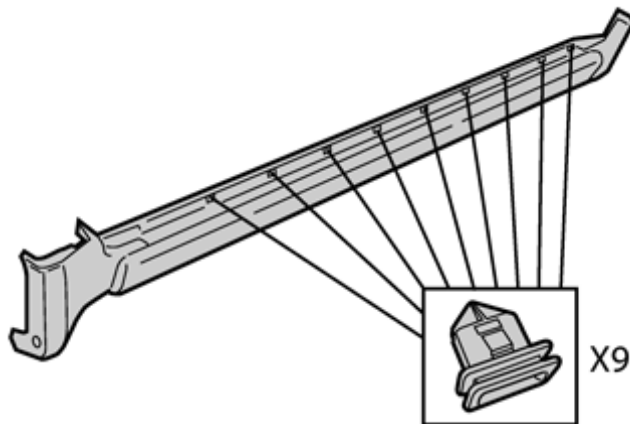


Install new clips.

IMG-265397

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


14

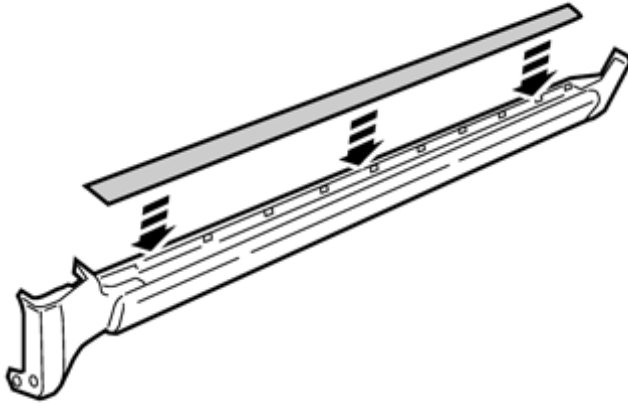

IMG-265398

Press the rubber strip onto the new panel.

15

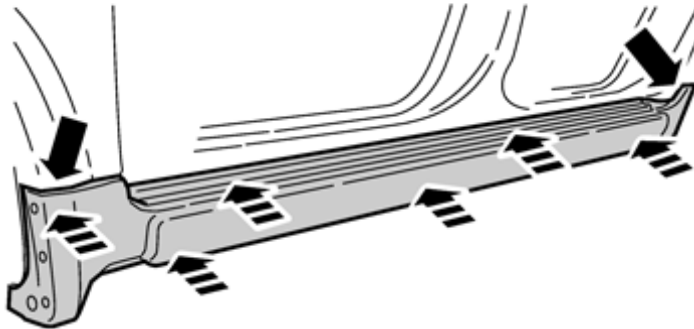

IMG-265399

Align the door sill panel ends under the wing extenders.


Press the front section clips into place.

Press the panel with the rubber strip along the body side.  
Ensure that all clips engage and that the rubber strip is correctly positioned.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


16

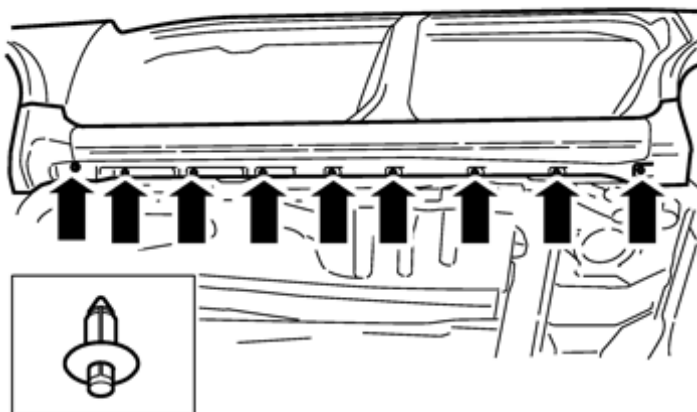

Press the panel into place in the lower edge using new clips.

IMG-265400

17

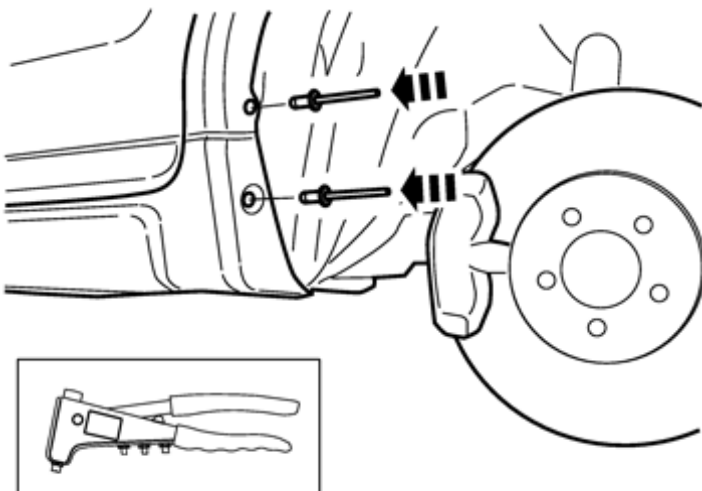


Pop rivet the panels into place.

IMG-265401


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

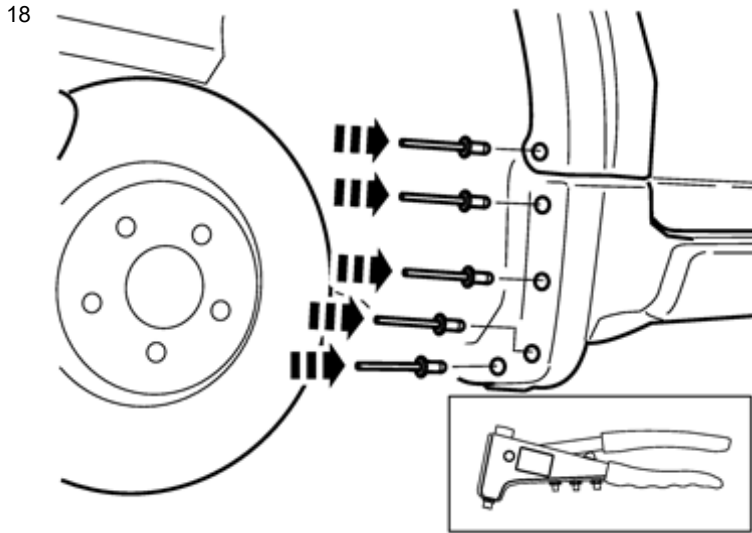

IMG-265402

Pop rivet the panels into place.

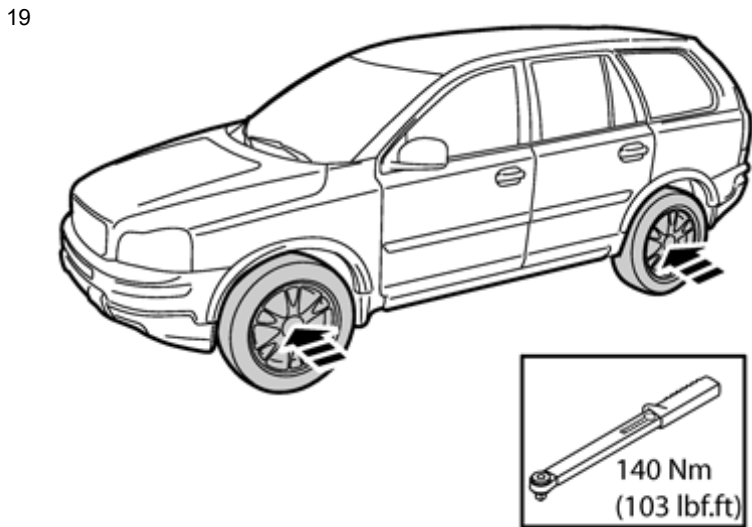

IMG-265403

Reinstall the front and rear wheels.

Repeat all steps for the other side.