


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 30758077  
**Version** 1.0  
**Part. No.** 30756499

## Mesh pocket, cargo compartment, side panel

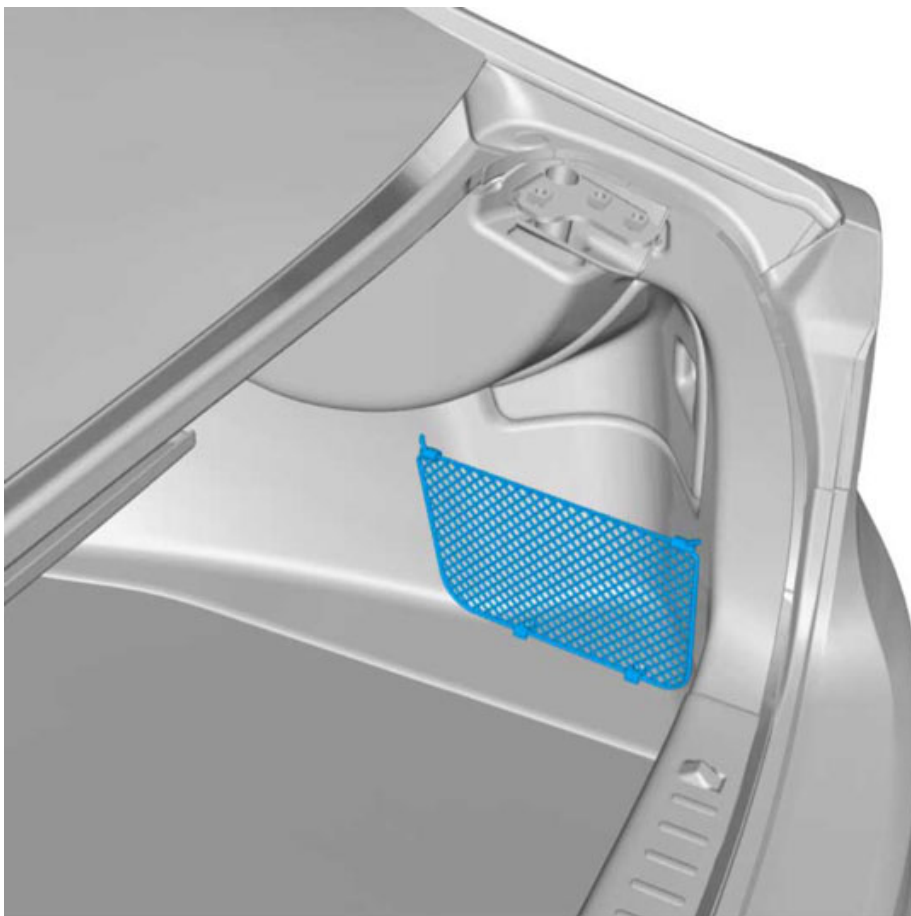

IMG-339771

### Equipment

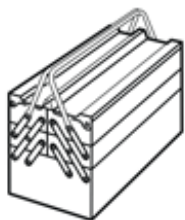


A0000162



IMG-239660



IMG-239681

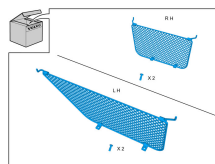

IMG-339772

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

## INTRODUCTION


Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

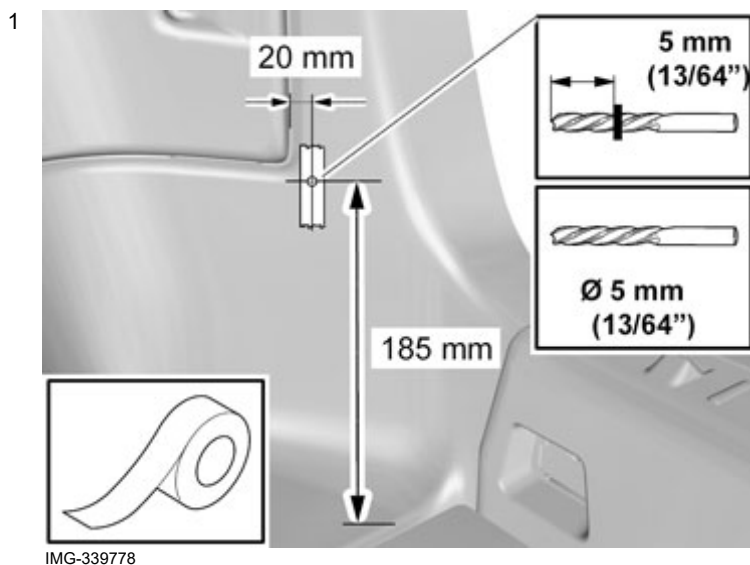


### Mesh pocket right side

Apply the strips of tape as illustrated.

Make marks for drilling holes for the mesh pocket mountings.

Drill out the hole.

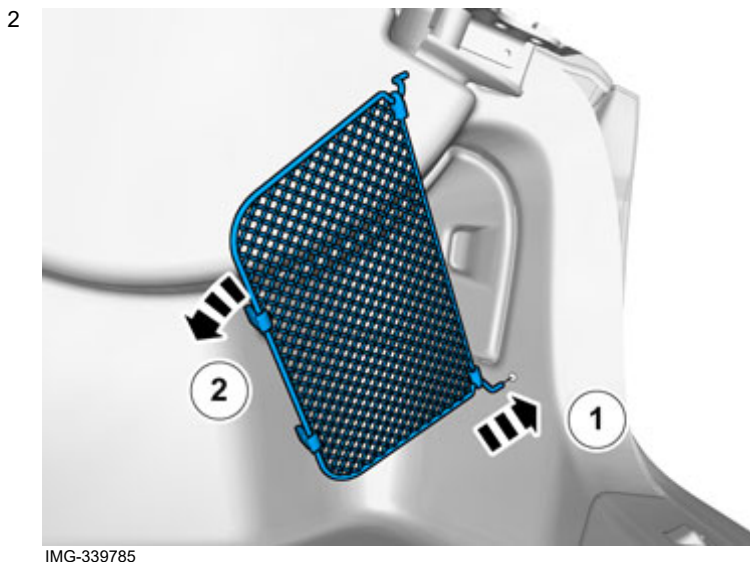


Insert the pocket's rear mounting in the hole in the panel and fold down.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


3

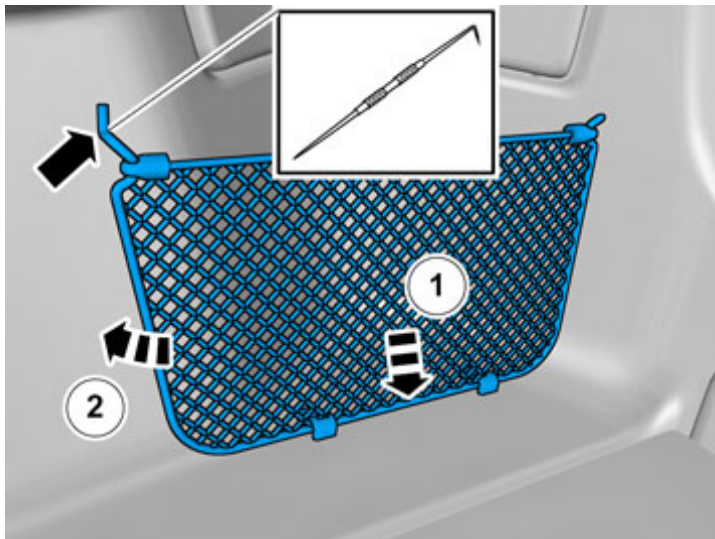

IMG-339776

Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.

4

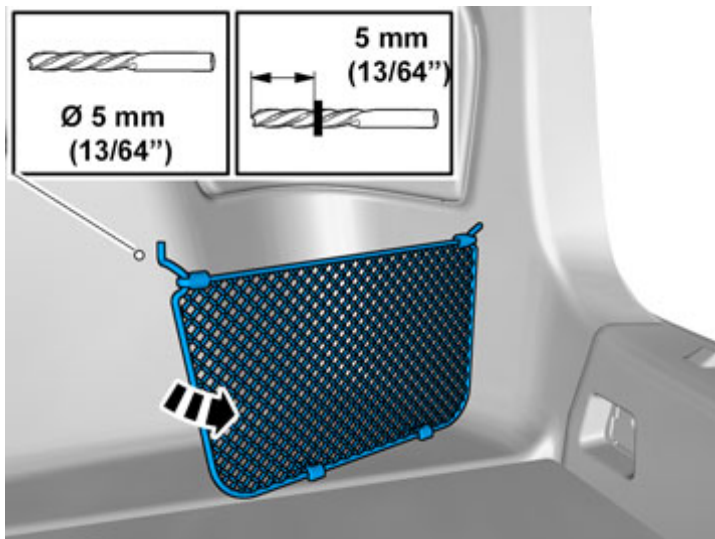


IMG-339773

Move the front mounting to one side and drill the hole.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


5

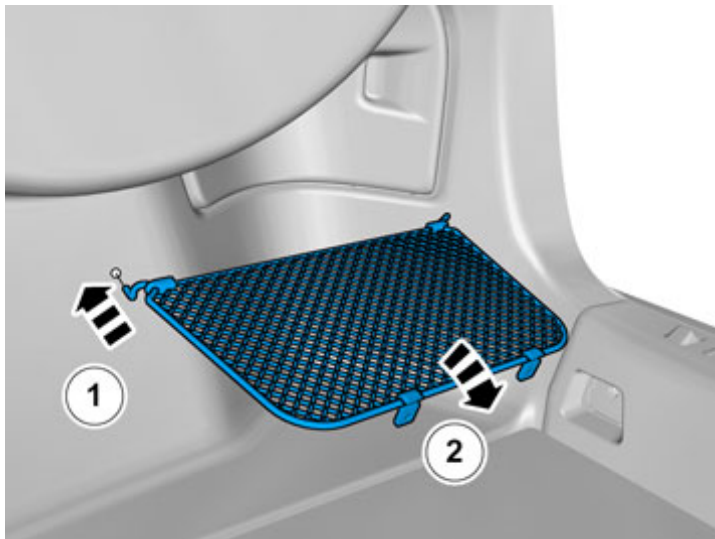

IMG-339774

Insert the front mounting in the panel and fold down the mesh pocket.

6

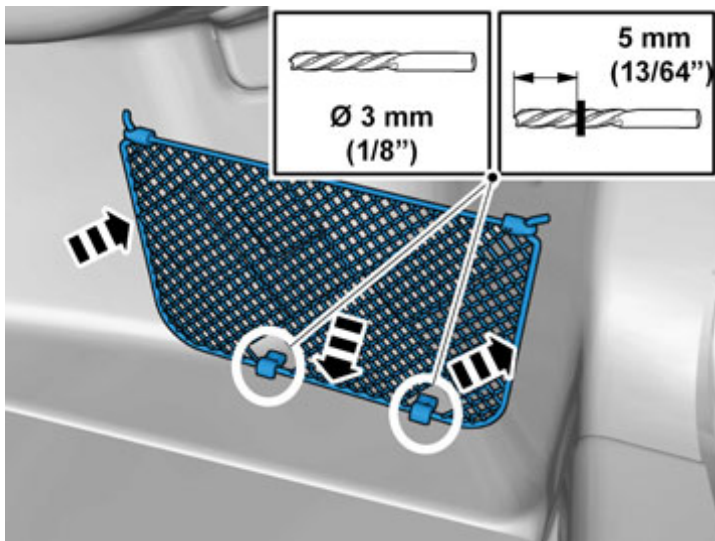


IMG-339775

Drill out the holes in the panel through the two clips.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


7

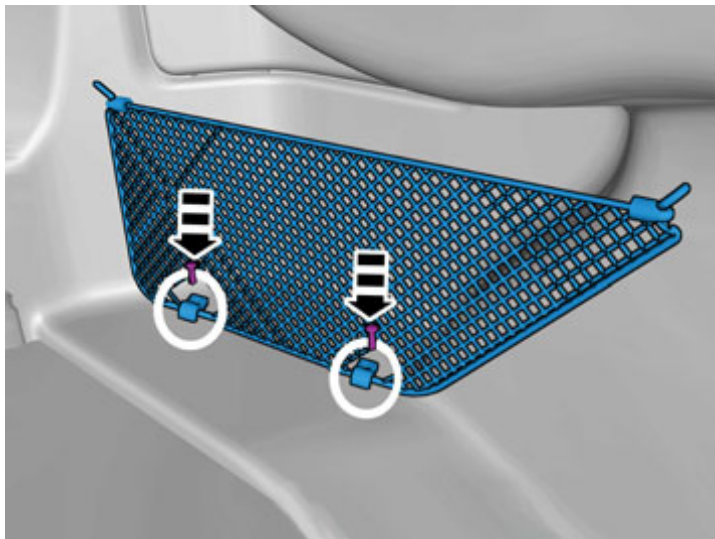

IMG-339842

Tighten the mesh pocket's lower end

8

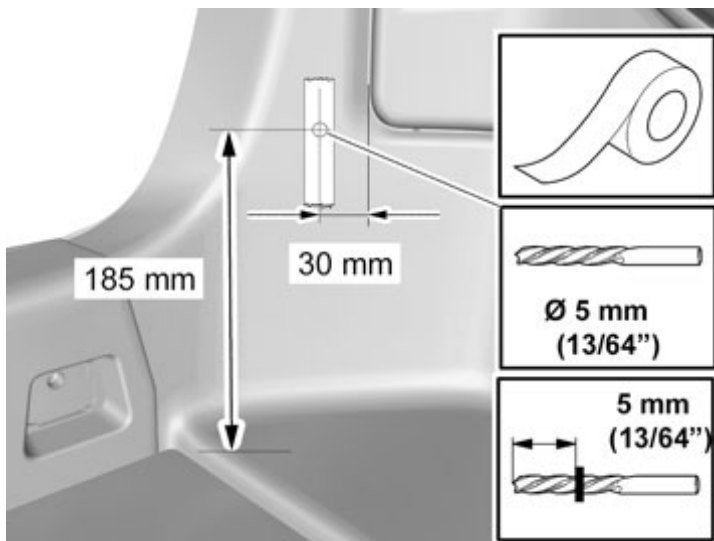

IMG-339781

## Mesh pocket left side

Apply the strips of tape as illustrated.


Make marks for drilling holes for the mesh pocket mountings.

Drill out the hole.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


9

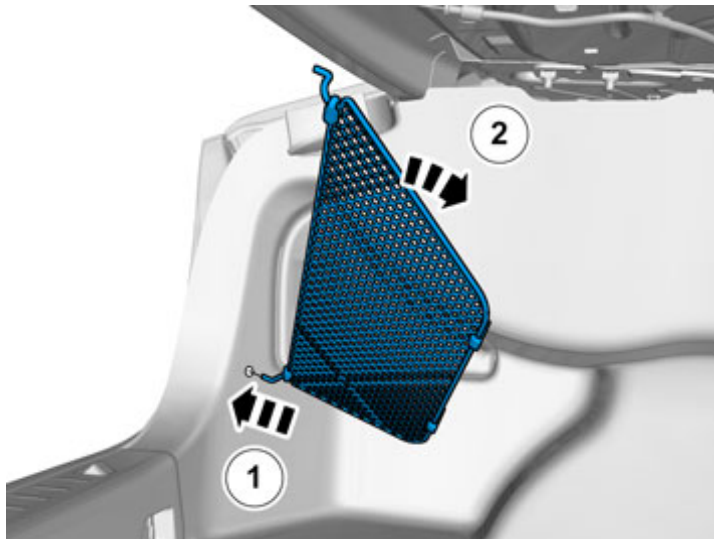

IMG-339784

Insert the rear mounting in the panel and fold down the mesh pocket.

10

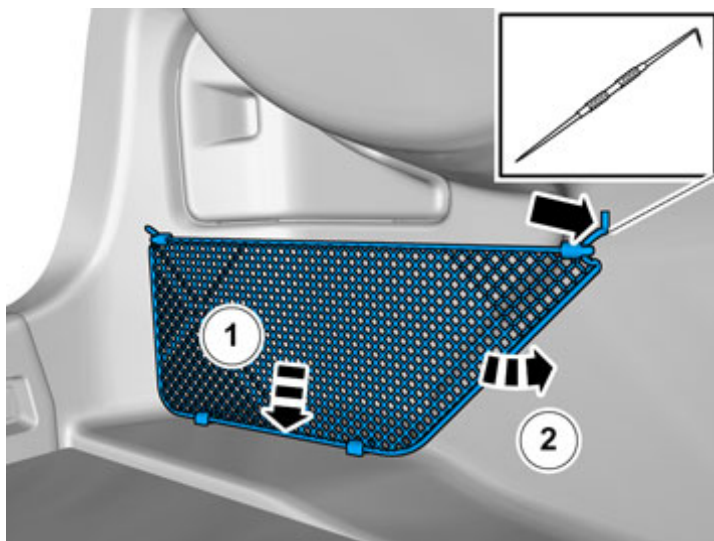

IMG-339783

Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.


Mark the hole in the panel level with the middle of the radius of the bent wire frame.



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


11

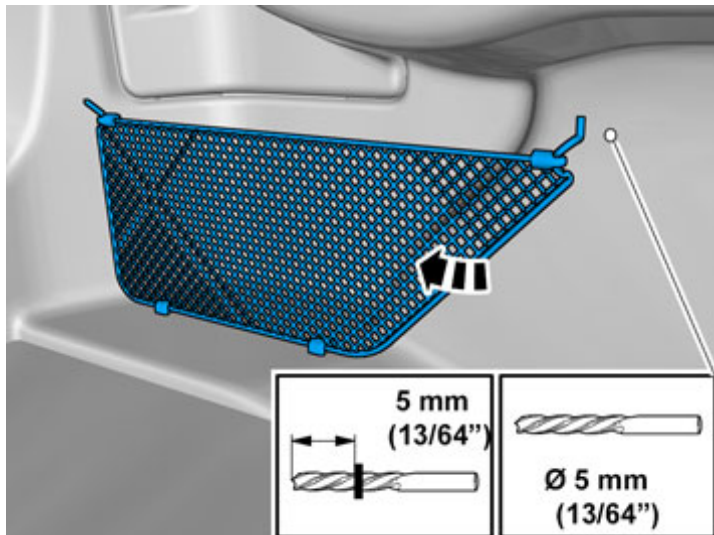

IMG-339779

Move the front mounting to one side and drill the hole.

12

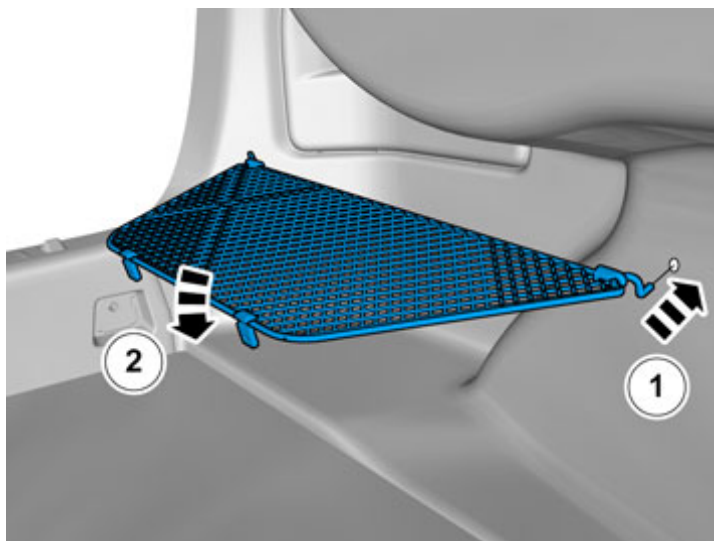


IMG-339782

Insert the front mounting in the panel and fold down the mesh pocket.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

13

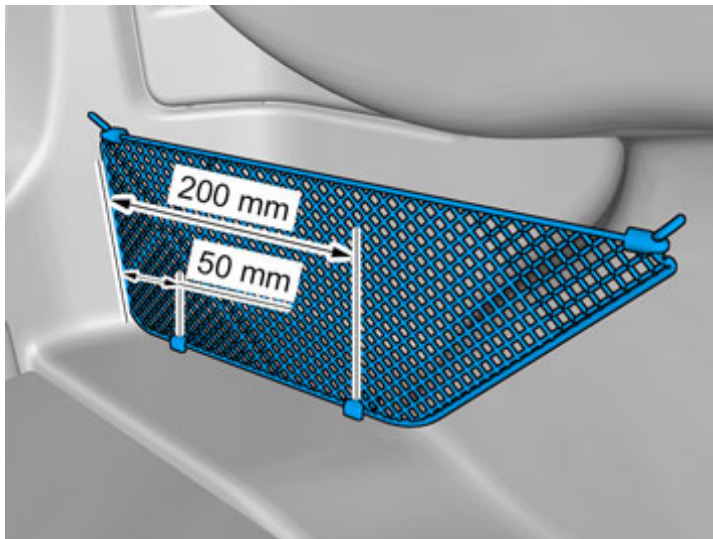


IMG-339805

**Applies to vehicles with control module for electric handbrake.**

Measure and place the clips in the wire frame. Measure between the rear edge panel and centre.

14

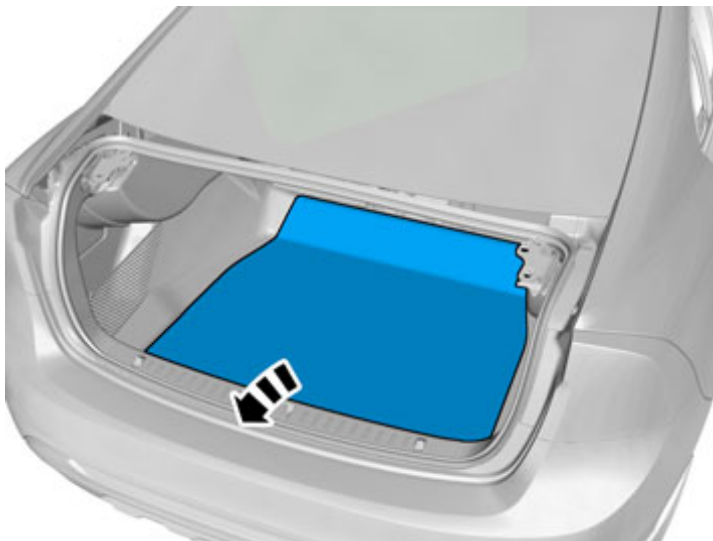


IMG-339804



# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

15

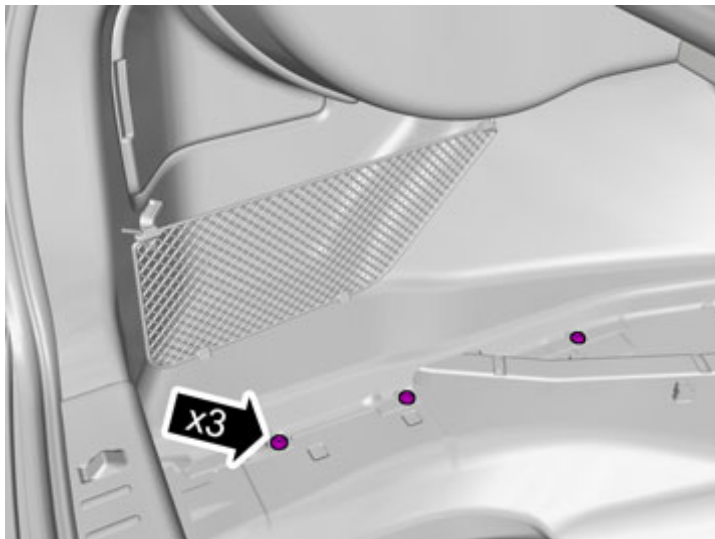

Remove the clips.

16

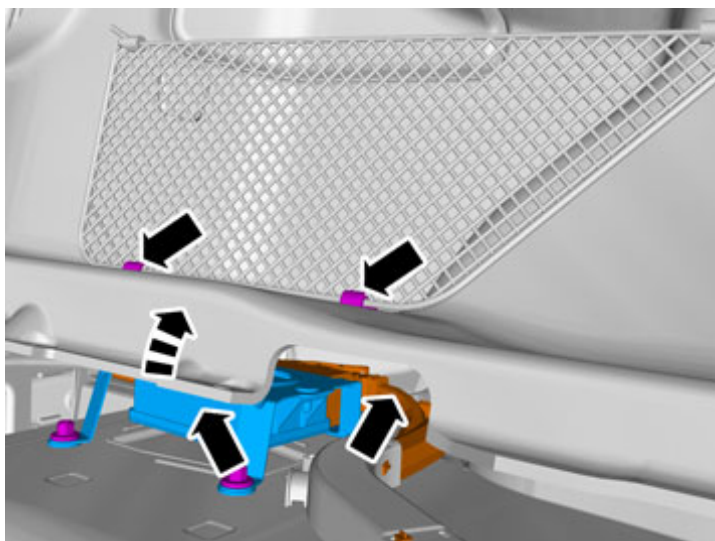


Lift up the panel and check that the clips are positioned so that the control module and cable harness are not drilled. Move the clips if necessary.

Reinstall the panel.

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

17

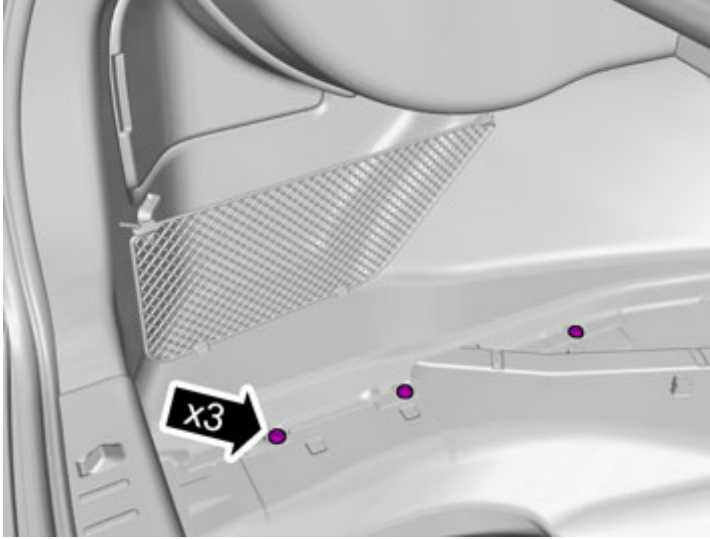

IMG-339802

18

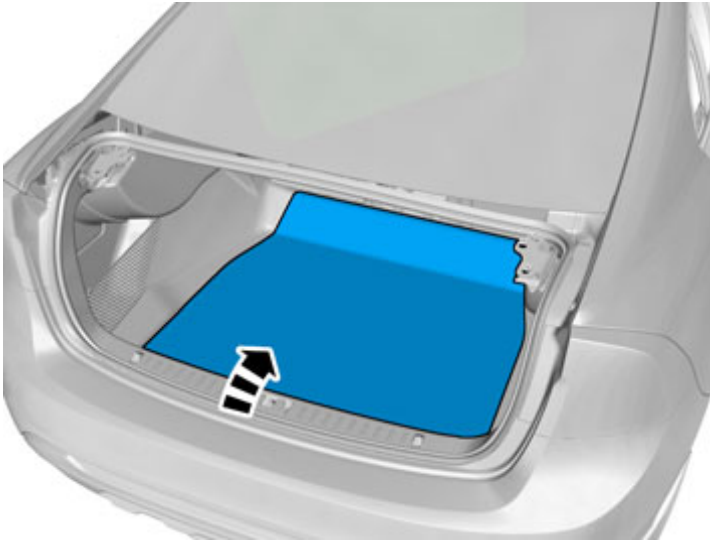


IMG-339803

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

19

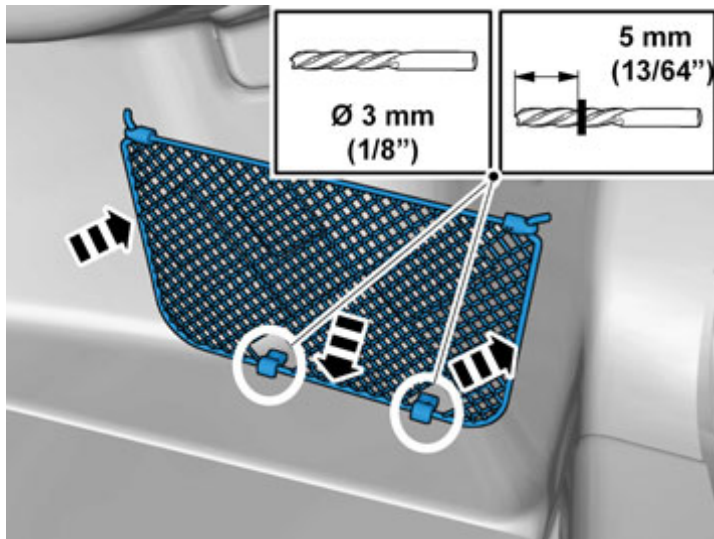


IMG-339775

**Applies to all models**

Drill out the holes in the panel through the two clips.

20

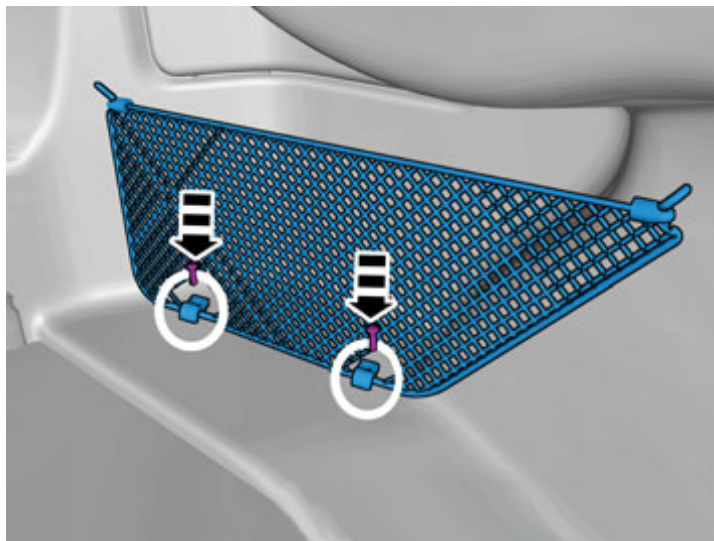

IMG-339842

Tighten the mesh pocket's lower end.