

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31439011 Version 1.0 Part. No. 31373976

# Sun curtain, rear doors

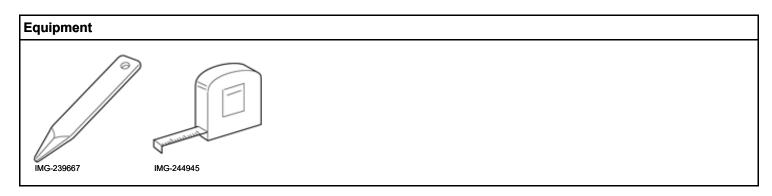


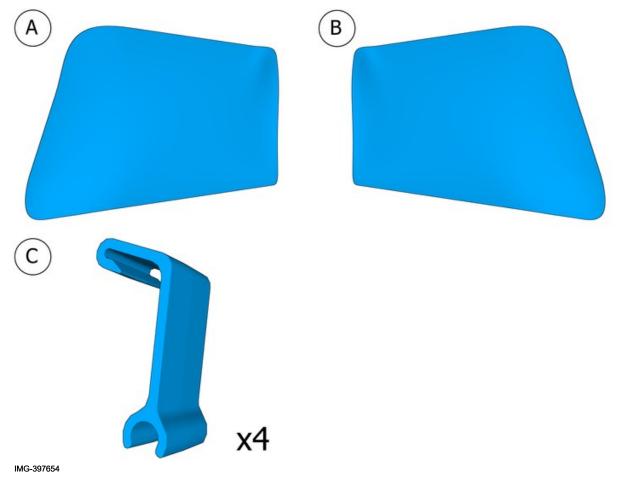

Volvo Car Corporation Gothenburg, Sweden

# Information Read through all of the instructions before starting installation. Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation. Ensure that all tools stated in the instructions are available before starting installation. Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps. In the event of any problems with the instructions or the accessory, contact your local Volvo dealer. Color symbols

2

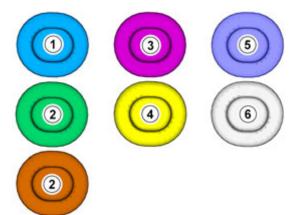


- 1. Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

IMG-363036


### **Accessory installation**

Volvo Car Corporation Gothenburg, Sweden

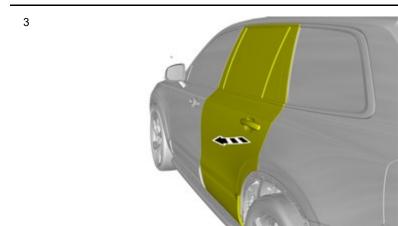


IMG-393190

4 Use: Interior trim remover

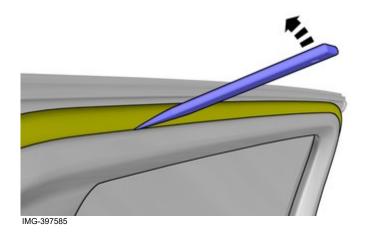


Volvo Car Corporation Gothenburg, Sweden

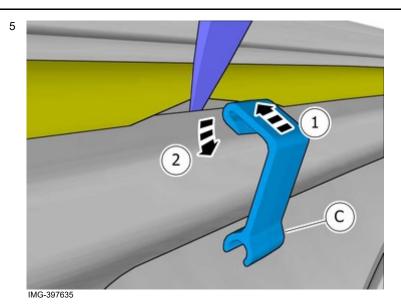


Install component that comes with the accessory kit.

6

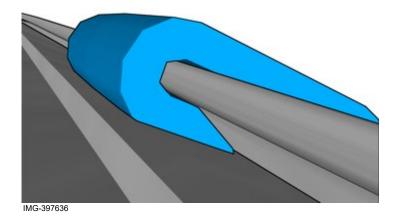


Volvo Car Corporation Gothenburg, Sweden


7 Use: Interior trim remover

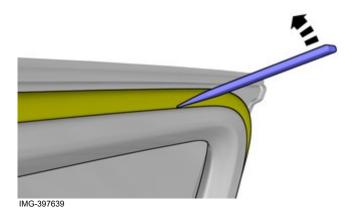




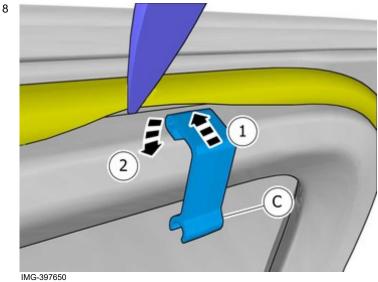

Volvo Car Corporation Gothenburg, Sweden

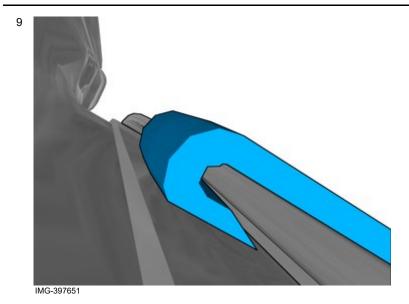



10

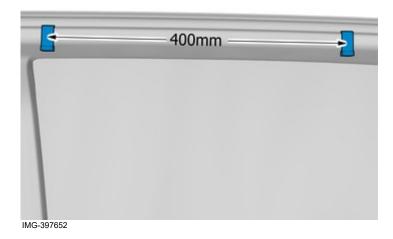

© Volvo Car Corporation

Volvo Car Corporation Gothenburg, Sweden

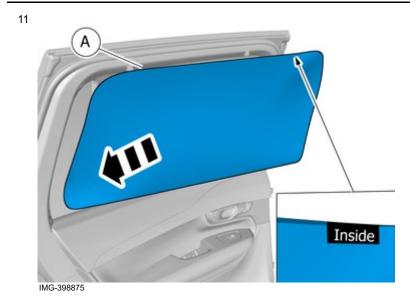

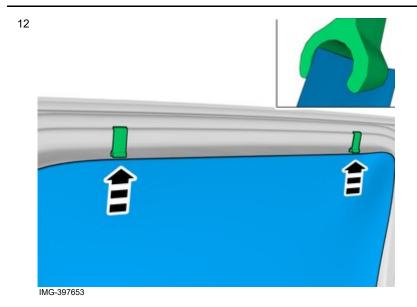

Install component that comes with the accessory kit.

Repeat the steps when installing accessories on opposite side.

13