

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No

31428887


Version

1.0

Part. No.


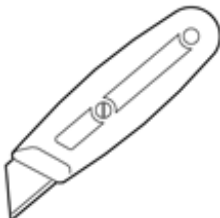
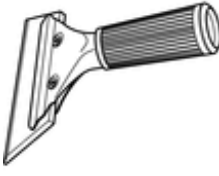


31428887, 31428886
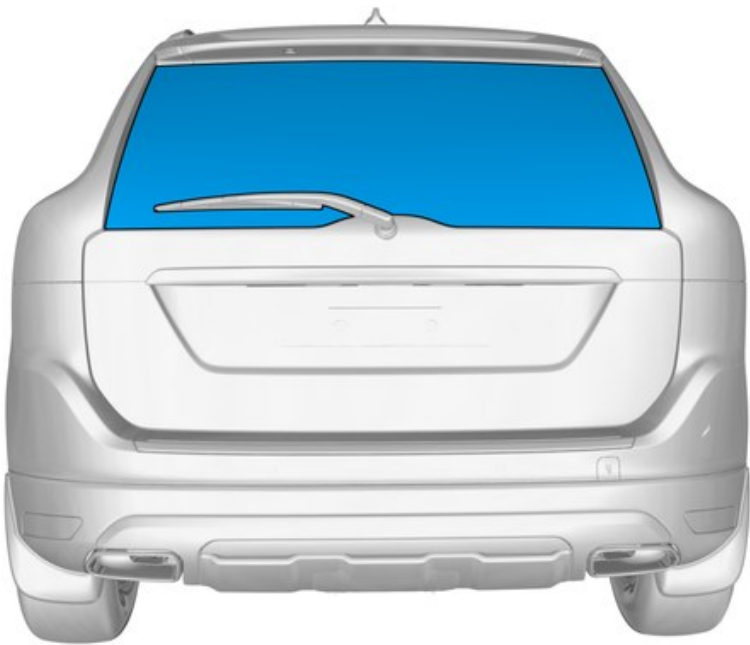
## Sun shield



IMG-390803

Materials	
Designation	Part number
soap solution	

Equipment				
				
IMG-239663	IMG-239980	IMG-391037	IMG-391040	IMG-391041

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

IMG-392105

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

## Information

- 
- |   |   |
|---|---|
| 1 | <p>Read through all of the instructions before starting installation.</p> <p>Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.</p> <p>Ensure that all tools stated in the instructions are available before starting installation.</p> <p>Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.</p> <p>In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.</p> |
|---|---|
- 

## Conditions

- 
- |   |   |
|---|---|
| 2 | <p>The surface must be free from damage.</p> <p>Use suitable protection for the vehicle interior.</p> <p>Only use the tools stated in the instruction.</p> <p>The work may only be performed by trained personnel and at an approved location for this type of work.</p> <p>The method shows how to handle a rear window but the method is a general instruction and applies to all vehicle windows</p> <p>Make sure that the workshop area in which the vehicle is being worked on is as clean and as dust free as possible.</p> |
|---|---|
- 

## Preparation



IMG-391070

---

## Accessory installation

---

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---


4

The step concerns the vehicle exterior.

---

5

**Use:** , soap solution

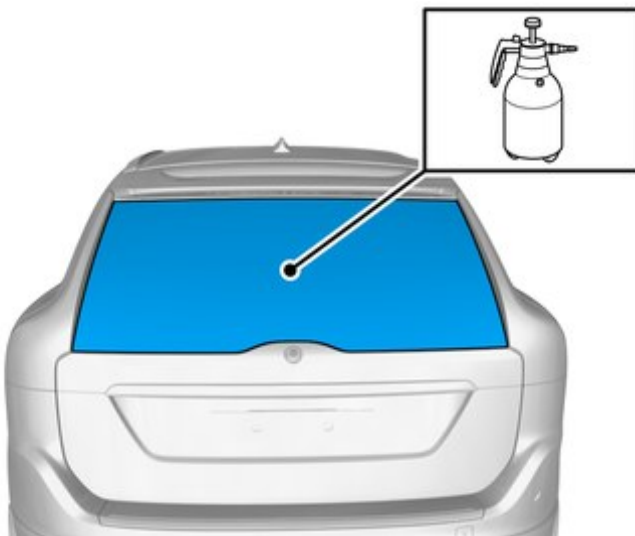


IMG-391045

---

6

Clean the surfaces.

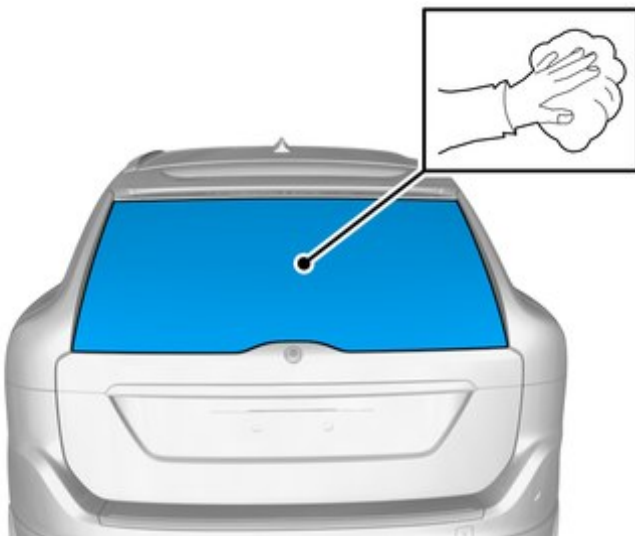


IMG-391047

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

7

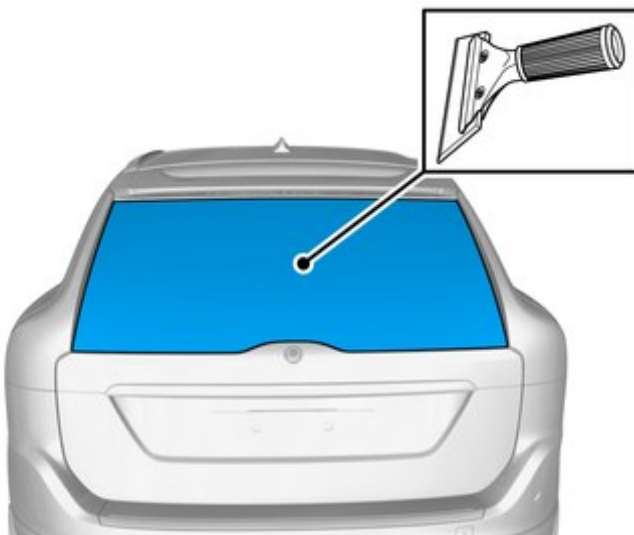


IMG-391050

Wipe dry.

**Check**

8

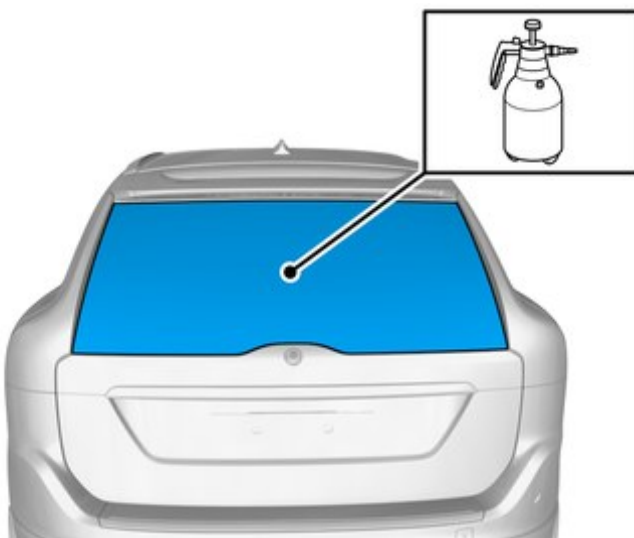


IMG-391045

**Use:** , soap solution

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

9

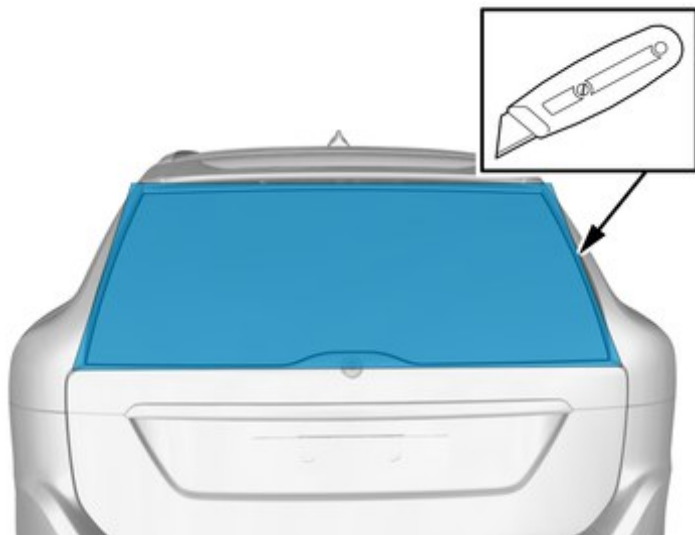


IMG-391065

Pre-cut. Make sure to cut the film leaving a couple of centimeters margin.

## Curved window glass

10

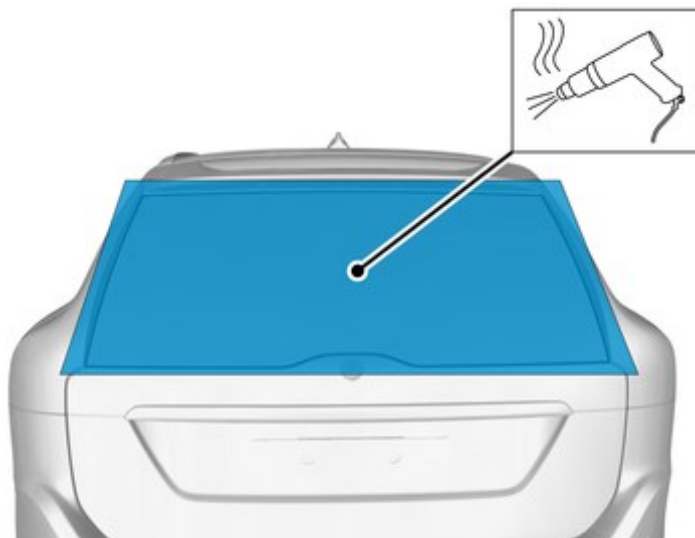

IMG-391067

Carry out the heat shrinking and shape the film.

Make sure not to leave any folds or creases.


**Use:** Hot-air gun

## All vehicles

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

11

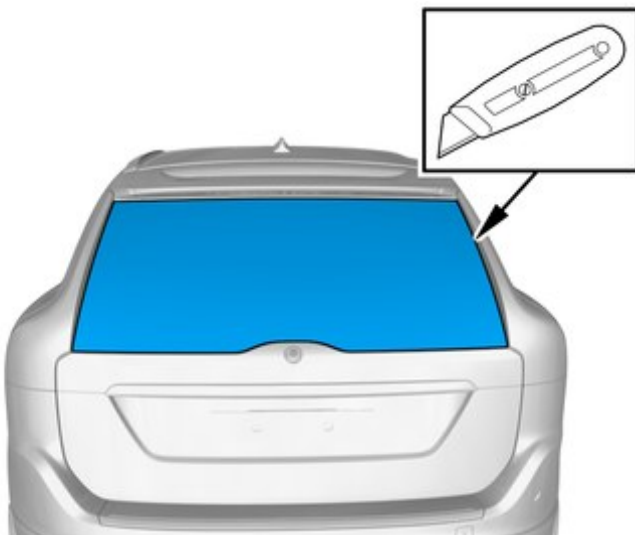

IMG-391069

## **Caution!**

Damage risk. Use a gentle hand while cutting so as to avoid scratching the glass.


## **Caution!**

Cut carefully to avoid unintentional damage or personal injury.

Final cut. Cut the film following the window height and width dimensions.

## **Orientation view**

12

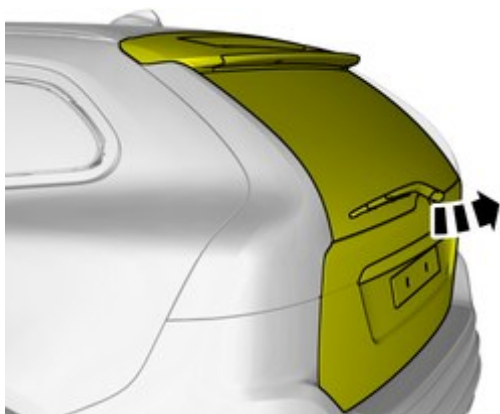


IMG-391071

## **Accessory installation**

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


13

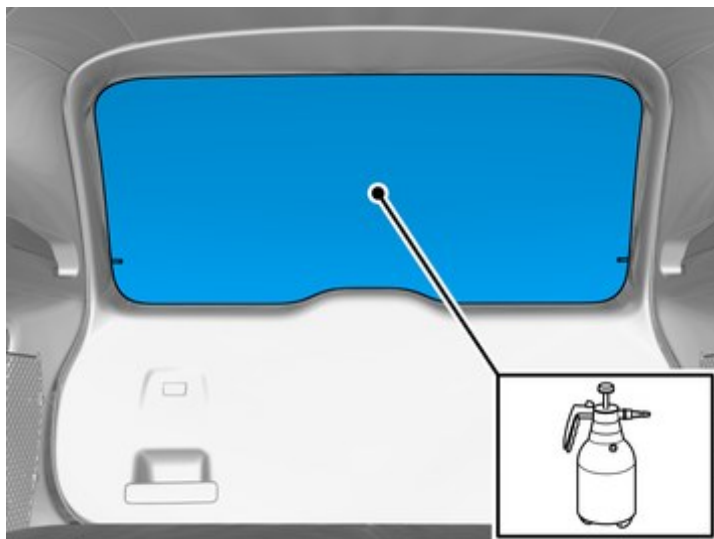

IMG-391123

**Use:** , soap solution

14

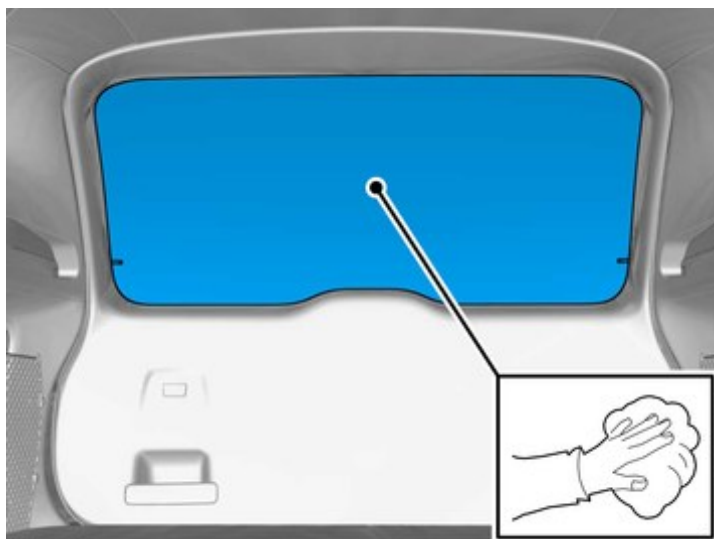

IMG-391233


Clean the surfaces.



# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


15

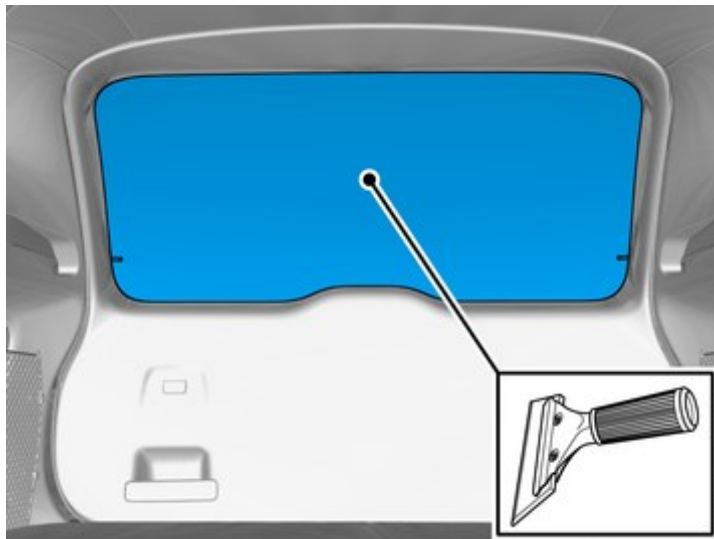

IMG-391231

Wipe dry.

16

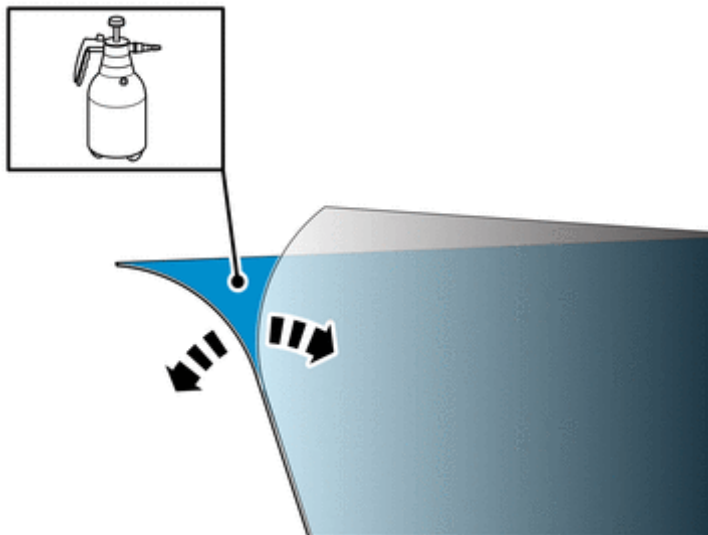

IMG-391068

To keep out the dust, apply solution on the film while removing the liner.


Save the liner for later use.

**Use:** , soap solution

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


17

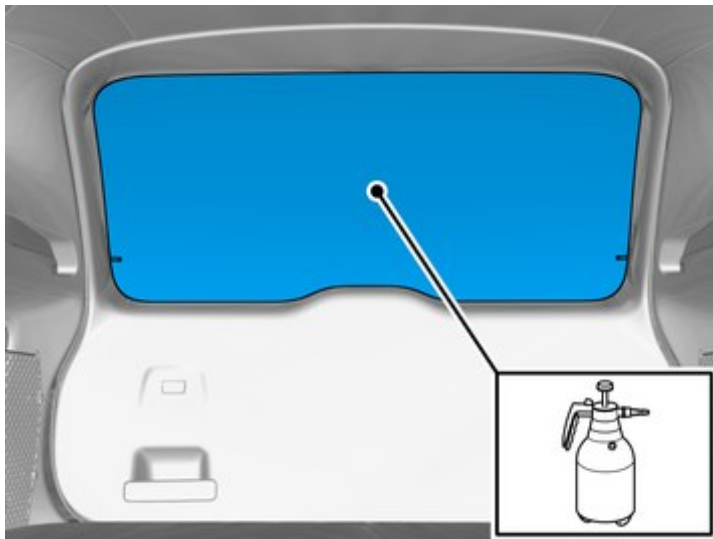

IMG-391123

**Use:** , soap solution

18

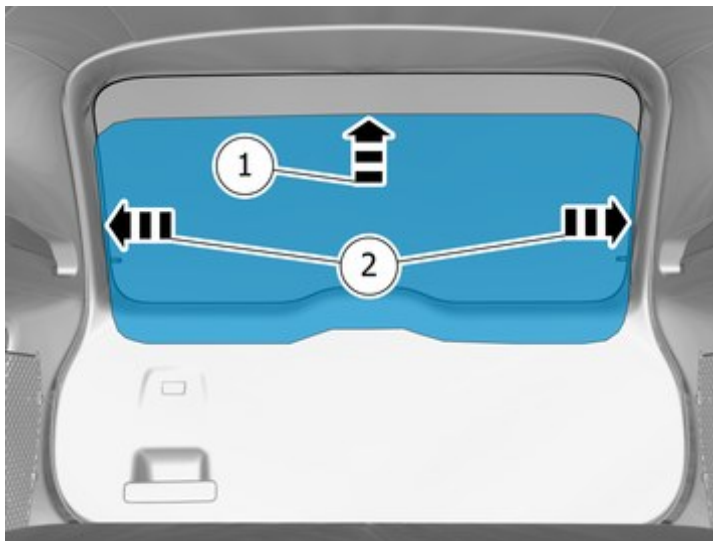


IMG-391140

Place the film on the glass window.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


19

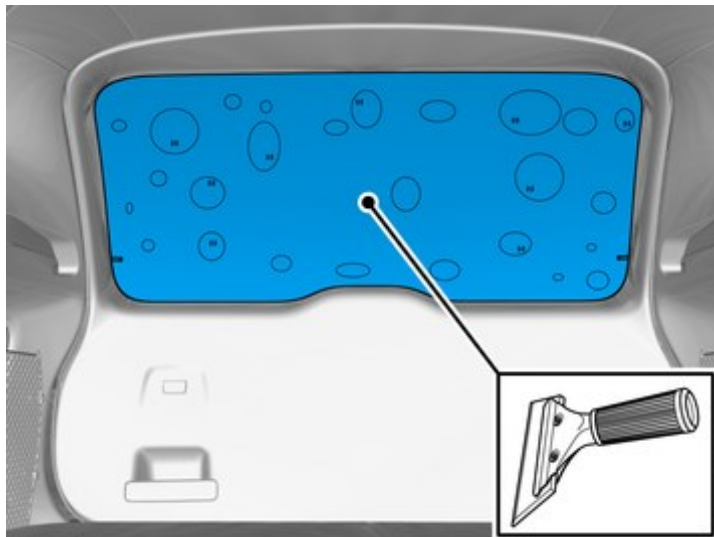

IMG-391174

Adjust the film into correct position on the window glass.

20

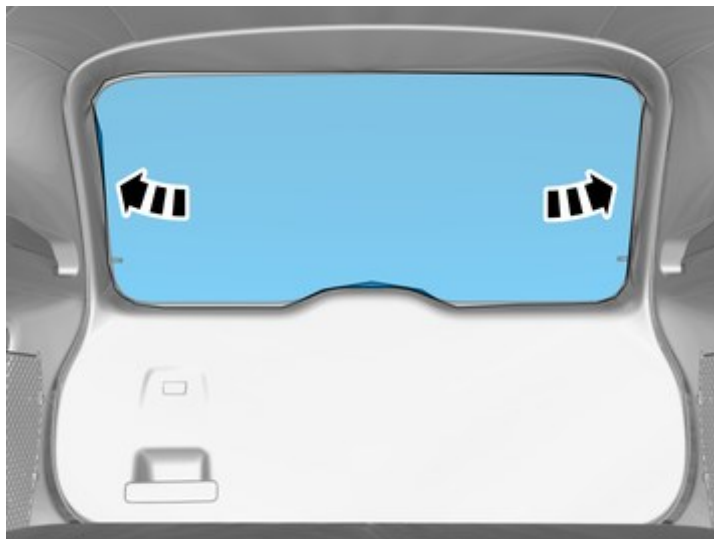


IMG-391253

Place the liner on the film.

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

21

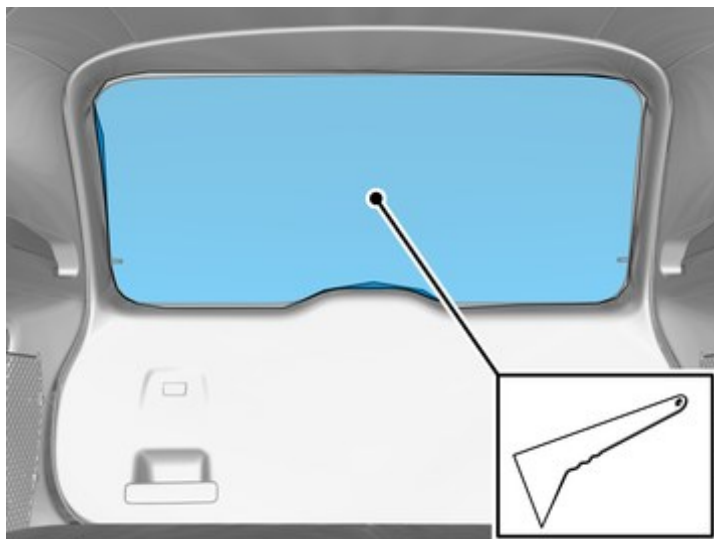

IMG-391251

Use the tool to remove air bubbles and water drops.

Make final adjustments of the film, using the hot-air gun.