


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

**Instruction No** 31266687    **Version** 1.2    **Part. No.** 8637377

## Trip computer

### Equipment

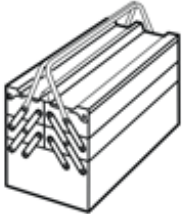

A0000162



A0801178

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:

Issue:

Kit no:

Comments:.....

From:

Address:

Telephone:

Telefax:

MG-213320

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

---

## INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

---


1

Turn the ignition key to position 0

Move the steering wheel to its rearmost position.

---

2

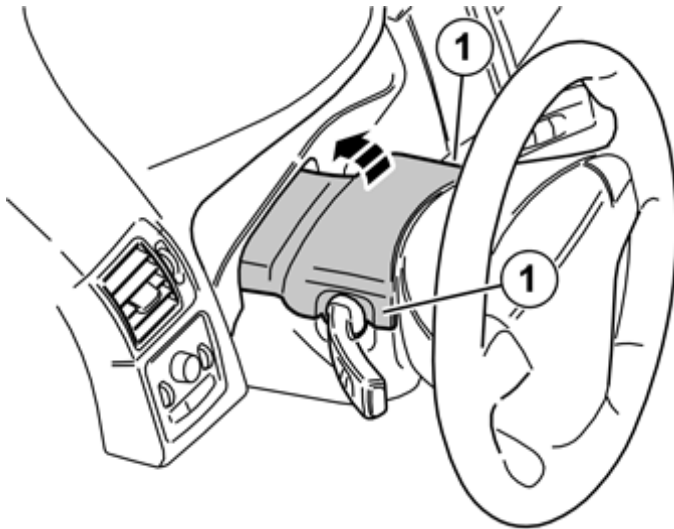

Carefully pry the upper steering column cover off the lower cover. Using a plastic weatherstrip tool, pry at the rear edge in the join between the steering column covers. The steering column covers are secured to each other by catches (1) on the inside

Fold the upper steering column cover towards the combined instrument panel. Secure it in the folded up position.


---

J8504703

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

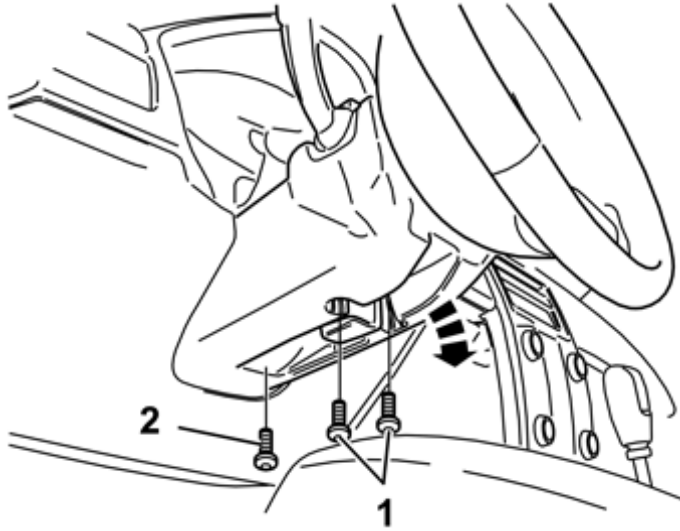


J8504704

Remove the upper screws (1) from the lower steering column cover

Unscrew the lower screw (2) a few turns

Fold the lower steering column cover down slightly, so that the mounting point for the left-hand control stalk is exposed.

4

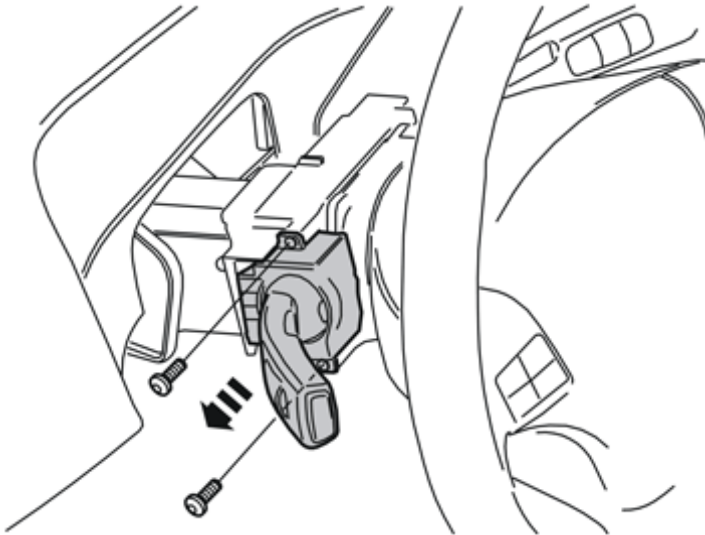

J3904663

Remove the left-hand control stalk. First remove the two screws. Then carefully pull the stalk outwards until it releases from the connector on the inside.

5

Press the new stalk into place where the old one was positioned. Tighten the stalk using the existing screws

Reinstall the lower steering column cover. Tighten

Reinstall the upper steering column cover.

6

Program the function using VCT2000 in VIDA.