


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No **Version** **Part. No.**
31254629 1.0


Combined instrument panel, R-design

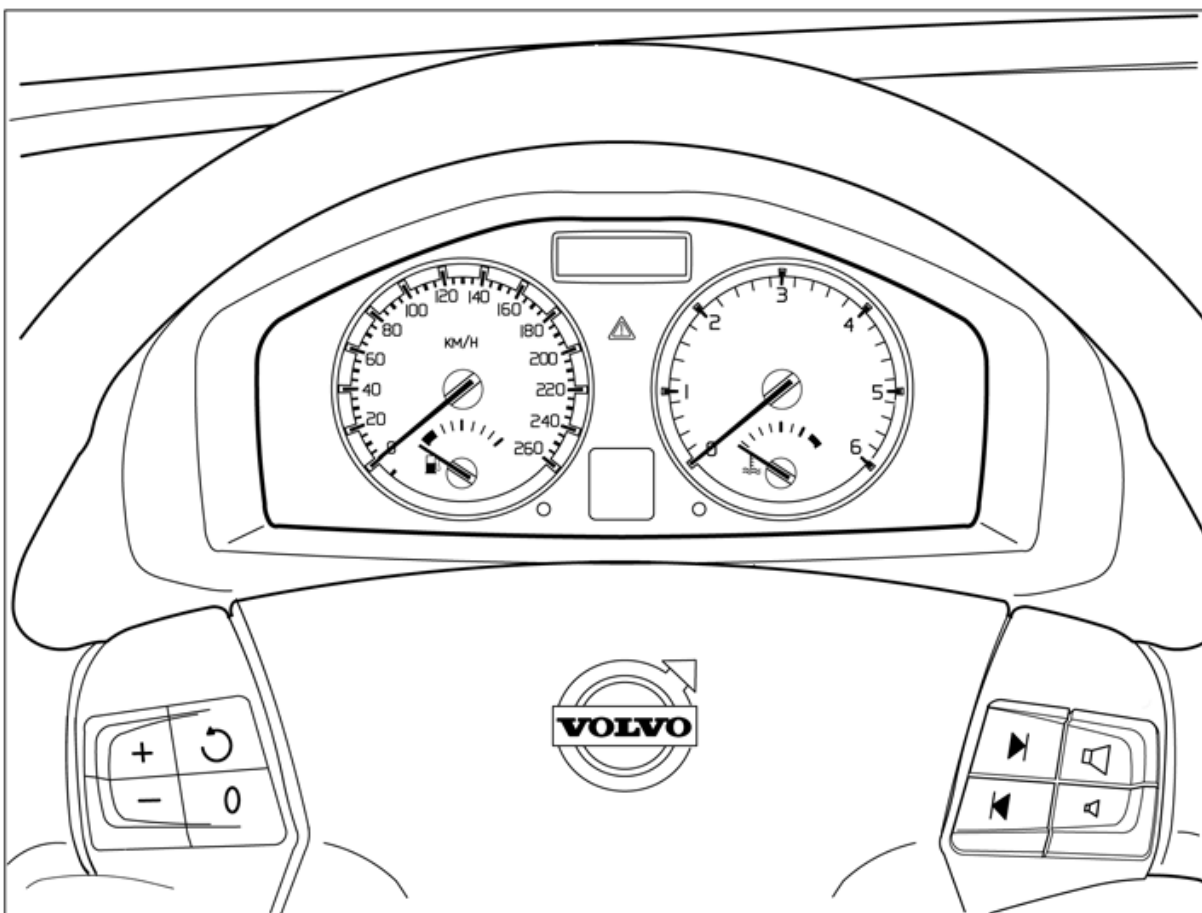

IMG-276928

Equipment

VIDA

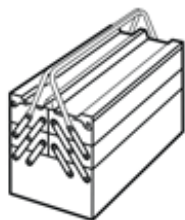


IMG-275777

A0000162

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

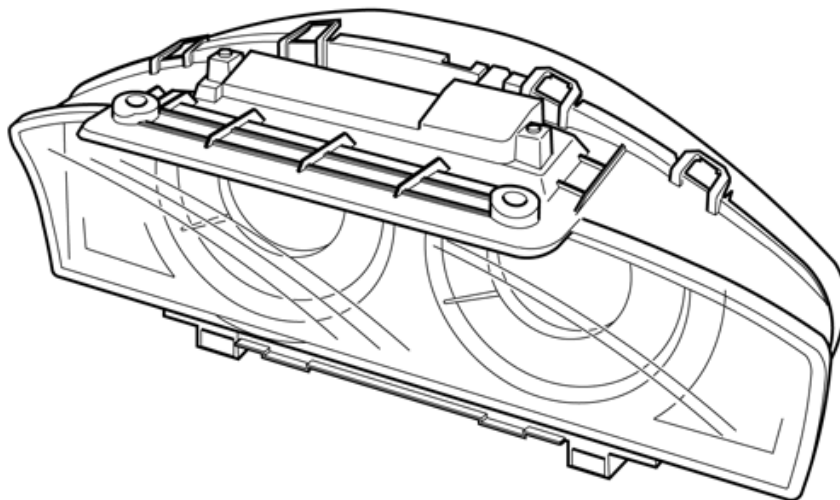

IMG-276927

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Any comments on this publication? Please contact your nearest retailer. Thank You!

Publ.no:	Issue:	Kit no:
Comments:.....		
.....		
.....		
.....		

From:	
Address:	
Telephone:	
Telefax:	


IMG-213320

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Combined instrument panel, R-design

1

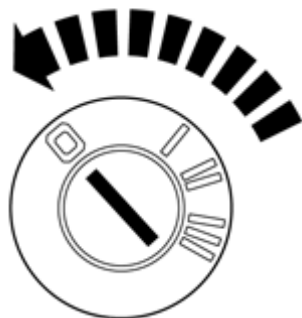


Turn the ignition switch to position 0.

Note!

Wait at least three minutes before unplugging the connectors or removing other electrical equipment.

IMG-245980

2

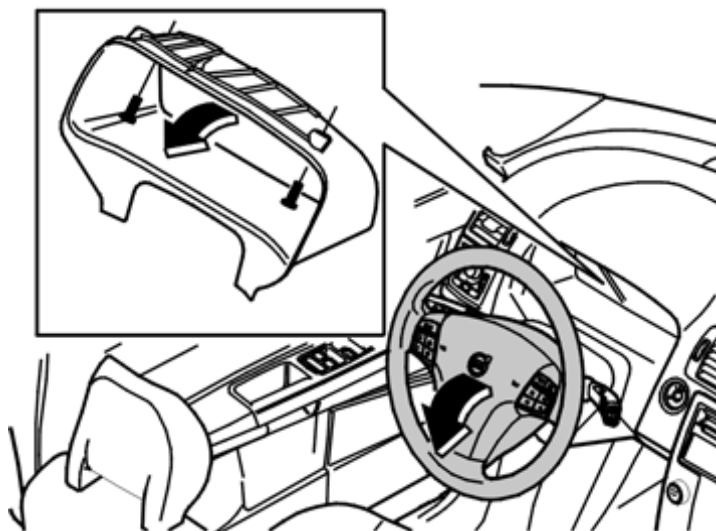

J3801067

Adjust the steering wheel to the outermost and lowermost position.


Remove the two screws at the upper edge of the surround for the combined instrument panel.

Remove the surround.

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

3

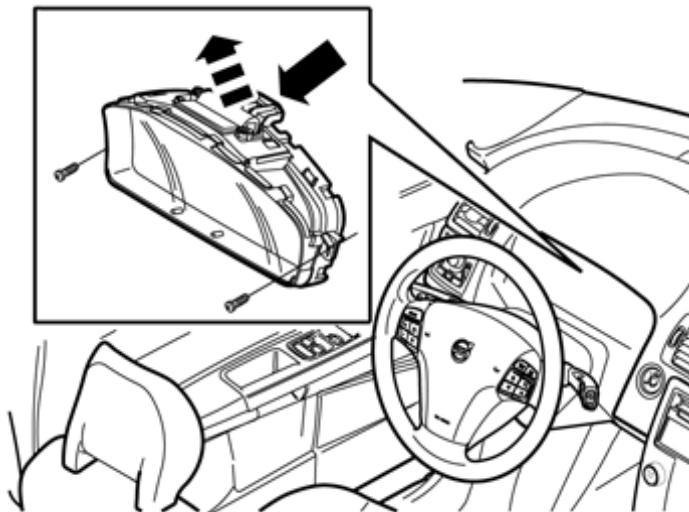

IMG-276929

Remove the two screws at the sides of the instrument panel.

Raise it slightly and unhook it from the holder on the inside of the instrument panel.


Lift the instrument panel out and disconnect the connector.

Note!

Do not damage the instrument panel. The glass is easily scratched.

Place the instrument panel to one side.

4

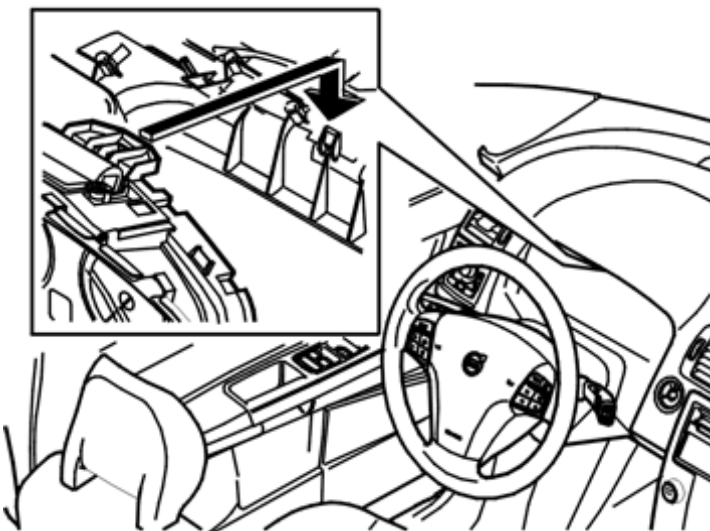

J3801075

Take the new instrument panel and connect the connector.


Insert it in position and hook it onto the holder on the inside.

Tighten using the two screws.

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

5

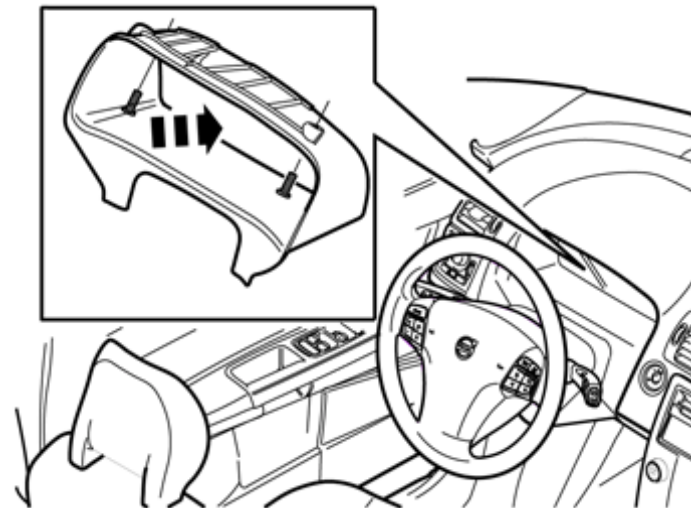

IMG-276930

6

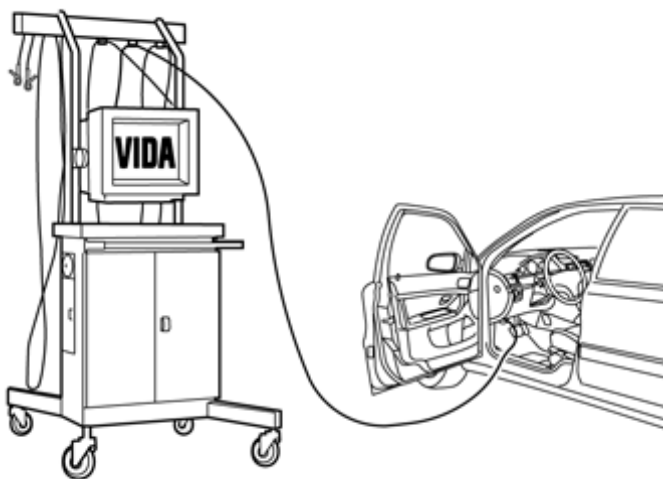

IMG-242268

Download software for the relevant vehicle type in accordance with the service information in VIDA.